


JVC

SERVICE MANUAL

VIDEO CASSETTE RECORDER

HR-J672EU/J673EU

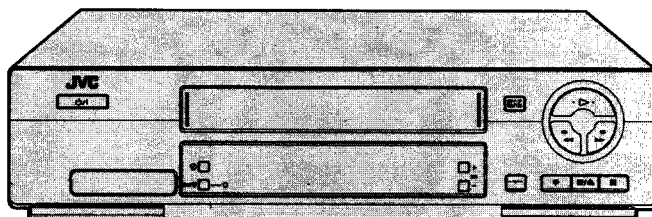

SHOWVIEW[®]
DELUXE

Hi-Fi **VHS**
PAL

Regarding service information other than these sections, refer to the HR-J670EU service manual (No. 82784). Also, be sure to note important safety precautions provided in the service manual.

SPECIFICATIONS *(The specifications shown pertain specifically to the model HR-J670EU/J672EU/673EU/J470EU/J472EU/J270EU/J272EU)*

GENERAL

Power requirement : AC 220 – 240 V~, 50/60 Hz
Power consumption
[HR-J670/672/673EU]
Power on : 19 W
Power off : 4.9 W
[HR-J470/472/270/272EU]
Power on : 17 W
Power off : 4.9 W
Temperature
Operating : 5°C to 40°C
Storage : -20°C to 60°C
Operating position : Horizontal only
Dimensions (WxHxD) : 400 x 94 x 278 mm
Weight : 3.5 kg
Format : VHS PAL standard
Maximum recording time
(SP) : 240 min. with E-240 video cassette
(LP) [HR-J670/672/673/470/472EU only]
: 480 min. with E-240 video cassette

VIDEO/AUDIO

Signal system : PAL-type colour signal and CCIR monochrome signal, 625 lines 50 fields
Recording system : DA4 (Double Azimuth) head helical scan system [HR-J670/672/673/470/472EU]
Rotary two-head helical scan system [HR-J270/272EU]
Signal-to-noise ratio : 45 dB
Horizontal resolution : 250 lines

Frequency range : 70 Hz to 10,000 Hz (Normal audio)
20 Hz to 20,000 Hz (Hi-Fi audio)
[HR-J670/672/673EU only]
Input/Output : 21-pin SCART connectors :
IN/OUT x 1, IN/DECODER x 1
RCA connectors: AUDIO OUT x 1
[HR-J670/672/673EU only]

TUNER/TIMER

TV channel storage capacity : 99 positions (+AUX position)
Tuning system : Frequency synthesized tuner
Channel coverage : VHF 47 – 89/104 – 300/302 – 470MHz
UHF 470 – 862MHz
Aerial output : UHF channels 22 – 69 (Adjustable)
Memory backup time : Approx. 10 min.

ACCESSORIES

Provided accessories : RF cable,
Infrared remote control unit,
"R6" battery x 2
Optional accessories : Satellite Controller RM-SD1

*Specifications shown are for SP mode unless otherwise specified.
E. & O.E. Design and specifications subject to change without notice.*

TABLE OF CONTENTS

DIFFERENT TABLE	1
4. CHARTS AND DIAGRAMS (4-1 to 4-3)	
4.1 DEMODULATOR CIRCUIT BOARD	4-1
4.2 DEMODULATOR SCHEMATIC DIAGRAM	4-2
5. PARTS LIST (5-1 only)	
5.1 ELECTRICAL PARTS LIST	5-1
DEMODULATOR BOARD ASSEMBLY <14>	5-1

The following table indicate main different points between models HR-J670EU, HR-J672EU and HR-J673EU.

ITEM	MODEL	HR-J670EU	HR-J672EU	HR-J673EU
FRONT PANEL COLOR		SILVER	BLACK	SILVER

The following table indicate different parts number between models HR-J670EU, HR-J672EU and HR-J673EU.

PACKING AND ACCESSORY ASSEMBLY <M1>

REF. NO.	ITEM	MODEL	HR-J670EU	HR-J672EU	HR-J673EU
306	REMOTE CONTROLLER		LP20878-002A	LP20878-003A	LP20878-002A
306A	COVER(BATTERY)		LP40610-002A	LP40610-001A	LP40610-002A

CABINET AND CHASSIS ASSEMBLY <M2>

REF. NO.	ITEM	MODEL	HR-J670EU	HR-J672EU	HR-J673EU
501	FRONT PANEL ASSY		LP10289-003D	LP10289-026C	LP10289-027B
501A	CASSETTE DOOR		LP20868-002A	LP20868-004A	LP20868-010A
501C	DISPLAY WINDOW		LP20869-003A	LP20869-033A	LP20869-034A
502	TOP COVER		LP10013-017C	LP10013-023C	LP10013-017C


DEMODULATOR BOARD ASSEMBLY <14>

REF. NO.	ITEM	MODEL	HR-J670EU	HR-J672EU	HR-J673EU
PW1	DEMOMULATOR BOARD ASSY		*LPA10094-02A	←	←

Notes : Mark ← is same as left.
Mark * HR-J670EU was also change.

SECTION 4 CHARTS AND DIAGRAMS


4.1 DEMODULATOR CIRCUIT BOARD

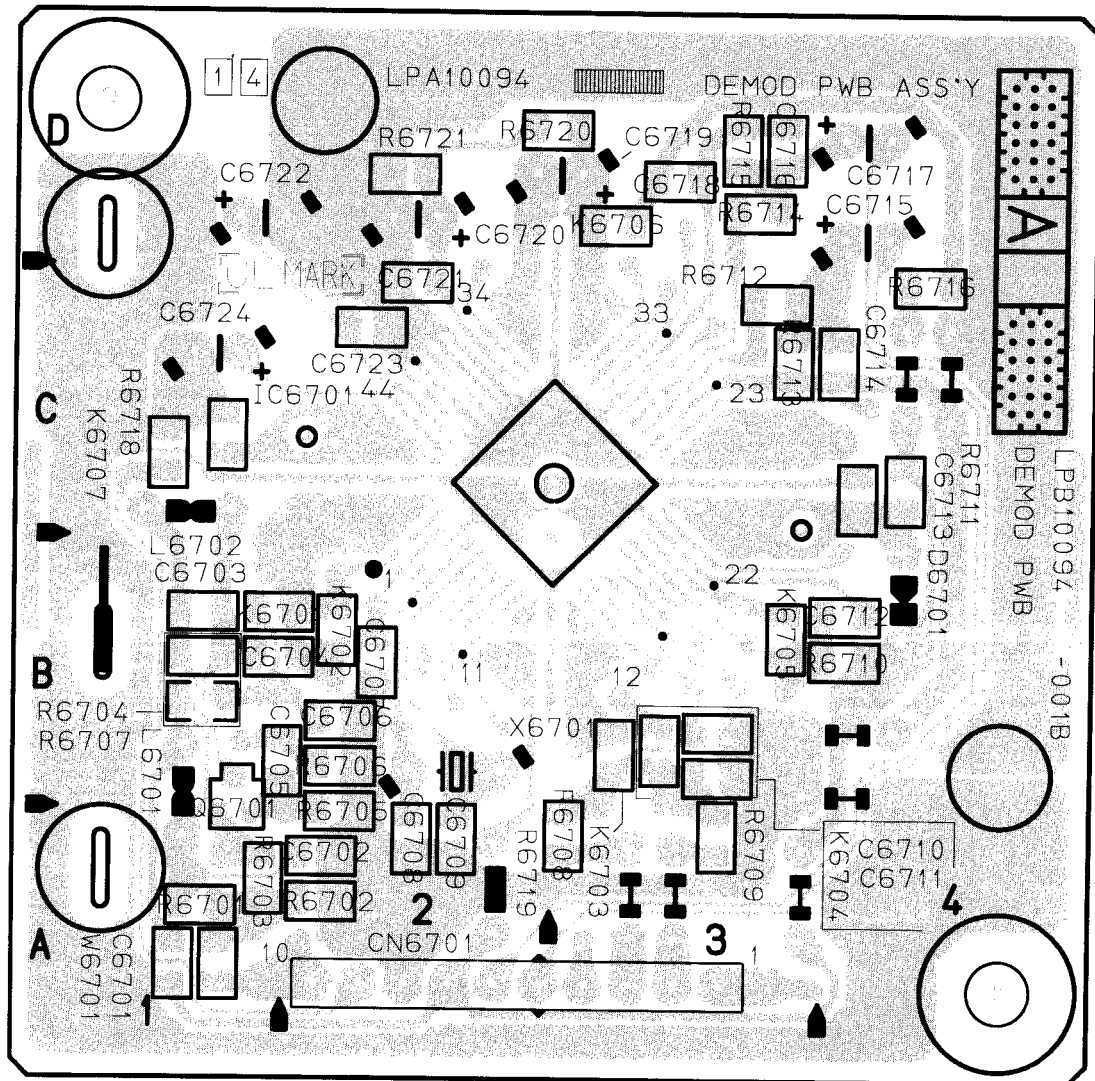

COMPONENT PARTS LOCATION GUIDE <DEMOMULATOR>

REF.NO.	LOCATION			REF.NO.	LOCATION			REF.NO.	LOCATION			REF.NO.	LOCATION							
CAPACITOR				C6720	A	D	2D	TRANSISTOR				R6716	B	C	4C					
C6701	B	C	1A	C6721	B	C	2C	Q6701	B	C	1B	R6718	B	C	1C					
C6702	B	C	2A	C6722	A	D	1D					R6719	A	D	2A					
C6703	B	C	1B	C6723	B	C	2C	RESISTOR				R6720	B	C	3D					
C6704	B	C	1B	C6724	A	D	1C	R6701	B	C	1A	OTHER	K6701	B	C	1B				
C6705	B	C	2B	CONNECTOR				R6702	B	C	2A						K6702	B	C	2B
C6706	B	C	2B	CN6701	A	D	3A	R6703	B	C	1A						K6703	B	C	3B
C6707	B	C	2B	DIODE				R6704	B	C	1B						K6704	B	C	3B
C6708	B	C	2A	D6701	A	D	4B	R6705	B	C	2A						K6705	B	C	3B
C6709	B	C	2A					R6706	B	C	2B						K6706	B	C	3D
C6710	B	C	3B					R6707	B	C	1B						K6707	B	C	1C
C6711	B	C	3B	IC				R6708	B	C	3A						X6701	A	D	2B
C6712	B	C	4B	IC6701	B	C	3C	R6709	B	C	3A									
C6713	B	C	4C	COIL				R6710	B	C	4B									
C6714	B	C	4C	L6701	A	D	1A	R6711	B	C	4C									
C6715	A	D	4D					L6702	A	D	1C	R6712	B	C	3C					
C6716	B	C	3D					R6713	B	C	3C									
C6717	A	D	4D	R6714	B	C	3D													
C6718	B	C	3D	R6715	B	C	3D													
C6719	A	D	3D																	

4.2 DEMODULATOR SCHEMATIC DIAGRAM

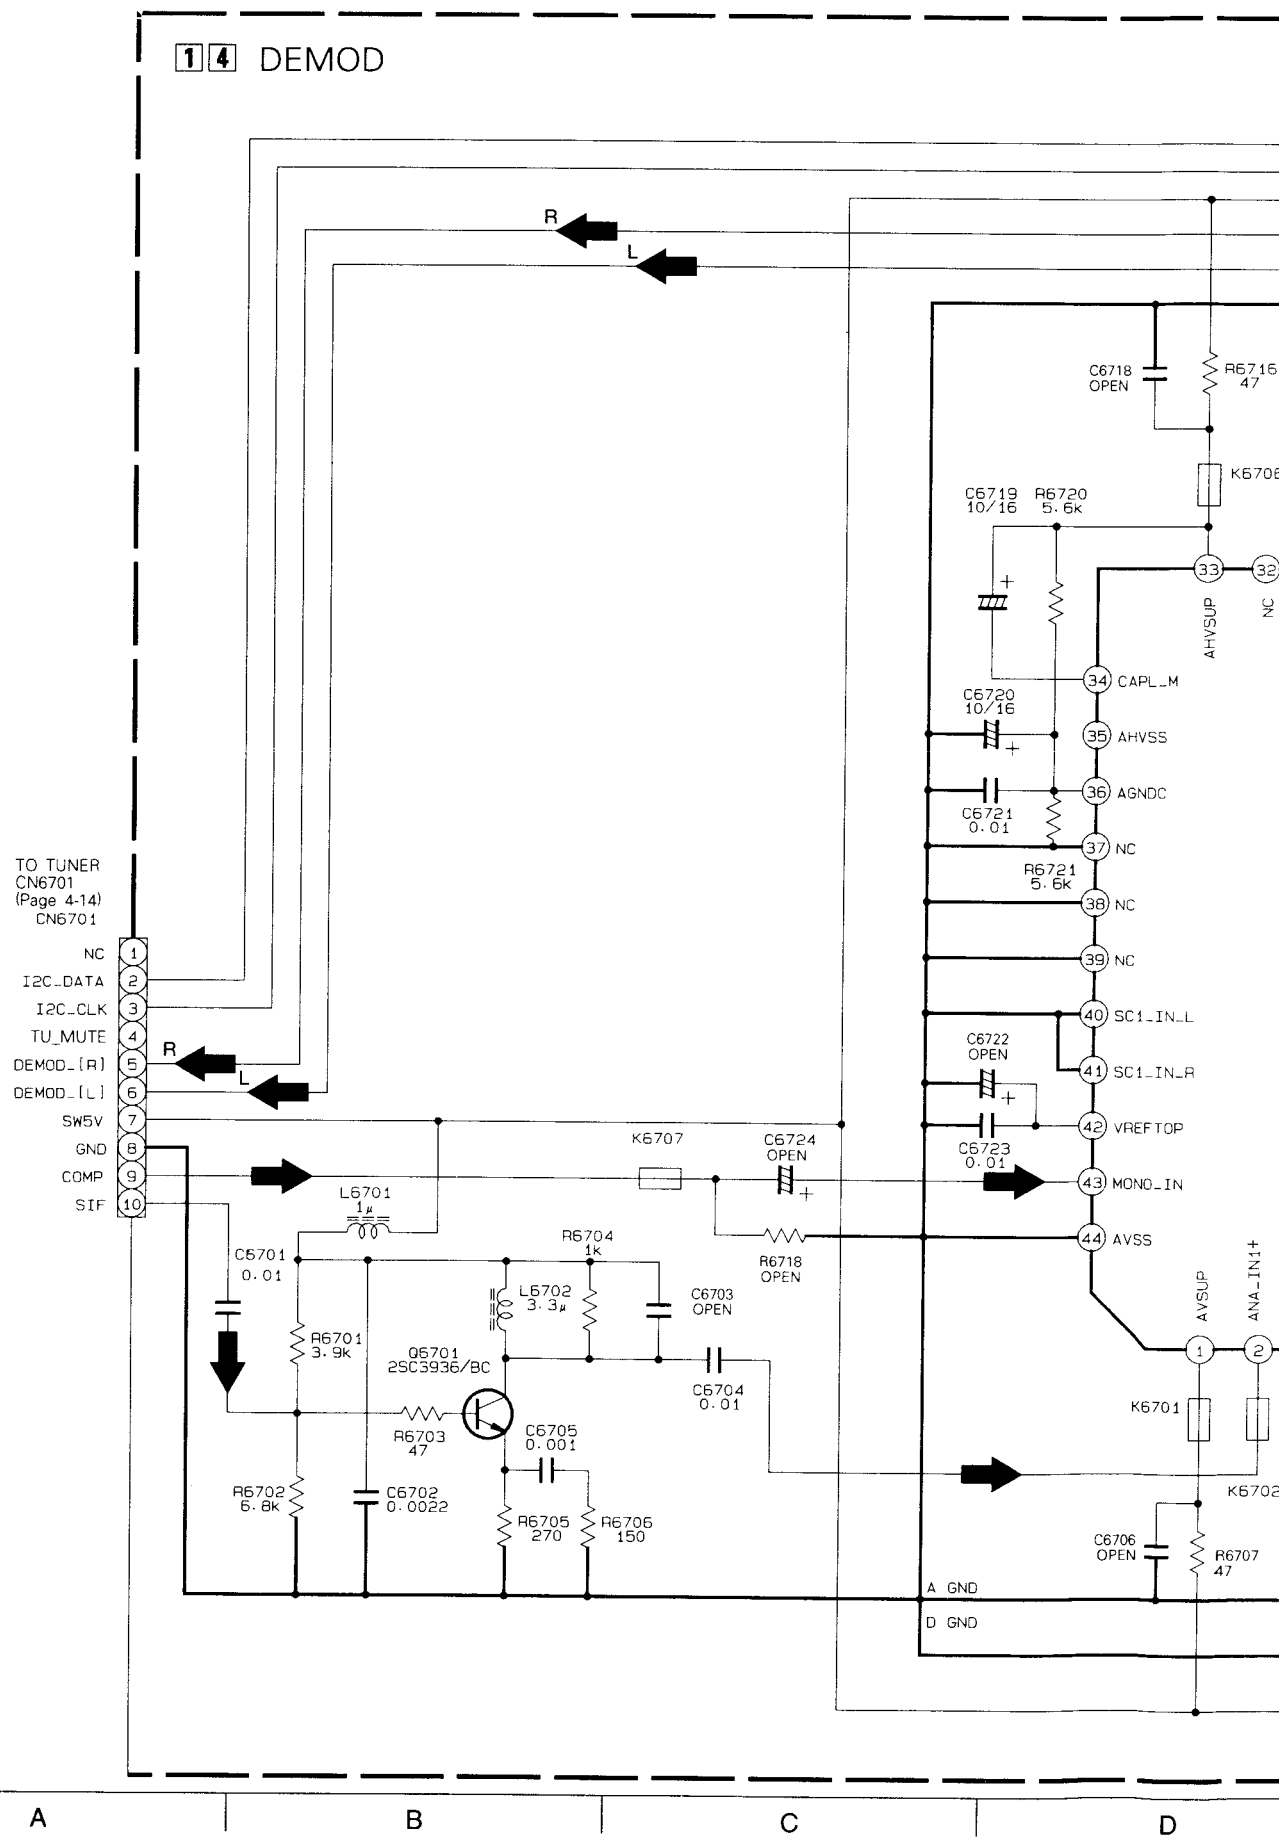


NOTE : How to find the page showing the continuative schematic diagram

Example) TO SYSCON (Page 4-✖): Refer to the HR-J670EU service manual (NO.82784)

TO SYSCON (Page 4-✖): Refer to this service manual

NOTE : When ordering parts, be sure to order according to the Part Number indicated in the Parts List.

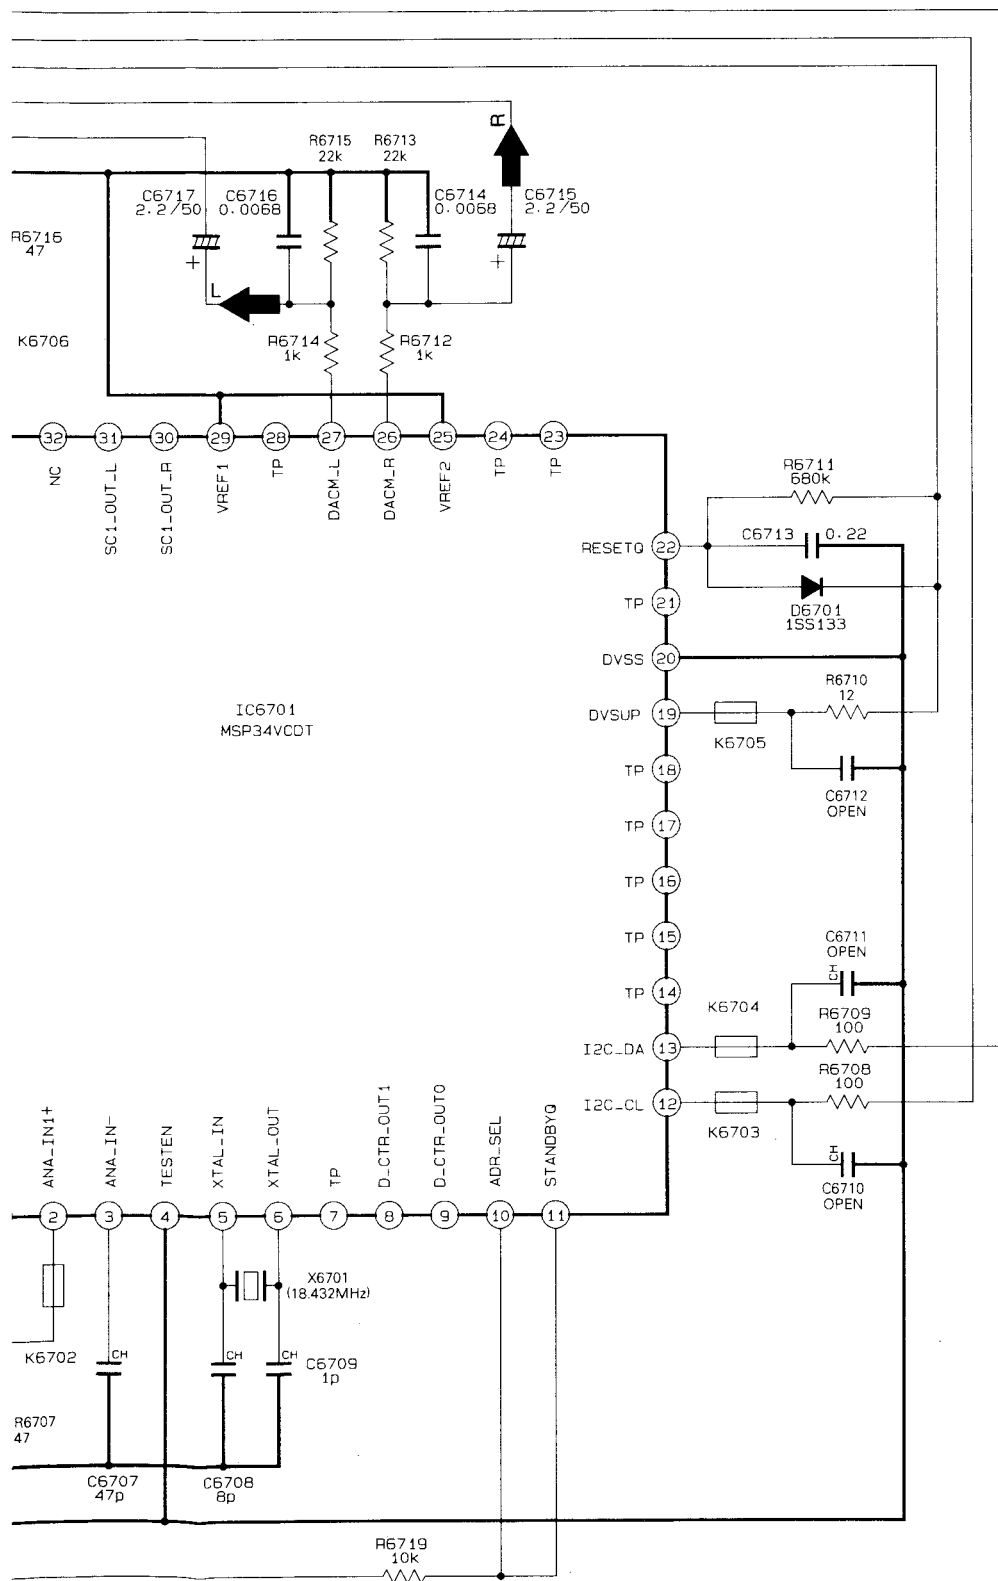

SECTION 5 PARTS LIST

SAFETY PRECAUTION

Parts identified by the $\triangle$ symbol are critical for safety. Replace only with specified part numbers.

5.1 ELECTRICAL PARTS LIST

# $\triangle$	REF No.	PART No.	PART NAME, DESCRIPTION	# $\triangle$	REF No.	PART No.	PART NAME, DESCRIPTION


DEMOD BOARD ASSEMBLY <14>							
	PW1	LPA10094-02A	DEMOD BOARD ASSY				
	IC6701	MSP34VCDT	IC				
	Q6701	2SC3936/BC/-X	TRANSISTOR				
	D6701	1SS133	DIODE				
		or 1N4148M	DIODE				
	R6701	NRSA02J-392X	MG RESISTOR			3.9k Ω ,1/10W	
	R6702	NRSA02J-682X	MG RESISTOR			6.8k Ω ,1/10W	
	R6703	NRSA02J-470X	MG RESISTOR			47 Ω ,1/10W	
	R6704	NRSA02J-102X	MG RESISTOR			1k Ω ,1/10W	
	R6705	NRSA02J-271X	MG RESISTOR			270 Ω ,1/10W	
	R6706	NRSA02J-151X	MG RESISTOR			150 Ω ,1/10W	
	R6707	NRSA02J-470X	MG RESISTOR			47 Ω ,1/10W	
	R6708	NRSA02J-101X	MG RESISTOR			100 Ω ,1/10W	
	R6709	NRSA02J-101X	MG RESISTOR			100 Ω ,1/10W	
	R6710	NRSA02J-120X	MG RESISTOR			12 Ω ,1/10W	
	R6711	NRSA02J-684X	MG RESISTOR			680k Ω ,1/10W	
	R6712	NRSA02J-102X	MG RESISTOR			1k Ω ,1/10W	
	R6713	NRSA02J-223X	MG RESISTOR			22k Ω ,1/10W	
	R6714	NRSA02J-102X	MG RESISTOR			1k Ω ,1/10W	
	R6715	NRSA02J-223X	MG RESISTOR			22k Ω ,1/10W	
	R6716	NRSA02J-470X	MG RESISTOR			47 Ω ,1/10W	
	R6719	QRE141J-103Y	RESISTOR			10k Ω ,1/4W	
	R6720	NRSA02J-562X	MG RESISTOR			5.6k Ω ,1/10W	
	R6721	NRSA02J-562X	MG RESISTOR			5.6k Ω ,1/10W	
	C6701	NCB21HK-103X	CAPACITOR			0.01 μ F,50V	
	C6702	NCB21HK-222X	CAPACITOR			0.0022 μ F,50V	
	C6704	NCB21HK-103X	CAPACITOR			0.01 μ F,50V	
	C6705	NCB21HK-102X	CAPACITOR			0.001 μ F,50V	
	C6707	NDC21HJ-470X	CAPACITOR			47pF,50V	
	C6708	NDC21HJ-8R0X	CAPACITOR			8pF,50V	
	C6709	NDC21HJ-1R0X	CAPACITOR			1pF,50V	
	C6713	NCF21CZ-224X	CAPACITOR			0.22 μ F,16V	
	C6714	NCB21HK-682X	CAPACITOR			0.0068 μ F,50V	
	C6715	QEKJ1HM-225	E CAPACITOR			2.2 μ F,50V	
	C6716	NCB21HK-682X	CAPACITOR			0.0068 μ F,50V	
	C6717	QEKJ1HM-225	E CAPACITOR			2.2 μ F,50V	
	C6719	QEKJ1CM-106	E CAPACITOR			10 μ F,16V	
	C6720	QEKJ1CM-106	E CAPACITOR			10 μ F,16V	
	C6721	NCB21HK-103X	CAPACITOR			0.01 μ F,50V	
	C6723	NCB21HK-103X	CAPACITOR			0.01 μ F,50V	
	L6701	QQL231J-1R0Y	COIL			1 μ H	
	L6702	QQL231J-3R3Y	COIL			3.3 μ H	
	X6701	QAX0443-001	CRYSTAL RESONATOR				
	K6701	NQR0200-003X	FERRITE BEAD				
	K6702	NQR0200-003X	FERRITE BEAD				
	K6703	NQR0200-003X	FERRITE BEAD				
	K6704	NQR0200-003X	FERRITE BEAD				
	K6705	NQR0200-003X	FERRITE BEAD				
	K6706	NQR0200-003X	FERRITE BEAD				
	BK1	LP40077-001A	BRACKET(BOARD)				
	CN6701	QGG2502K1-10	HEADER PIN				

JVC

SERVICE MANUAL

VIDEO CASSETTE RECORDER

HR-J670EK/J670EU/J770EK/J770EU

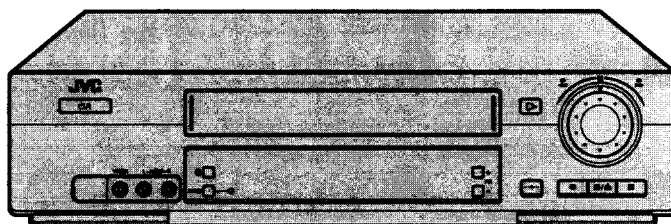

VIDEO *plus*[®]
DELUXE

Hi-Fi **VHS**
PAL

SPECIFICATIONS *(The specifications shown pertain specifically to the model HR-J770EK)*

GENERAL

Power requirement	: AC 220 – 240 V~, 50/60 Hz
Power consumption	
Power on	: 19 W
Power off	: 4.9 W
Temperature	
Operating	: 5°C to 40°C
Storage	: -20°C to 60°C
Operating position	: Horizontal only
Dimensions (WxHxD)	: 400 x 94 x 281 mm
Weight	: 3.5 kg
Format	: VHS PAL standard
Maximum recording time	
(SP)	: 240 min. with E-240 video cassette
(LP)	: 480 min. with E-240 video cassette

VIDEO/AUDIO

Signal system	: PAL-type colour signal and CCIR monochrome signal, 625 lines/50 fields
Recording system	: DA4 (Double Azimuth) helical scan system
Signal-to-noise ratio	: 45 dB
Horizontal resolution	: 250 lines
Frequency range	: 70 Hz to 10,000 Hz (Normal audio) 20 Hz to 20,000 Hz (Hi-Fi audio)
Input/Output	: 21-pin SCART connectors (IN/OUT x 1, IN/DECODER x 1) RCA connectors (VIDEO IN x 1, AUDIO IN x 1, AUDIO OUT x 1)

TUNER/TIMER

TV channel storage capacity	: 99 positions (+AUX position)
Tuning system	: Frequency synthesized tuner
Channel coverage	: VHF 44.5 – 143/143 – 470 MHz UHF 470 – 862 MHz
Aerial output	: UHF channels 22 – 69 (Adjustable)
Memory backup time	: Approx. 10 min.

ACCESSORIES

Provided accessories	: RF cable, Satellite Controller, Infrared remote control unit, "AA" battery x 2
----------------------	---

*Specifications shown are for SP mode unless otherwise specified.
E.& O.E. Design and specifications subject to change without notice.*

TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
Important Safety Precautions					
INSTRUCTIONS (HR-J770EK)					
1. DISASSEMBLY					
1.1	DISASSEMBLY FLOW CHART	1-1	2.3.1	Checking/Adjustment of FM Waveform Linearity	2-20
1.2	HOW TO READ THE DISASSEMBLY AND ASSEMBLY	1-1	2.3.2	Checking/Adjustment of the Height and Tilt of the Audio Control Head	2-21
1.3	DISASSEMBLY/ASSEMBLY METHOD	1-1	2.3.3	Checking/Adjustment of the Audio Control Head Phase (X-Value)	2-21
1.4	SERVICE POSITION	1-4	2.3.4	Checking/Adjustment of the Standard Tracking Preset	2-22
1.4.1	How to take out the Mechanism and Main board assemblies	1-4	2.3.5	Checking/Adjustment of the Tension Pole Position	2-22
1.5	MECHANISM SERVICE MODE	1-5	3. ELECTRICAL ADJUSTMENT		
1.5.1	How to set the "MECHANISM SERVICE MODE"	1-5	3.1	PRECAUTION	3-1
1.6	EMERGENCY DISPLAY FUNCTION	1-6	3.1.1	Required test equipments	3-1
1.6.1	Displaying the emergency information	1-6	3.1.2	Required adjustment tools	3-1
1.6.2	Clearing the emergency history	1-6	3.1.3	Colour bar signal, colour bar pattern	3-1
1.6.3	Emergency content description	1-7	3.1.4	Switch settings and standard precautions	3-1
1.6.4	Emergency detail information ①	1-8	3.2	SERVO CIRCUIT	3-2
1.6.5	Emergency detail information ②	1-9	3.2.1	Switching point	3-2
1.7	SYSCON CIRCUIT	1-10	3.2.2	Slow tracking preset	3-2
1.7.1	Syscon CPU pin function (IC3001)	1-10	3.3	VIDEO CIRCUIT	3-2
2. MECHANISM ADJUSTMENT			3.3.1	AUTO PICTURE initial setting	3-2
2.1	BEFORE STARTING REPAIR AND ADJUSTMENT	2-1	3.4	SYSCON CIRCUIT [HR-J670EU/HR-J770EU]	3-2
2.1.1	Precautions	2-1	3.4.1	Timer clock	3-2
2.1.2	Checking for Proper Mechanical Operations	2-1	4. CHARTS AND DIAGRAMS		
2.1.3	Manually Removing the Cassette Tape	2-1	NOTES OF SCHEMATIC DIAGRAM		
2.1.4	Jigs and Tools Required for Adjustment	2-3	CIRCUIT BOARD NOTES		
2.1.5	Maintenance and Inspection	2-3	4.1	BOARD INTERCONNECTIONS	4-3
2.2	REPLACEMENT OF MAJOR PARTS	2-6	4.2	VIDEO/AUDIO SCHEMATIC DIAGRAM	4-5
2.2.1	Before Starting Disassembling (Phase matching between mechanical parts)	2-6	4.3	ON SCREEN SCHEMATIC DIAGRAM	4-7
2.2.2	How to Set the Mechanism Assembling Mode	2-7	4.4	SYSTEM CONTROL SCHEMATIC DIAGRAM	4-9
2.2.3	Cassette Holder Assembly	2-7	4.5	SWITCHING REGULATOR SCHEMATIC DIAGRAM	4-11
2.2.4	Pinch Roller Arm Assembly	2-10	4.6	TUNER SCHEMATIC DIAGRAM	4-13
2.2.5	Guide Arm Assembly and Press Lever Assembly	2-10	4.7	DISPLAY, MINI OPE AND SHUTTLE SCHEMATIC DIAGRAMS	4-15
2.2.6	Audio Control Head	2-10	4.8	TERMINAL AND R.PAUSE SCHEMATIC DIAGRAMS	4-17
2.2.7	Loading Motor	2-11	4.9	DEMODULATOR SCHEMATIC DIAGRAM	4-19
2.2.8	Capstan Motor	2-11	4.10	MAIN, A/C HEAD, R.PAUSE, SHUTTLE, MINI OPE AND LOADING MOTOR CIRCUIT BOARDS	4-21
2.2.9	Pole Base Assembly (supply or take-up side)	2-12	4.11	DEMODULATOR CIRCUIT BOARD	4-25
2.2.10	Rotary Encoder	2-12	4.12	FDP GRID ASSIGNMENT AND ANODE CONNECTION	4-27
2.2.11	Clutch Unit	2-13	4.13	REMOTE CONTROL SCHEMATIC DIAGRAM	4-28
2.2.12	Change Lever Assembly, Direct Gear and Clutch Gear1	2-13	4.14	VOLTAGE CHARTS	4-29
2.2.13	Link Lever	2-13	4.15	SYSTEM CONTROL BLOCK DIAGRAM	4-31
2.2.14	Cassette Gear, Control Cam and Worm Gear	2-14	4.16	VIDEO BLOCK DIAGRAM	4-33
2.2.15	Control Plate	2-14	4.17	AUDIO BLOCK DIAGRAM	4-35
2.2.16	Loading Arm Gear (supply or take-up side) and Loading Arm Gear Shaft	2-15	5. PARTS LIST		
2.2.17	Take-up Lever, Take-up Head and Control Plate Guide	2-16	5.1	PACKING AND ACCESSORY ASSEMBLY <M1>	5-1
2.2.18	Capstan Brake Assembly	2-16	5.2	CABINET AND CHASSIS ASSEMBLY <M2>	5-2
2.2.19	Sub Brake Assembly (take-up side)	2-17	5.3	MECHANISM ASSEMBLY <M4>	5-4
2.2.20	Main Brake Assembly (take-up side), Reel Disk (take-up side) and Main Brake Assembly (supply side)	2-17	5.4	ELECTRICAL PARTS LIST	5-6
2.2.21	Tension Brake Assembly, Reel Disk (supply side) and Tension Arm Assembly	2-17	MAIN BOARD ASSEMBLY <03>		
2.2.22	Idler Lever, Idler Arm Assembly	2-18	AUDIO CONTROL HEAD BOARD ASSEMBLY <12>		
2.2.23	Stator Assembly	2-18	DEMOD BOARD ASSEMBLY <14>		
2.2.24	Rotor Assembly	2-18	MINI OPE BOARD ASSEMBLY(J670EK/J670EU)<28>		
2.2.25	Upper Drum Assembly	2-19	LOADING MOTOR BOARD ASSEMBLY <55>		
2.3	COMPATIBILITY ADJUSTMENT	2-20	SHUTTLE BOARD ASSMBLY (J770EK/J770EU)<85>		
			R.PAUSE BOARD ASSEMBLY <91>		

The following table lists the differing points between Models (HR-J670EK, HR-J670EU, HR-J770EK and HR-J770EU) in this series.

	HR-J670EK	HR-J670EU	HR-J770EK	HR-J770EU
JOG/SHUTTLE	NOT USED	NOT USED	USED	USED
VIDEO SYSTEM	PAL	PAL/MESECAM(MANUAL)	PAL	PAL/MESECAM(MANUAL)
BROADCASTING STANDARD	I	B/G, D/K	I	B/G, D/K
STEREO DECODER	NICAM	NICAM/A2	NICAM	NICAM/A2
LANGUAGE [INITIAL] (ON SCREEN DISPLAY)	ENG	13 LANG. [ENG]	ENG	13 LANG. [ENG]
CABLE & DBS. BOX CTL	USED	READY	USED	USED
FRONT VIDEO/AUDIO IN	USED	NOT USED	USED	USED
CABLE MOUSE	SATELLITE CONTROLLER	OPTION	SATELLITE CONTROLLER	SATELLITE CONTROLLER

Important Safety Precautions

Prior to shipment from the factory, JVC products are strictly inspected to conform with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

●Precautions during Servicing

1. Locations requiring special caution are denoted by labels and inscriptions on the cabinet, chassis and certain parts of the product. When performing service, be sure to read and comply with these and other cautionary notices appearing in the operation and service manuals.

2. Parts identified by the $\triangle$ symbol and shaded (■) parts are critical for safety.

Replace only with specified part numbers.

Note: Parts in this category also include those specified to comply with X-ray emission standards for products using cathode ray tubes and those specified for compliance with various regulations regarding spurious radiation emission.

3. Fuse replacement caution notice.
Caution for continued protection against fire hazard.
Replace only with same type and rated fuse(s) as specified.

4. Use specified internal wiring. Note especially:

- 1) Wires covered with PVC tubing
- 2) Double insulated wires
- 3) High voltage leads

5. Use specified insulating materials for hazardous live parts. Note especially:

- 1) Insulation Tape
- 2) PVC tubing
- 3) Spacers
- 4) Insulation sheets for transistors
- 5) Barrier

6. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.) wrap ends of wires securely about the terminals before soldering.

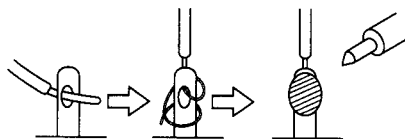


Fig.1

7. Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)

8. Check that replaced wires do not contact sharp edged or pointed parts.

9. When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.

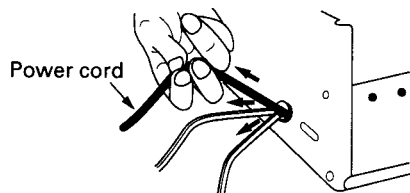


Fig.2

10. Also check areas surrounding repaired locations.

11. Products using cathode ray tubes (CRTs)

In regard to such products, the cathode ray tubes themselves, the high voltage circuits, and related circuits are specified for compliance with recognized codes pertaining to X-ray emission. Consequently, when servicing these products, replace the cathode ray tubes and other parts with only the specified parts. Under no circumstances attempt to modify these circuits. Unauthorized modification can increase the high voltage value and cause X-ray emission from the cathode ray tube.

12. Crimp type wire connector

In such cases as when replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, if replacing the connectors is unavoidable, in order to prevent safety hazards, perform carefully and precisely according to the following steps.

1) **Connector part number :** E03830-001

2) **Required tool :** Connector crimping tool of the proper type which will not damage insulated parts.

3) **Replacement procedure**

(1) Remove the old connector by cutting the wires at a point close to the connector.

Important : Do not reuse a connector (discard it).

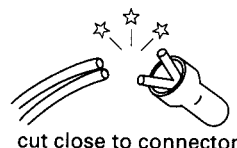


Fig.3

(2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.

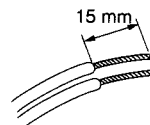


Fig.4

(3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.

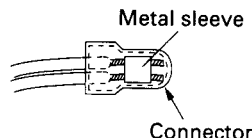


Fig.5

(4) As shown in Fig.6, use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.

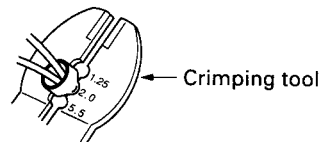


Fig.6

(5) Check the four points noted in Fig.7.

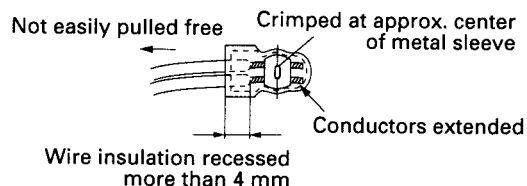


Fig.7

● Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Insulation resistance test

Confirm the specified insulation resistance or greater between power cord plug prongs and externally exposed parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table 1 below.

2. Dielectric strength test

Confirm specified dielectric strength or greater between power cord plug prongs and exposed accessible parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See table 1 below.

3. Clearance distance

When replacing primary circuit components, confirm specified clearance distance (d), (d') between soldered terminals, and between terminals and surrounding metallic parts. See table 1 below.

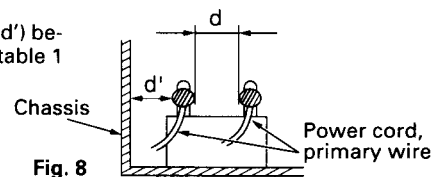


Fig. 8

4. Leakage current test

Confirm specified or lower leakage current between earth ground/power cord plug prongs and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON)

Insert load Z between earth ground/power cord plug prongs and externally exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See figure 9 and following table 2.

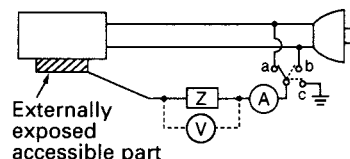


Fig. 9

5. Grounding (Class I model only)

Confirm specified or lower grounding impedance between earth pin in AC inlet and externally exposed accessible parts (Video in, Video out, Audio in, Audio out or Fixing screw etc.).

Measuring Method:

Connect milli ohm meter between earth pin in AC inlet and exposed accessible parts. See figure 10 and grounding specifications.

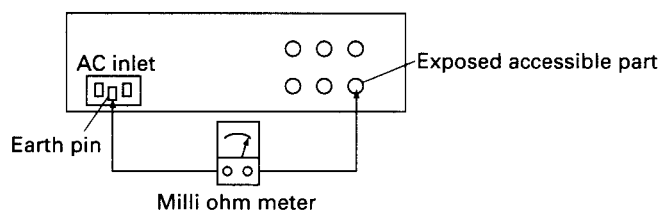


Fig. 10

Grounding Specifications

Region	Grounding Impedance (Z)
USA & Canada	$Z \leq 0.1 \text{ ohm}$
Europe & Australia	$Z \leq 0.5 \text{ ohm}$

AC Line Voltage	Region	Insulation Resistance (R)	Dielectric Strength	Clearance Distance (d), (d')
100 V	Japan	$R \geq 1 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3 \text{ mm}$
100 to 240 V			AC 1.5 kV 1 minute	$d, d' \geq 4 \text{ mm}$
110 to 130 V	USA & Canada	$1 \text{ M}\Omega \leq R \leq 12 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3.2 \text{ mm}$
110 to 130 V 200 to 240 V	Europe & Australia	$R \geq 10 \text{ M}\Omega/500 \text{ V DC}$	AC 3 kV 1 minute (Class II) AC 1.5 kV 1 minute (Class I)	$d \geq 4 \text{ mm}$ $d' \geq 8 \text{ mm}$ (Power cord) $d' \geq 6 \text{ mm}$ (Primary wire)

Table 1 Specifications for each region

AC Line Voltage	Region	Load Z	Leakage Current (i)	a, b, c
100 V	Japan	$1 \text{ k}\Omega$	$i \leq 1 \text{ mA rms}$	Exposed accessible parts
110 to 130 V	USA & Canada	$0.15 \mu\text{F}$ and $1.5 \text{ k}\Omega$	$i \leq 0.5 \text{ mA rms}$	Exposed accessible parts
110 to 130 V 220 to 240 V	Europe & Australia	$2 \text{ k}\Omega$	$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Antenna earth terminals
		$50 \text{ k}\Omega$	$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Other terminals

Table 2 Leakage current specifications for each region

Note: These tables are unofficial and for reference only. Be sure to confirm the precise values for your particular country and locality.

Safety Precautions

The rating plate and the safety caution are on the rear of the unit.

WARNING: DANGEROUS VOLTAGE INSIDE

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

IMPORTANT

- Please read the various precautions on page 2 – 3 of this instruction manual before installing or operating the recorder.
- It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic work embodied therein.

IMPORTANT

Connection to the mains supply in the United Kingdom. DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain a proper safety approved extension lead/adaptor or consult your dealer.

In the unlikely event of the plug fuse failing be sure to replace the fuse only with an identical approved type, as originally fitted, and to replace the fuse cover. If the fuse fails again consult your nearest JVC dealer.

If nonetheless the mains plug is cut off remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply. If this product is not supplied fitted with a mains plug then follow the instructions given below:

DO NOT make any connection to the Larger Terminal coded E or Green.

The wires in the mains lead are coloured in accordance with the following code:

 Blue to N (Neutral) or Black
Brown to L (Live) or Red

If these colours do not correspond with the terminal identifications of your plug, connect as follows:
Blue wire to terminal coded N (Neutral) or coloured Black.
Brown wire to terminal coded L (Live) or coloured Red.
If in doubt — consult a competent electrician.

CAUTION

- When you are not using the recorder for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.
- Dangerous voltage inside. Refer internal servicing to qualified service personnel. To prevent electric shock or fire hazard, remove the power cord from the mains outlet prior to connecting or disconnecting any signal lead or aerial.

The STANDBY/ON  button does not completely shut off mains power from the unit, but switches operating current on and off. "  " shows electrical power standby and "  " shows ON.

Video tapes recorded with this video recorder in the LP (Long Play) mode cannot be played back on a single-speed video recorder.

Failure to heed the following precautions may result in damage to the recorder, remote control or video cassette.

1. **DO NOT** place the recorder . . .
... in an environment prone to extreme temperatures or humidity.
... in direct sunlight.
... in a dusty environment.
... in an environment where strong magnetic fields are generated.
... on a surface that is unstable or subject to vibration.
2. **DO NOT** block the recorder's ventilation openings.
3. **DO NOT** place heavy objects on the recorder or remote control.
4. **DO NOT** place anything which might spill on top of the recorder or remote control.
5. **AVOID** violent shocks to the recorder during transport.

MOISTURE CONDENSATION

Moisture in the air will condense on the recorder when you move it from a cold place to a warm place, or under extremely humid conditions—just as water droplets form in the surface of a glass filled with cold liquid. Moisture condensation on the head drum will cause damage to the tape. In conditions where condensation may occur, keep the recorder turned on for a few hours to let the moisture dry.



- Cassettes marked "VHS" (or "S-VHS") can be used with this video recorder. However, only VHS recordings can be made and played back.
- HQ VHS is compatible with existing VHS equipment.
- VIDEO Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VIDEO Plus+ system is manufactured under license from Gemstar Development Corporation.

Some Do's And Don'ts On The Safe Use Of Equipment

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

- DO** read the operating instructions before you attempt to use the equipment.
- DO** ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.
- DO** consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
- DO** be careful with glass panels or doors on equipment.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way — switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of road safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL...

- **NEVER** let anyone especially children push anything into holes, slots or any other opening in the case — this could result in a fatal electrical shock;
- **NEVER** guess or take chances with electrical equipment of any kind — it is better to be safe than sorry!



► Dear Customer,

Thank you for purchasing this JVC Video Cassette Recorder.
Please use this **QUICK SET UP GUIDE** to help you to set up your video cassette recorder.

STEP 1 CHECK THE CONTENTS


CHECK ALL THE CONTENTS SHOWN BELOW

Video Cassette Recorder

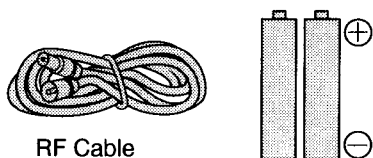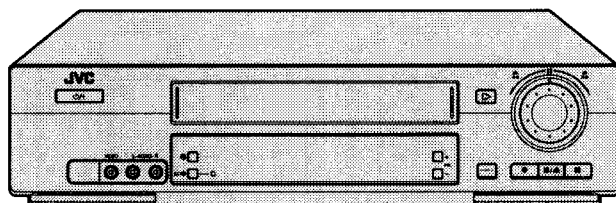

RF Cable

"AA" Batteries (x 2)

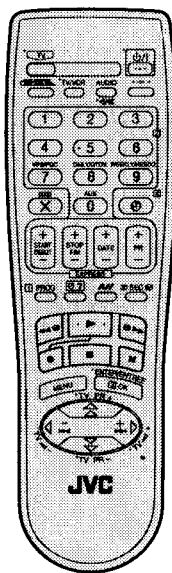

Infrared Remote Control Unit




Satellite Controller

► You are now ready to install your video recorder.

STEP 2 INSTALLATION

CONNECT VIDEO RECORDER TO TV

► Place the recorder on a stable, flat surface.

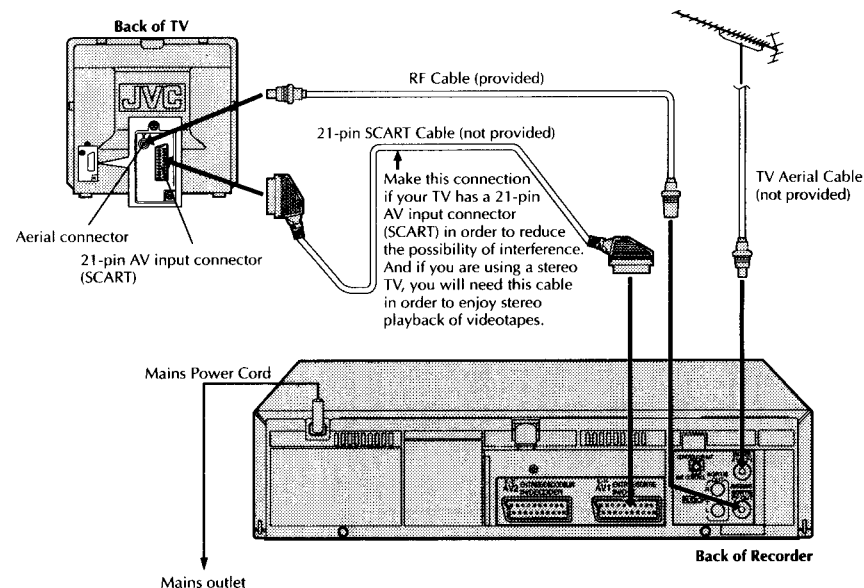

RF CONNECTION

To connect to a TV with NO 21-pin AV input connector (SCART) . . .

- 1- Disconnect the TV aerial cable from the TV.
- 2- Connect the TV aerial cable to the ANT. IN jack on the rear panel of the recorder.
- 3- Connect the provided RF cable between the RF OUT jack on the rear panel of the recorder and the TV's aerial connector.

AV CONNECTION

To connect to a TV with 21-pin AV input connector (SCART) . . .

- 1- Connect the aerial, recorder and TV as per "RF CONNECTION".
- 2- Connect an optional SCART cable between the AV1 (L-1) IN/OUT socket on the rear panel of the recorder and the TV's 21-pin AV input connector (SCART).

ATTENTION

- Do NOT Plug the mains power cord into a mains outlet until all connections are completed.
- Do NOT press the ψ /I button on the recorder or on the remote control to turn on the recorder's power before you start the Auto Set Up procedure described on page 6.

AFTER YOU FINISH THIS STEP ►

Go to Step 3 – AUTO SET UP

STEP 3 AUTO SET UP


SET THE TUNER CHANNELS, CLOCK, GUIDE PROGRAM NUMBERS AND VIDEO CHANNEL*

The Auto Set Up function sets the tuner channels, clock, VIDEO Plus+ assigned Guide Program numbers and the video channel* automatically the first time the ψ /I button on the recorder or on the remote is pressed to turn on the recorder after the mains power cord has been plugged into a mains outlet.


* Useful if you have connected the video recorder to your TV via RF connection (pg. 5). Video Channel (RF output channel) is the channel on which your TV receives picture and sound signals from the video recorder through the RF cable.

Before performing the following procedure, make sure that:

- the TV aerial cable is connected to the recorder.
- the mains power cord is plugged into the mains outlet.
- batteries have been installed in the remote control.

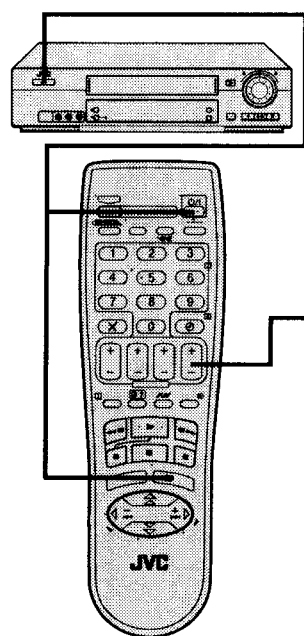

- Press ψ /I. If "Auto" appears on the display panel, press **OK** or $\triangleright$. "Auto" blinks; do NOT press any button on the recorder or remote control until the display panel shows either the display as illustrated below in item 2 or "OUT--". Auto Set Up usually takes about 4–12 minutes; the duration varies by area.
 - If "OUT--" appears on the display panel, refer to page 8.
 - With the AV connection (pg. 5), if the TV is turned on and set to its AV mode, the AUTO SET screen will appear.
 - When you have connected the video recorder to a TV offering T-V Link via the AV connection (pg. 5) and the TV is turned on, the recorder automatically performs the Preset Download (pg. 7) even if you select "Auto" for Auto Set Up function.

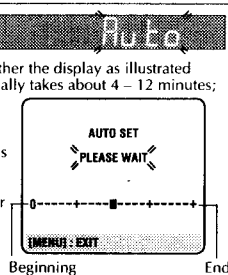

- If you have connected the video recorder to your TV via the provided RF cable only (RF connection) — the channel that is shown on the display panel is your Video Channel. To view picture signals from the video recorder, set your TV to the Video Channel. — Refer to the instructions supplied with your TV set for how to do this. Go to item 3.
 - If you have connected the video recorder to your TV via both the provided RF cable and a 21-pin SCART cable (AV connection) — you do not need the video channel so you have to set the video channel to off. Press **PR** — until the display panel shows "OUT--" to set the Video Channel to off. To view picture signals from the video recorder, set your TV to its AV mode. — Refer to the instructions supplied with your TV set for how to do this. Go to item 3.

- Press **OK** to finish Auto Set Up and refer to page 8 to check the results.

ATTENTION

Once you have performed Auto Set Up, all the stored stations, Guide Program numbers and the video channel remain in the recorder's memory and the recorder will not perform Auto Set Up again. If there is a power cut and the recorder's memory backup expires you only need to reset the clock. (pg. 38)

If you have moved to a different area, perform each setting as required.

- Video Channel setting (for RF connection users) pg. 40
- Tuner setting pg. 42
- Clock setting pg. 38

If a new station begins broadcasting in your area, perform tuner setting (pg. 42) and, if necessary, video channel setting (pg. 40).

NOTES:

- Auto channel set function takes place first; it assigns automatically all receivable stations in your area.
- Auto clock set function sets the clock automatically.
- During auto channel set, the recorder recognizes each station name of the detected stations and stores them in the recorder's memory, then automatically sets the VIDEO Plus+ assigned Guide Program number for those stations according to the broadcast area.
- For RF connection users: The video recorder detects the channels which are not occupied by local stations and selects one channel automatically for your Video Channel that is located in the middle of more than 5 vacant channels.
- If there is power cut or if you press ψ /I or **MENU** while Auto Set Up is in progress, Auto Set Up will be interrupted; be sure to turn off the recorder power once and press ψ /I to turn the power back on in order to re-start Auto Set Up.

PRESET DOWNLOAD

SET THE TUNER CHANNELS BY DOWNLOADING FROM YOUR TV, CLOCK AND GUIDE PROGRAM NUMBERS

When you connect the recorder and your TV via fully-wired 21-pin SCART cable (pg. 5), you can set the recorder's tuner channels by downloading preset data from your TV instead of using the Auto Set Up function (pg. 6). After downloading is completed, the recorder sets the clock and VIDEO Plus+ assigned Guide Program numbers automatically. For details, refer to the instruction manual for your TV.


ATTENTION

You can use this function only with a TV offering T-V Link, etc.*


* Compatible with TVs offering T-V Link, EasyLink, Megaloc, SMARTLINK, Q-Link, DATA LOGIC or NextView Link via fully-wired 21-pin SCART cable. The degree of compatibility and available functions may differ by system.

Before performing the following procedure, make sure that:

- the TV aerial cable is connected to the recorder and a 21-pin SCART cable is connected between your TV and the recorder.
- the mains power cord is plugged into the mains outlet.
- batteries have been installed in the remote control.

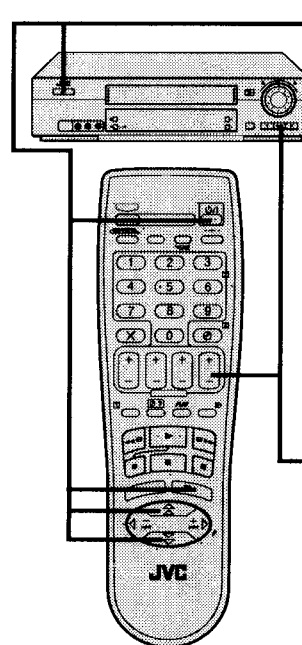

- Press ψ /I. If "Auto" appears on the display panel, Press Δ / ∇ to select "CH --" and press **OK** or $\triangleright$. Preset position on the display panel increases from "CH1"; do NOT press any button on the recorder or remote control until the display panel shows either the display as illustrated on page 8 or "OUT--".
 - If "OUT--" appears on the display panel, refer to page 8.
 - If you are using the on-screen display, the T-V LINK screen will appear. Then the GUIDE PROG SET screen will appear during Guide Program number set.
 - If you press any button on the recorder or remote control while downloading is in progress, this process will be interrupted and you will need to start again. See NOTES below.

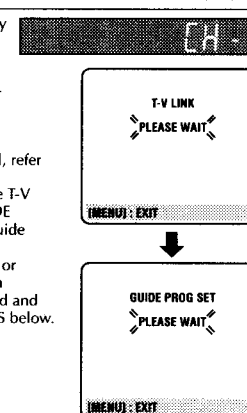

- Press ψ /I to turn off the recorder. Press and hold down **STOP** on the recorder until the display panel shows the display as illustrated on the right. Press **PR** — until the display panel shows "OUT--" to set the Video Channel to off.

- Press **OK** to exit Video Channel Set mode. To view picture signals from the video recorder, set your TV to its AV mode. — Refer to the instructions supplied with your TV set for how to do this.

NOTES:

- In areas where no TV station transmits the PDC signal, the recorder cannot perform either auto clock set or auto Guide Program number set.
- If there is a power cut, or if you press ψ /I or **MENU** while downloading or set up is in progress, it will be interrupted; be sure to turn off the recorder power once and try again from the beginning.
- Auto clock may not function properly depending on reception conditions.
- When you perform Preset Download, be sure to use fully-wired 21-pin SCART cable.
- On this recorder, the characters available for station names (ID) are A–Z, 0–9, –, *, + and _ (space). The names of some downloaded stations may differ from those on your TV (pg. 46).

Auto Set Up/Preset Download results appear on the display panel

- A**  When both auto channel set and auto clock set have been completed successfully the correct current time will be displayed after the **OK** button is pressed in item **2** on page 6 or after performing the item **1** on page 7.
- B**  When auto channel set has been completed successfully but auto clock set has not, "(PR)1" will be displayed after the **OK** button is pressed in item **2** on page 6 or after performing the item **1** on page 7.
- C**  When neither auto channel set nor auto clock set has been completed successfully, "---:--" will be displayed.

* You can check if the Guide Program numbers have been set correctly when you perform VIDEO Plus+ Timer Programming (pg. 16); if the correct preset position number is displayed in step 3, this confirms that the Guide Program number for the PlusCode number you enter in step 2 has been set correctly.

A If both auto channel set and auto clock set have been performed successfully:

- 1 Turn on the TV and select its VIDEO channel or AV mode, then make sure that all necessary stations have been stored in the recorder's memory by using the **PR** button(s).
 - If station names (ID — pg. 47) have also been stored in the recorder's memory, the station name will be displayed at the top left corner of the screen for about 5 seconds each time the recorder is tuned to a different station.
 - If you want to set the tuner manually such as to add or skip channels, to change preset positions, or to set or change station names, see pages 44 – 46.

Now you have finished the basic set up and can use your recorder for both playback and recording.

B If auto channel set has succeeded but auto clock set has not:

- 1 Turn on the TV and select its VIDEO channel or AV mode, then make sure that all necessary stations have been stored in the recorder's memory by using the **PR** button(s).
 - If station names (ID — pg. 47) have also been stored in the recorder's memory, the station name will be displayed at the top left corner of the screen for about 5 seconds each time the recorder is tuned to a different station.
 - If you want to set the tuner manually such as to add or skip channels, to change preset positions, or to set or change station names, see pages 44 – 46.
- 2 Perform "Clock Set" on page 38.

Now you have finished the basic set up and can use your recorder for both playback and recording.

C If both auto channel set and auto clock set have failed:

- 1 Make sure that the TV aerial cable is connected properly to the recorder (for RF connection), or that the 21-pin SCART cable is connected properly between TV and the recorder (for AV connection). Turn off the recorder power once, then turn the recorder power back on again.
- 2 Perform "Auto Set Up" on page 6 or "Preset Download" on page 7.

IMPORTANT

- In certain reception conditions, station names may not be stored correctly, and auto Guide Program Number Set may not work properly. If the Guide Program numbers are not set properly, when you timer-record a TV programme using VIDEO Plus+, the recorder will record a TV programme of a different station. When programming the timer using VIDEO Plus+, be sure to check that the preset position corresponding to the broadcasting station you wish to record has been selected (pg. 16, "VIDEO Plus+ Timer Programming").
- Your video recorder memorizes all detected stations even if reception of some of them is poor. In these cases picture quality may be poor. To delete those stations which have an unacceptable picture (pg. "Delete A Channel" on page 45).
- If any of the above problems occur, refer to pages 44 – 46 to input station names (pg. "Set Stations") or delete unnecessary stations (pg. "Delete A Channel"). You can also change station preset positions (pg. "Change Station Preset Position").
- **For RF connection users:** In certain reception conditions, the Video Channel may not be set correctly and interference may appear in the TV picture while the recorder's power is on. Set your Video Channel manually. (pg. 40, "Video Channel Set").

If you have any difficulty with the above procedures call the JVC Customer Service Hot Line on 0208 208 7654.

T-V Link Functions

When you connect the recorder and your TV via a fully-wired 21-pin SCART cable (pg. 5), the following functions are available. You can use these functions only with a TV offering T-V Link, etc.*

For details, refer to the instruction manual for your TV.

* Compatible with TVs offering T-V Link, EasyLink, Megalogic, SMARTLINK, Q-Link, DATA LOGIC or NextView Link via fully-wired 21-pin SCART cable. The degree of compatibility and available functions may differ by system.

NexTVview Link

You can download the EPG (Electronic Programme Guide) information from your TV for timer-programming on the recorder.

For details, refer to the instruction manual for your TV.

TV Auto Power On

You can turn on the TV and set it to video mode automatically whenever you play a tape.

For details, refer to the instruction manual for your TV.

VCR Auto Standby

You can use your TV's remote control to turn off the recorder. For details, refer to the instruction manual for your TV.

Direct Rec

You can start recording the programme that you are watching on your TV with simple operation. Press and hold **RECORD** and press **PLAY** on the remote control, or press **RECORD** on the recorder.

Follow the procedure below to use this function.

Turn on the TV and select the VIDEO channel (or AV mode).

1 TURN ON THE RECORDER


Press **ON**.

2 ACCESS MAIN MENU SCREEN

Press **MENU**.


3 ACCESS MODE SET SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "MODE SET", then press **OK** or **P**.

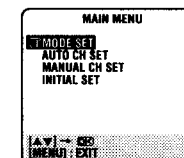

4 SELECT DIRECT REC MODE

Press $\Delta \nabla$ to move the highlight bar (pointer) to "DIRECT REC", then press **OK** or **P** to set to "ON".

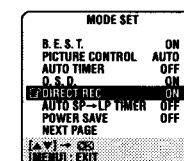

5 RETURN TO NORMAL SCREEN



Press **MENU**.

NOTES:

- If "DIRECT REC" is set to "OFF", the **RECORD** button functions as described in "Recording" (pg. 14).
- During the Direct Rec, "—" appears on the display panel.
- When you perform T-V LINK functions, be sure to use a fully-wired 21-pin SCART cable.
- Direct Rec is not possible with a scrambled broadcast.
- To record a scrambled broadcast, set "DIRECT REC" to "OFF" and follow the procedure described in "Recording" on page 14.

Satellite Receiver Control Setting

The following procedure is required if you receive satellite channels through a satellite receiver. Around 20 seconds before VIDEO Plus+ timer recording (pg. 16) or Express timer programming (pg. 18) starts, the recorder sets its input mode to "L-2" and automatically switches the satellite receiver's channels using the provided Satellite Controller.

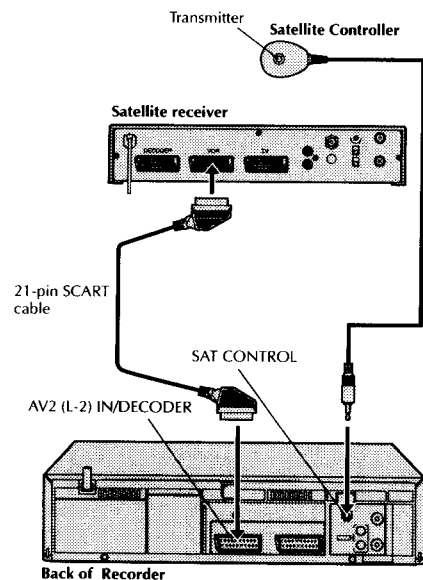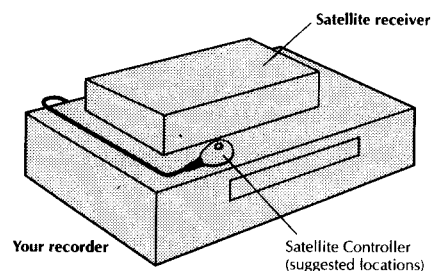

Installing Satellite Controller

1 SITUATE SATELLITE CONTROLLER

Place the Satellite Controller so that the path between its transmitter and the satellite receiver's remote sensor is unobstructed.

2 ATTACH SATELLITE CONTROLLER

Fix securely using the adhesive strip attached on the back of the Satellite Controller.

3 MAKE CONNECTIONS

Be sure to connect the recorder's AV2 (L-2) IN/DECODER connector to the satellite receiver's 21-pin SCART connector.

NOTE:

When connecting your satellite receiver, refer to its instruction manual.

4 CONNECT SATELLITE CONTROLLER TO RECORDER

Connect the Satellite Controller to the SAT CONTROL connector on the rear panel.

Setting satellite receiver's brand and channel

After installation, set the satellite receiver's brand and channel correctly; otherwise, the Satellite Controller cannot work correctly.

Turn on the TV and select the VIDEO channel (or AV mode).

1 TURN ON SATELLITE RECEIVER


Turn on the satellite receiver's power.

2 ACCESS MAIN MENU SCREEN ON RECORDER

Press MENU.

3 ACCESS INITIAL SET SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "INITIAL SET", then press OK or $\triangleright$.

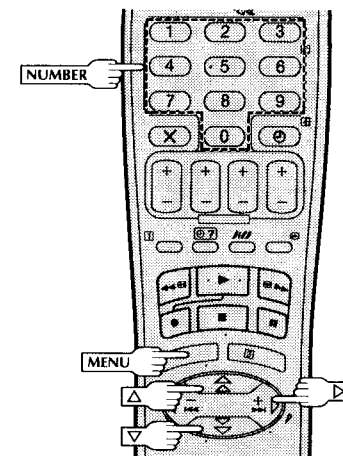

SATELLITE TUNER BRAND	CODE
JVC	73
AMSTRAD	60, 61, 62, 63, 92
CANAL SATELLITE	81
CANAL +	81
D-BOX	85
ECHOSTAR (VIA DIGITAL)	82
FINLUX	68
FORCE	89
GALAXIS	88
GRUNDIG	64, 65
HIRSCHMANN	64, 78
ITT NOKIA	68
JERROLD	75
KATHREIN	70, 71
LUXOR	68
MASCOM	93
MASPRO	70
NOKIA	87
PACE	65, 67, 74, 86, 92
PANASONIC	74
PHILIPS	66, 84
RFT	69
SAGEM	83
SALORA	68
SIEMENS	64
SKYMASTER	69
TPS	83
TRIAx	91
WISI	64

NOTES:

- The Satellite Controller may not work with all types of satellite receiver.
- For some satellite receivers, you need to set its channel input mode to 2-digit.
- If your satellite receiver has more than two channel mode, be sure to set to "All Channel Mode". For details, refer to the instruction manual of the satellite receiver.


ACCESS SAT CONTROL SET SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "SAT CONTROL SET", then press OK or $\triangleright$.



ENTER SATELLITE RECEIVER'S BRAND

Press the appropriate NUMBER keys to enter the brand code from the list in the left column, then press OK.

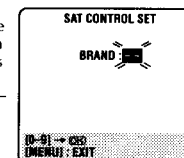

- If the brand code you entered is invalid, the code field is reset. Enter the correct brand code again.
- If the recorder is in playback or recording, you cannot set the brand code.

SELECT SATELLITE RECEIVER'S CHANNEL


Press the appropriate NUMBER keys to enter the channel position on the satellite receiver, then press OK.



- You can select the channel position between 1 to 999.
- After pressing OK, the recorder enters the Test mode.

CHECK RESULT OF TEST

If the satellite receiver's channel number has been changed to the same channel as you set in step 6...

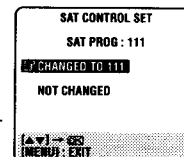


Press $\Delta \nabla$ to move the highlight bar (pointer) to "CHANGED TO ...", then press OK or $\triangleright$ to finish the Sat Control Set mode.

If the satellite receiver's channel number has not been changed correctly...

Press $\Delta \nabla$ to move the highlight bar (pointer) to "NOT CHANGED", then press OK or $\triangleright$. Then perform the procedure again from step 5.

Playback


Turn on the TV and select the VIDEO channel (or AV mode).

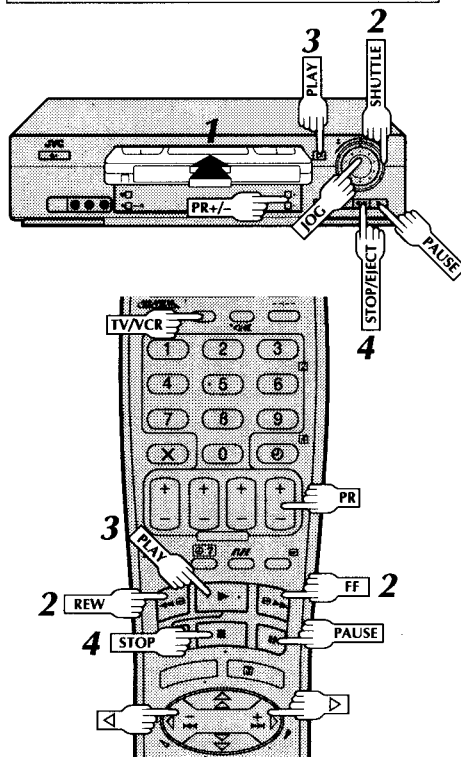

Tape Position Indicator

The tape position indicator appears on screen when, from the Stop mode, you press FF, REW or perform an Index Search. The position of "■" in relation to "0" (beginning) or "+" (end) shows you where you are on the tape.

"O.S.D." (pg. 33) must be set to "ON", or the indicator will not appear.

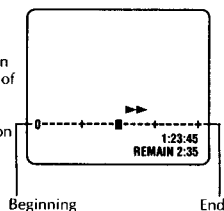

NOTE:

Depending on the type of tape used, there may be times when the indication is not correct.

The easiest, most basic operation possible with your video recorder is tape playback. Already-recorded signals on a video tape are read by your video recorder and displayed on your TV just like a TV programme.

LOAD A CASSETTE

1 Make sure the window side is up, the rear label side is facing you and the arrow on the front of the cassette is pointing towards the recorder. Don't apply too much pressure when inserting.

- The recorder power comes on automatically and the counter is reset to 0:00:00.
- If the record safety tab has been removed, playback begins automatically.

FIND PROGRAMME START POINT

2 If the tape is advanced past the start point, press REW or turn the SHUTTLE ring to the left. To go forward, press FF or turn the SHUTTLE ring to the right.

START PLAYBACK

3 Press PLAY. "BEST" appears blinking in the recorder's display panel during automatic tracking (pg. 22).

- Playback picture quality of LP recordings will not be as high as SP recordings.

STOP PLAYBACK

4 Press STOP on the remote or STOP/EJECT on the recorder's front panel. Then press STOP/EJECT to remove the cassette.

Clean the video heads using a dry cleaning cassette — TCL-2UX — when:

- Rough, poor picture appears while a tape is played back.
- The picture is unclear or no picture appears.
- "USE CLEANING CASSETTE" appears on the screen (only with "O.S.D." set to "ON" (pg. 33).)

INFORMATION

When using the AV connection (pg. 5), initiating playback causes the VCR indicator to light and the TV to automatically enter AV mode. To return the TV to TV mode after playback is complete, press TV/VCR so that the VCR indicator turns off.

* Depending on the type of TV used, TV/VCR button does not always function as described above.


Usable cassettes



- Compact VHS camcorder recordings can be played on this video recorder. Simply place the recorded cassette into a VHS Cassette Adapter and it can be used just like any full-sized VHS cassette.
- This video recorder can record on regular VHS and Super VHS cassettes. However, it will record and play back regular VHS signals only. It is not possible to play back a recorded Super VHS tape.

NOTE:

Refer to the SHUTTLE ring illustration below as you read the following procedures.

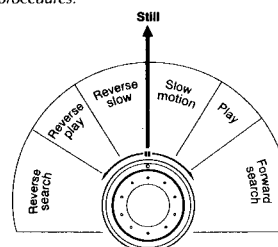

Still Picture/Frame-By-Frame Playback

1 PAUSE DURING PLAYBACK

Press PAUSE. If there is vertical jitter, use the PR buttons to correct the picture.

2 ACTIVATE FRAME-BY-FRAME PLAYBACK

Turn the JOG dial to the right for forward frame-by-frame playback, or to the left for reverse frame-by-frame playback.

OR

Press PAUSE. Each time PAUSE is pressed the tape will advance one frame.

OR

Press < or >. Each time one of these buttons is pressed the tape will move one frame in the direction of the arrow.

To resume normal playback, press PLAY.

Slow Motion

1 ACTIVATE SLOW-MOTION PLAYBACK

During playback or still picture, turn the SHUTTLE ring to the right for forward slow motion, or to the left for reverse slow motion (refer to the illustration above).

OR

During still picture, press and hold PAUSE for 2 seconds, then release. Press and release again to return to still picture.

OR

During still picture, press and hold < or >. Release to return to still picture.

To resume normal playback, press PLAY.

Variable-Speed Search

1 ACTIVATE VARIABLE-SPEED SEARCH

During playback or still, turn the SHUTTLE ring to the right for forward variable-speed search, or to the left for reverse variable-speed search (refer to the illustration on the left).

OR

During playback, press < or >.

- The more times you press, the faster the playback picture moves.
- To decrease speed, press the button for the opposite direction.

To resume normal playback, press PLAY.

High-Speed Search

1 ACTIVATE HIGH-SPEED SEARCH

During playback or still, turn the SHUTTLE ring all the way to the right for forward high-speed search, or to the left for reverse high-speed search. Releasing SHUTTLE resumes still picture playback.

- For forward high-speed search, turn the SHUTTLE ring all the way to the right and release it within 1 second.
- For reverse high-speed search, turn the SHUTTLE ring all the way to the left and release it within 1 second.

OR

During playback or still picture, press FF for forward high-speed search, or REW for reverse high-speed search.

To resume normal playback, press PLAY.

NOTE:


For short searches, press and hold FF or REW during playback or still picture. When released, normal playback resumes.

ATTENTION

- In the high-speed search, still, slow-motion or frame-by-frame playback mode,
 - the picture will be distorted.
 - noise bars will appear.
 - there will be a loss of colour with a tape recorded in LP mode.
- Picture may not appear during high-speed search with a tape recorded in LP mode.

Recording

Turn on the TV and select the VIDEO channel (or AV mode).

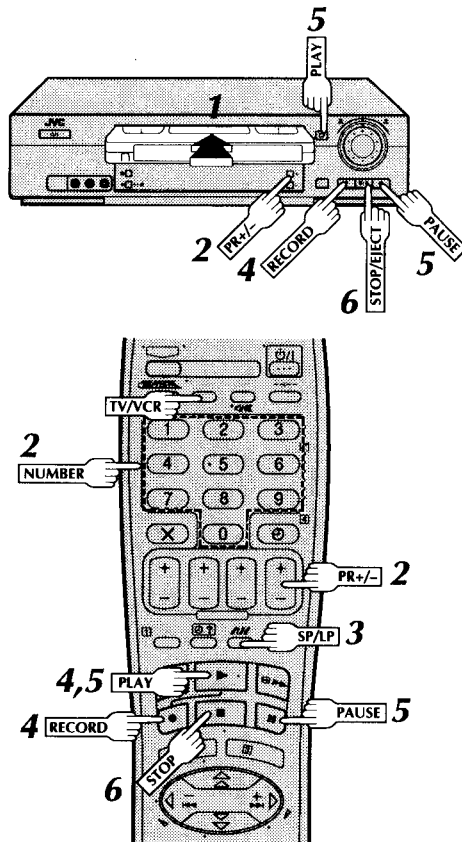

INFORMATION

When using the AV connection (pg. 5), you can switch between TV mode and AV mode by pressing TV/VCR.

* Depending on the type of TV used, TV/VCR button does not function as described above.

Recording Resume Function

If there is a power outage during recording (or Instant Timer Recording or timer recording), the recording will resume automatically when power is restored to the recorder unless the recorder's memory backup has expired.

TV signals being received by the recorder's built-in tuner can be recorded onto a video tape. You can "capture" a TV programme using your video recorder.

LOAD A CASSETTE

Insert a cassette with the record safety tab intact (See below).

- The counter is reset to 0:00:00 and the recorder power comes on automatically.

CHOOSE A PROGRAMME

Press PR +/- or the NUMBER keys to select the preset you wish to record.

SET TAPE SPEED

Press SP/LP (//). Check the SP/LP indicator on the recorder display panel to confirm the selected tape speed.

- Picture quality of LP recordings will not be as high as on SP recordings.

START RECORDING

Press and hold RECORD and press PLAY on the remote control, or press RECORD on the recorder.

B.E.S.T. takes place at the beginning of both the first SP and the first LP recording after inserting the cassette (pg. 22).

If "DIRECT REC" is set to "ON", the programme that appears on the TV screen will be recorded (pg. 9).

- You can not change the preset whilst recording is in progress. To change the preset, see step 5.

PAUSE/RESUME RECORDING

Press PAUSE. Press PLAY to resume recording.


- During the Record Pause mode, you can change the preset by pressing the PR +/- buttons or the NUMBER keys.

STOP RECORDING

Press STOP on the remote control or STOP/EJECT on the recorder. Then press STOP/EJECT to remove the cassette.

Accidental erasure prevention

- To prevent accidental recording on a recorded cassette, remove its safety tab. To record on it later, cover the hole with adhesive tape.

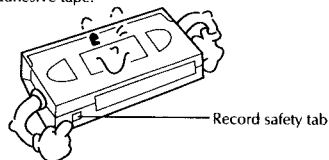


Record One Programme While Watching Another

SELECT PRESET TO WATCH

Once recording is in progress, all you need to do is to set the preset controls on the TV for the station you wish to view.

- The programme selected with the TV's preset controls appears on the TV screen while the one selected with the recorder's PR buttons is recorded on the tape.

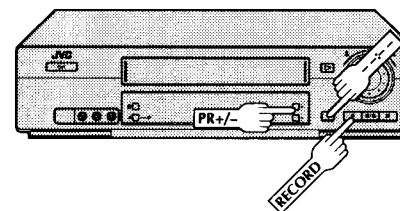

Elapsed Recording Time Indication

You can check the exact time of a recording.


SET COUNTER DISPLAY

Press -- -- until a counter reading appears on the display panel.

RESET COUNTER

Press 0000 before starting recording or playback.

- The counter is reset to "0:00:00" and shows the exact elapsed time as the tape runs.

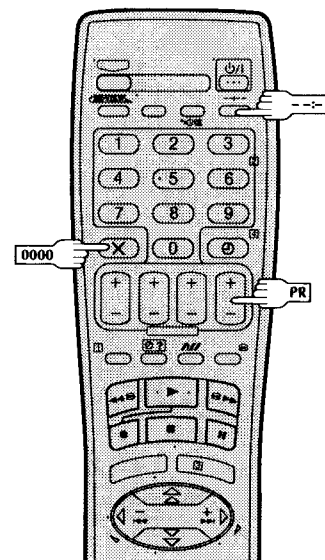

Instant Timer Recording (ITR)

This easy method allows you to record for any length of time from 30 mins. to 6 hours (selectable in 30-min. increments), and shuts off the recorder after recording is finished.

START RECORDING

Press RECORD on the recorder.

ENGAGE ITR MODE

Press RECORD again. "ITR" blinks and 0:30 appears on the front display panel.

SET RECORDING DURATION

If you want to record for more than 30 minutes, press RECORD to extend the time. Each press extends recording time by 30 minutes.

NOTE:

You can only perform ITR using the RECORD button on the recorder's front panel.

Tape Remaining Time

DISPLAY REMAINING TIME

Press -- -- until the time remaining on the tape appears.

- The display panel shows the tape remaining time with "T" displayed.
- By pressing the -- -- button, you can change the display to show the counter reading, preset position*, clock time or tape remaining time.
- *Preset position is not displayed during playback.


NOTE:

Depending on the type of tape used, there may be times when the tape remaining time reading may not appear right away, or is not correct. "-- --" may sometimes appear, or the display may blink on occasion.

VIDEO Plus+ Timer Programming

Before performing VIDEO Plus+ Timer Programming:

- Make sure that the recorder's built-in clock is set properly.
- Insert a cassette with the safety tab in place. The recorder will come on automatically.
- Turn on the TV and select the VIDEO channel (or AV mode).

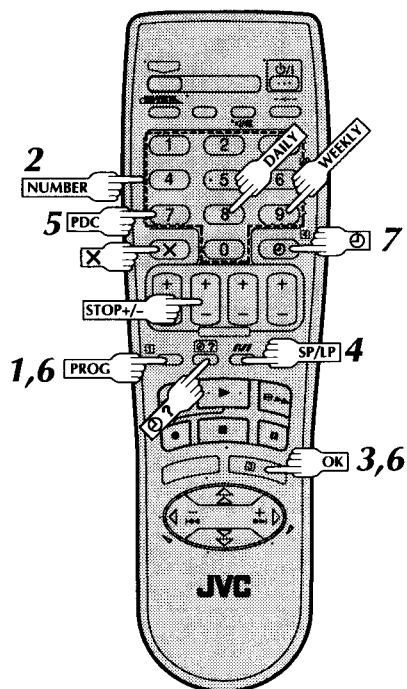

With VIDEO Plus+, timer programming is greatly simplified because each TV programme has a corresponding code number which your recorder is able to recognise.

1 ACCESS VIDEO PLUS+ SCREEN

Press **PROG**.



The front display panel looks like this:



2 ENTER PLUSCODE NUMBER

Press the **NUMBER** keys to enter the PlusCode number of the programme you wish to record.

- If you make a mistake, press **X** and input the correct number.




The PlusCode number you enter appears on the front display panel:



The display panel shows only a 4-digit number.

3 ACCESS VIDEO PLUS+ PROGRAM SCREEN

Press **OK**, and the VIDEO Plus+ Program screen appears (if you're just starting out, "P1" appears).

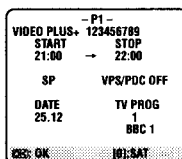

The display panel shows the programme start time. Pressing **?** changes the display to the programme stop time, then the date and preset position.



IMPORTANT

Make sure the preset position number you wish to record is displayed; if not, see "VIDEO Plus+ Setup" on page 39 and set the Guide Program number for that PlusCode number correctly.

- If the number you entered is invalid, "ERROR" appears on the screen and "Err" appears on the display panel. Press **X** and input a valid PlusCode number.
- If the "GUIDE PROG SET" screen appears, see "ATTENTION - Regarding Guide Program Number Set" on page 17.

4 SET TAPE SPEED

Press **SP/LP (1/1)** to set the tape speed.

5 SET PDC MODE

Press **PDC** to select "ON" or "OFF".

If "VPS/PDC ON" is displayed on the screen or "VPS/PDC" is lit on the display panel, PDC is set to ON.
If "VPS/PDC OFF" is displayed on the screen or "VPS/PDC" is not lit on the display panel, PDC is set to OFF.
PDC Recording in the column below.

- VPS (Video Programme System) recording is not currently available in the U.K. and not possible with this recorder.

6 RETURN TO NORMAL SCREEN

Press **PROG** or **OK**. "PROGRAM COMPLETED" appears on the screen for about 5 seconds, then normal screen appears. If the timer programme is overlapped with another one that was already set, "PROGRAM OVERLAPPED" appears on screen and "Err" appears on the front display panel. (See pg. 21)

- Repeat steps 1 - 6 for each additional programme.

7 ENGAGE RECORDER'S TIMER MODE

Press **?** (TIMER). The recorder turns off automatically and **?** appears on the display panel.

- To disengage the timer, press **?** (TIMER) again.

NOTES:

- To Change The Stop Time ...
... press **STOP +/-** after pressing **OK** in step 3. You can compensate for anticipated programme schedule delays this way.
- To Timer-Record Weekly Or Daily Serials ...
... after pressing **OK** in step 3, press **WEEKLY** (NUMBER key "9") for weekly serials or **DAILY** (NUMBER key "8") for daily serials (Monday - Friday). Either "WEEKLY" or "DAILY" appears on the screen. Pressing the button again makes the corresponding indication disappear.
- You can programme this recorder to timer-record as many as 8 programmes. If you try to programme the recorder to record a ninth, "PROGRAM FULL" appears on screen and "FULL" appears on the front display panel. To record the extra programme, you must first cancel any unnecessary programmes (See pg. 20).
- It is not possible to timer-record a TV programme with a PlusCode number which starts with "0".

PDC Recording

Now available from some TV stations, PDC (Programme Delivery Control) is a service designed to assure safe, accurate timer recording. With this system, special code signals are transmitted together with the audio/video signals. These code signals control your video recorder and have precedence over the advertised times which you may have preset into the timer. This means that your recorder will start and stop recording when the preset TV programmes actually start and end — even if the broadcast time of a preset TV programme is changed from what has been advertised. PDC is currently available nationally on BBC1, BBC2, Ch.4 and Ch.5, except from a few small relay transmitters. Ch.3 operates a PDC service in most areas. All channels intend to offer this service in due course. Check your TV programme listing guide for latest information. If the channel you intend to record does not offer a PDC service your recorder will not start recording if PDC has been selected. Be sure to set PDC to "OFF" if PDC is not available on your selected channel (See step 5 above).

NOTES:

- PDC recording is also possible when a satellite receiver or a cable system is connected to AV2 (L-2) IN/DECODER on your recorder.
- PDC recording is also possible via the AV1 (L-1) IN/OUT connector.

Satellite Receiver Users


- To timer-record a satellite broadcast using VIDEO Plus+:
- 1 Perform "Satellite Receiver Control Setting" (See pg. 10).
 - 2 Perform steps 1 - 7. In step 3, the display panel shows "L2" for the preset position. In step 5, you cannot set PDC to ON.
 - 3 Leave the satellite receiver's power on.

ATTENTION

Regarding Guide Program Number Set

"GUIDE PROG SET" appears after performing step 3 if the Guide Program number for the PlusCode number you entered has not been set.

- If you want to set the Guide Program number for the satellite broadcast station, press the **NUMBER** key "0" to change "TV PROG" to "SAT". Press **Δ** to input the preset position number on which your recorder or satellite receiver receives that station, then press **OK** or **▷** to set the Guide Program Number. The VIDEO Plus+ Program screen appears.

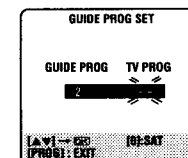

(Ex.) To timer-record a BBC2 programme with VIDEO Plus+.

- If your recorder receives BBC2 on the preset position 2, press **OK** or **▷** after entering "2" using **Δ** buttons.

Timer Warning

If you have programmed your recorder to timer-record a programme or a series of programmes, a warning appears on the screen to tell you that the recording is due to start in 5 minutes.

~WARNING~
TIMER RECORDING
TO START SOON
[X]

NOTES:


- The warning only appears if you're not in the Timer mode at the time.
- If this recorder is being used as the player for tape dubbing, the warning screen will be recorded on the tape in the other video recorder.

The warning blinks for the entire 5 minutes leading up to the start of timer recording. To clear the display, press **X**.

Express Timer Programming

Before performing Express Timer Programming:

- Make sure that the recorder's built-in clock is set properly.
- Insert a cassette with the safety tab in place. The recorder will come on automatically.
- Turn on the TV and select the VIDEO channel (or AV mode).

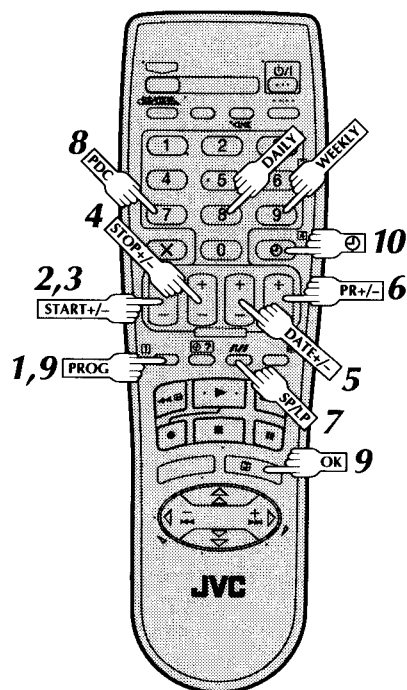


If you don't know the PlusCode number for the programme you wish to record, use the following procedure to set your recorder to timer-record the programme.

1 ACCESS VIDEO PLUS+ SCREEN

Press **PROG**.

2 ACCESS PROGRAMME SCREEN

Press **START +/-**. (If you're just starting out, "P1" appears.)

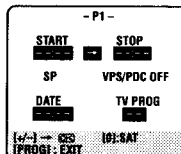


The front display panel looks like this:

3 ENTER PROGRAMME START TIME

Press **START +/-** to enter the time you want recording to start.

- Press and hold **START +/-** to move in 30-minute increments, or press and release repeatedly to move 1 minute at a time.

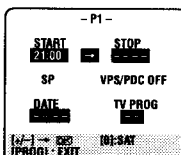

The front display panel looks like this:

4 ENTER PROGRAMME STOP TIME

Press **STOP +/-** to enter the time you want recording to stop.

- Press and hold **STOP +/-** to move in 30-minute increments, or press and release repeatedly to move 1 minute at a time.


5 ENTER PROGRAMME DATE

Press **DATE +/-** to enter the date on which you wish to record. (The current date first appears on screen. The date you enter will appear in its place.)

6

ENTER PRESET POSITION

Press **PR +/-** to enter the preset position corresponding to the broadcast station you wish to record.

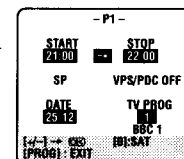

7

SET TAPE SPEED

Press **SP/LP (//)** to set the tape speed.

8

SET PDC MODE

Press **PDC** to select "ON" or "OFF".

If "VPS/PDC ON" is displayed on the screen or "VPS/PDC" is lit on the display panel, PDC is set to ON. If "VPS/PDC OFF" is displayed on the screen or "VPS/PDC" is not lit on the display panel, PDC is set to OFF. (See "PDC Recording" in the right column.)

- VPS (Video Programme System) recording is not currently available in the U.K. and not possible with this recorder.

9

RETURN TO NORMAL SCREEN

After confirming all information is correct, press **PROG** or **OK**. "PROGRAM COMPLETED" appears on the screen for about 5 seconds, then normal screen appears. If the timer programme is overlapped with another one that was already set, "PROGRAM OVERLAPPED" appears on screen and "Err" appears on the front display panel. (See pg. 21)

- Repeat steps 1 - 9 for each additional programme.

10

ENGAGE RECORDER'S TIMER MODE

Press **⏻ (TIMER)**. The recorder turns off automatically and **⏻** appears on the display panel.

- To disengage the timer, press **⏻ (TIMER)** again.

To Timer-Record Weekly Or Daily Serials . . .

. . . anytime during steps 2 through 9, press **WEEKLY** (NUMBER key "9") for weekly serials or **DAILY** (NUMBER key "8") for daily serials (Monday - Friday). Either "WEEKLY" or "DAILY" appears on the screen. Pressing the button again makes the corresponding indication disappear.

NOTE:

You can programme this recorder to timer-record as many as 8 programmes. If you try to programme the recorder to record a ninth, "PROGRAM FULL" appears on screen and "FULL" appears on the front display panel. To record the extra programme, you must first cancel any unnecessary programmes (See pg. 20).

Satellite Receiver Users

To timer-record a satellite broadcast using Express Timer Programming:

- 1 Perform "Satellite Receiver Control Setting" (See pg. 10).
- 2 Perform steps 1 - 10. In step 6, press the **NUMBER** key "0" to change "TV PROG" to "SAT". The display panel shows "L2" for the preset position. Then press **PR +/-** to enter the preset position for the satellite broadcast. In step 8, you cannot set PDC to ON.
- 3 Leave the satellite receiver's power on.

PDC Recording

Now available from some TV stations, PDC (Programme Delivery Control) is a service designed to assure safe, accurate timer recording. With this system, special code signals are transmitted together with the audio/video signals. These code signals control your video recorder and have precedence over the advertised times which you may have preset into the timer. This means that your recorder will start and stop recording when the preset TV programmes actually start and end — even if the broadcast time of a preset TV programme is changed from what has been advertised. PDC is currently available nationally on BBC1, BBC2, Ch.4 and Ch.5, except from a few small relay transmitters. Ch.3 operates a PDC service in most areas. All channels intend to offer this service in due course. Check your TV programme listing guide for latest information. If the channel you intend to record does not offer a PDC service your recorder will not start recording if PDC has been selected. Be sure to set PDC to "OFF" if PDC is not available on your selected channel.

(See step 8 in the left column.)

NOTES:

- Set the start time (PDC time) exactly as advertised in the TV listing. A different time than advertised will result in no recording.
- PDC recording is also possible when a satellite receiver or a cable system is connected to AV2 (L-2) IN/DECODER on your recorder.
- PDC recording is also possible via the AV1 (L-1) IN/OUT connector.

Timer Warning

If you have programmed your recorder to timer-record a programme or a series of programmes, a warning appears on the screen to tell you that the recording is due to start in 5 minutes.


— WARNING —
TIMER RECORDING
TO START SOON
[X]

NOTES:

- The warning only appears if you're not in the Timer mode at the time.
- If this recorder is being used as the player for tape dubbing, the warning screen will be recorded on the tape in the other video recorder.

The warning blinks for the entire 5 minutes leading up to the start of timer recording. To clear the display, press **X**.

Check, Cancel And Replace Programmes

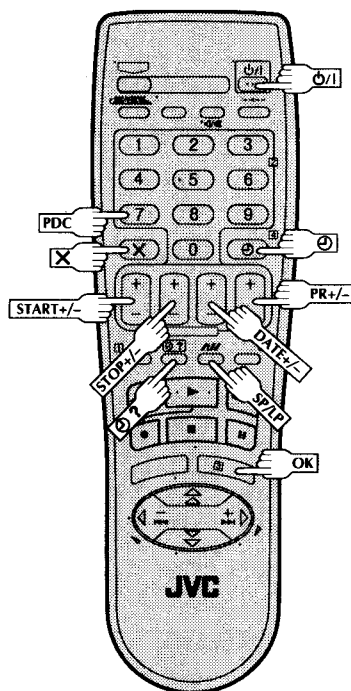

1 DISENGAGE TIMER MODE

Press $\odot$, then press $\odot/I$.

2 ACCESS PROGRAMME CHECK SCREEN/DISPLAY

Press $\odot ?$.

	START	STOP	CH	DATE
1	8:00	10:00	3	24.12
2	10:00	10:45	2	25.12
3	11:30	13:00	1	25.12
4				
5				
6				
7				
8				

NO ?1: NEXT



3 ACCESS PROGRAMME SCREEN/DISPLAY

Press $\odot ?$ again to check more information. Each time you press $\odot ?$, the next programme's information appears.

- P1 -	
START 8:00	STOP 10:00
SP	VPS/PDC OFF
DATE 24.12	TV PROG 3
NO ?1: NEXT	



- The display panel shows the programme start time. Pressing **OK** changes the display to the programme stop time, then the date and the preset position.

To cancel or replace a programme...

4 CANCEL OR REPLACE A PROGRAMME

Press **X** to cancel a programme. To replace a programme, press the appropriate button: **START+/-**, **STOP+/-**, **DATE+/-**, **PR+/-**, **SP/LP** (**||||**), **PDC**.

- You can change "TV PROG" to "SAT" for the preset position by pressing the **NUMBER** key "0".

5 RETURN TO NORMAL SCREEN/DISPLAY

Press $\odot ?$ as many times as necessary. If there are still some programmes to be recorded, go on to step 6.

6 RETURN TO TIMER MODE


Press $\odot$.

NOTE:

You can also check the programmes on the display panel even if the recorder's power is off (unless the recorder is in the Power Save mode $\square$ pg. 34) or the recorder is in the Timer mode; however, it is not possible to cancel or replace the programmes.

When programmes overlap each other

If "PROGRAM OVERLAPPED" appears, you have another programme overlapping the programme you have just made. The Program Check screen appears and conflicting programmes will start blinking.

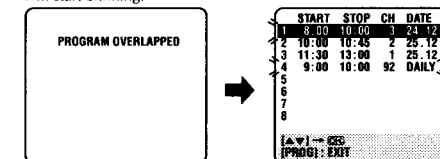

EX. Programme 1 (you have just made) and Programme 4 overlap each other.

1 CONFIRM OVERLAPPING PROGRAMMES

Overlapping programmes blink on the screen.

2 SELECT PROGRAMME TO MODIFY

Press $\Delta \nabla$, then press **OK** or **P**.

- You can only select one of the overlapping programmes.

NOTE:

If you do not mind this overlap, press **PROG** to finish the timer programme setting. The programme with the lower programme number will be recorded and the other one will not be recorded correctly. Without doing anything for about 1 minutes, the recorder will finish the timer programming.


3 CANCEL OR CHANGE PROGRAMME SETTING

To cancel a programme, press **X** when the Program screen you do not want is shown. "PROGRAM COMPLETED" appears on the screen for about 5 seconds, then normal screen appears.

To change a programme, press the appropriate button: **START+/-**, **STOP+/-**, **DATE +/-**, **PR +/-**, **SP/LP** (**||||**) and/or **PDC** when the Program screen on which you want to make changes is shown, then press **OK**. "PROGRAM COMPLETED" appears on the screen for about 5 seconds, then normal screen appears.



NOTE:

If the overlap is not yet solved or another overlap occurs with the timer programme setting made last after making correction on a programme, the conflicting programmes will be shown on the Program Check screen again. Repeat the above steps again until the overlap is solved.

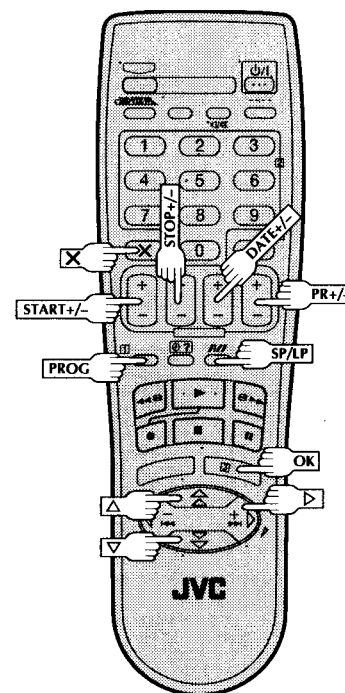

Playback/ Recording According To Tape Charac- teristics

Turn on the TV and select the VIDEO channel (or AV mode).

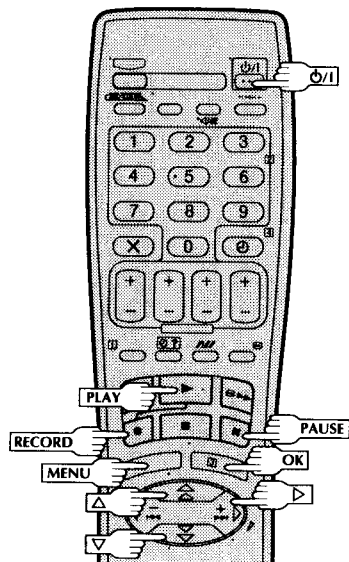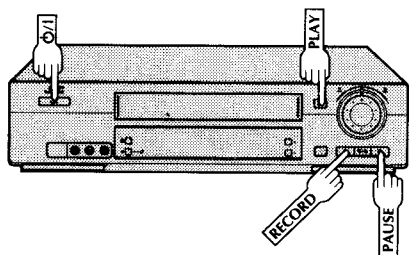

B.E.S.T. Picture System

The B.E.S.T. (Biconditional Equalised Signal Tracking) system checks the condition of the tape in use during recording and playback, and compensates to provide the highest-possible recording and playback pictures. The default setting for both recording and playback is "ON".

1 TURN ON THE RECORDER


Press ϕ/I .

2 ACCESS MAIN MENU SCREEN

Press MENU.


3 ACCESS MODE SET SCREEN

Press Δ/∇ to move the highlight bar (pointer) to "MODE SET", then press OK or $\triangleright$.

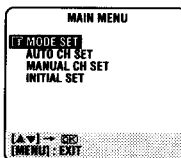

4 SELECT B.E.S.T. MODE

Press Δ/∇ to move the highlight bar (pointer) to "B.E.S.T.", then press OK or $\triangleright$ to set to "ON" or "OFF".

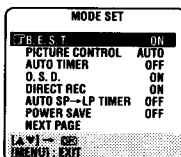

5 RETURN TO NORMAL SCREEN

Press MENU.

Recording

START RECORDING

1 Press and hold **RECORD** and press **PLAY** on the remote, or press **RECORD** on the recorder.

DURING B.E.S.T.



B.E.S.T. COMPLETE



- The recorder spends approximately 7 seconds assessing the condition of the tape, then begins recording.

NOTES:

- The B.E.S.T. system works for both SP and LP modes only after a tape has been inserted and the Record mode is first initiated. It does not work during recording.
- The B.E.S.T. system does not work while Auto Satellite Prog recording is in progress (pg. 26).
- In the case of timer recording, the B.E.S.T. system works before recording is initiated.
- Once the cassette is ejected, the B.E.S.T. data is cancelled. The next time the cassette is used for recording, B.E.S.T. is re-performed.
- Pressing the recorder's **RECORD** button while "BEST" is displayed does not start Instant Timer Recording (pg. 15).

ATTENTION

Since the B.E.S.T. system works before recording actually starts, there is a delay of approximately 7 seconds after **RECORD** and **PLAY** on the remote are pressed, or **RECORD** on the recorder is pressed. To make sure you record the desired scene or programme in its entirety, first perform the following steps:

- Press and hold **PAUSE** and press **RECORD** to engage the **RECORD PAUSE** mode.
 - The recorder then automatically checks the condition of the tape and, after approximately 7 seconds, re-enters **RECORD PAUSE**.
- Press **PLAY** when you are ready to start recording.
 - If you want to bypass the B.E.S.T. system and begin recording immediately, set "B.E.S.T." to "OFF" in step 4 on page 22.

Playback

The recorder assesses the quality of the tape once you initiate playback.

1 START PLAYBACK

Press **PLAY**.




- The recorder adjusts the playback picture quality based on the quality of the tape in use.
- B.E.S.T. is active during Auto Tracking. "BEST" appears blinking on the recorder's display panel.

NOTES:

- When watching a tape recorded with "B.E.S.T." set to "ON", it is recommended that you leave B.E.S.T. on during playback as well.
- When watching a rental tape or one recorded on another video recorder, or when using this recorder as the player for editing, set B.E.S.T. to your preference by performing steps 1 through 5 on page 22.
- "BEST" only appears at the beginning of automatic tracking. Even though it doesn't appear after that, the B.E.S.T. function is operative.

Looking For The Scene You Want

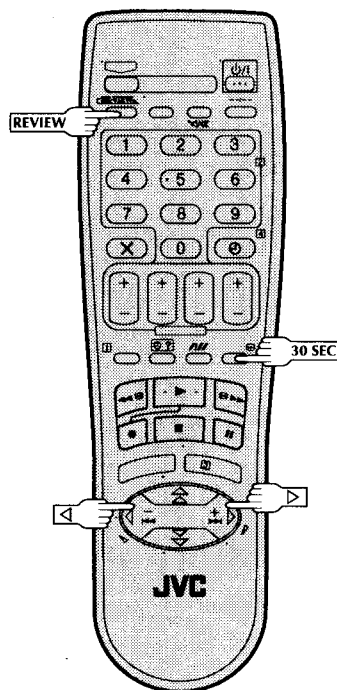

Skip Search

1 SKIP OVER UNWANTED SECTIONS

Press **30 SEC** 1 to 4 times during playback. Each press initiates a 30-second period of fast-motion playback. Normal playback resumes automatically.

NOTE:


To return to normal playback during a Skip Search, press **PLAY**.

Index Search

Your recorder automatically marks index codes at the beginning of each recording. This function gives you quick access to any one of 9 index codes in either direction.

NOTE:

Before starting, make sure the recorder is in the **Stop** mode.

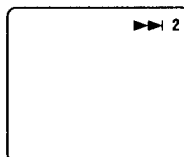

1 ACTIVATE INDEX SEARCH


Press **<** or **>** (or **<<** or **>>**). "**<<< 1**" or "**>>> 1**" is displayed on screen and search begins in the corresponding direction.

- To access index codes 2 through 9, press **<** or **>** repeatedly until the correct index number is displayed.

Ex.: To locate the beginning of B from the current position, press **<** twice.

To locate the beginning of D from the current position, press **>** once.

Current position



- When the specified index code is located, playback begins automatically.

Instant ReView

Simply by pressing a single button, the recorder power comes on, rewinds, and begins playback of the last timer-recorded programme. If you have several programmes recorded, you can easily access any of them.

NOTE:

Before starting, make sure that the recorder is off and that the **Timer** mode is disengaged.

1 ACTIVATE INSTANT REVIEW


Press **REVIEW**. The recorder power comes on and the recorder searches for the index code indicating the start of the last timer-recorded programme. Once it's found, playback begins automatically.

- The front display panel tells you how many programmes have been timer-recorded. If you have, for example, 3 programmes, "**REVIEW**" and "3" appear and blink. To watch the first of the 3 programmes, press **REVIEW** three times. The recorder searches and begins playback automatically. You can access a programme as far as 9 index codes away from the current tape position.

NOTES:

- Instant ReView is not possible while the recorder is in the **Timer** mode.
- The number of recorded programmes will not be displayed on the front display panel after Auto Satellite Prog recording (pg. 26).

Selecting The Sound You Want

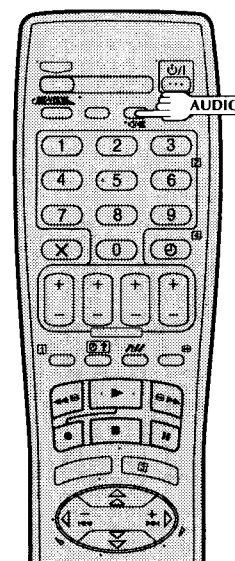

Receiving NICAM Stereo And Bilingual Programmes

Your recorder is equipped with a Digital stereo sound decoder (NICAM), making reception of stereo and bilingual broadcasts possible.

When the recorder is tuned to a different station, the type of broadcast being received will be displayed on the TV screen for a few seconds.

Type of Broadcast Being Received	On-screen Display
Regular Monaural	(none)
NICAM Stereo	ST NICAM
NICAM Bilingual	BIL. NICAM
NICAM Monaural	NICAM

- To listen to a stereo programme, press **AUDIO** until "**HI FI L >> R**" appears on the screen.
- To listen to a bilingual programme, press **AUDIO** until "**HI FI L >> R**" or "**HI FI << R**" appears on the screen (as required).
- To listen to the Standard (regular monaural) audio while receiving a NICAM broadcast, press **AUDIO** until "**NORM**" appears on the front display panel or on the screen.

NOTES:

- The **NICAM** audio programme will be recorded on the **Hi-Fi** audio track, and the **Standard** audio programme on the **normal** audio track.
- If the quality of stereo sound being received is poor, the broadcast will be received in monaural with better quality.
- Before playing back a programme recorded in stereo, or a bilingual programme, refer to "Soundtrack Selection" (See below).
- "O.S.D." must be set to "ON" or the on-screen displays will not appear (pg. 33).

Soundtrack Selection

Your video recorder is capable of recording three soundtracks (HI-FI L, HI-FI R and NORM) and will play back the one you select.

During Playback

Pressing **AUDIO** on the remote control changes the soundtrack being played back as follows:


TRACK	USE
On-Screen Display	
HI FI L >> R	For Hi-Fi stereo tapes
HI FI L >>	For main audio of Bilingual tapes
HI FI << R	For sub audio of Bilingual tapes
NORM	For audio-dubbed tapes
HI FI NORM	For audio-dubbed tapes

NOTES:

- "HI FI L >> R" should normally be selected. In this mode, **Hi-Fi** stereo tapes are played back in stereo, and the **normal** audio track is played back automatically for tapes with only normal audio.
- For instructions on recording **NICAM** stereo and bilingual programmes, see above.
- Bilingual programmes are not currently broadcast in the U.K.
- "O.S.D." must be set to "ON" or the on-screen displays will not appear (pg. 33).

Automatic Satellite Programme Recording

This facility allows you to record automatically a satellite programme which is timer-programmed on your external satellite receiver. Connect a satellite receiver to the recorder's AV2 (L-2) IN/DECODER connector and programme the timer on the satellite receiver; the recorder starts recording when the signals input from the satellite receiver to the AV2 (L-2) IN/DECODER connector, and when there is no input signals the recorder stops recording and the power shuts off.

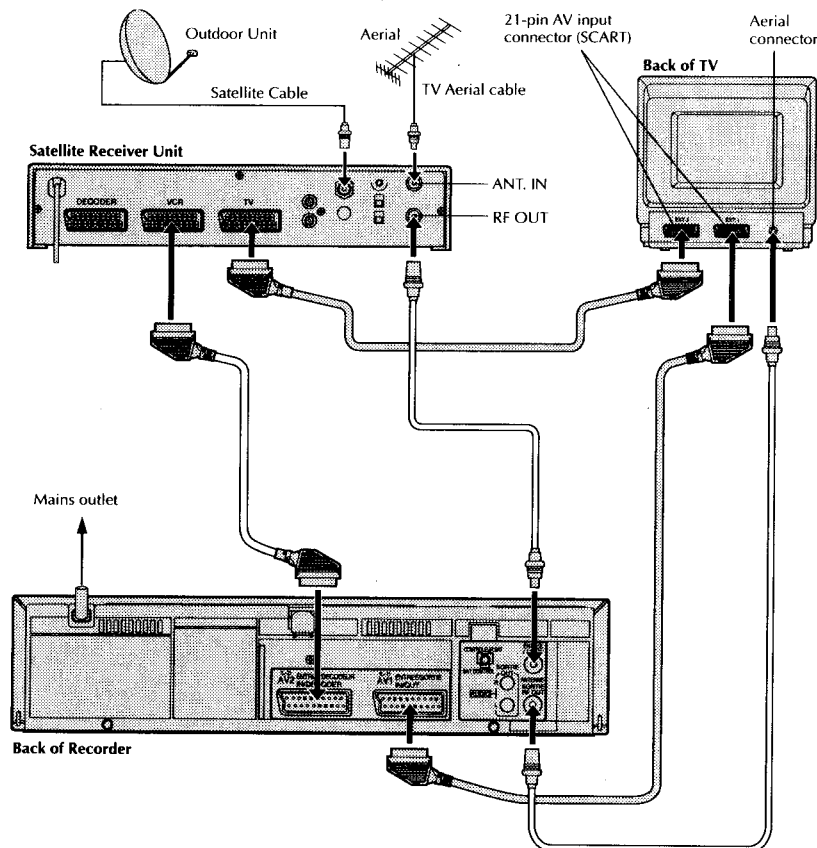

IMPORTANT

When you set "L-2 SELECT" to "SAT" (pg. 32), it is possible to view a satellite broadcast with the TV set to its AV mode even if the recorder is turned off. When the recorder is in Stop mode or recording, press **TV/VCR** on the remote control to turn off the VCR indicator on the display panel.


- If you turn on the recorder when the satellite receiver's power is off, nothing appears on the TV screen. In this case, turn on the satellite receiver, or set the TV to its TV mode, or press **TV/VCR** on the remote control to set the recorder to the video mode.

NOTE:

Refer to the instructions supplied with your satellite receiver.

Before performing the following steps:

- Make sure the satellite receiver is connected to the recorder's AV2 (L-2) IN/DECODER connector. (pg. 26)
- Programme the timer on the satellite receiver.
- Insert a cassette with the safety tab in place.

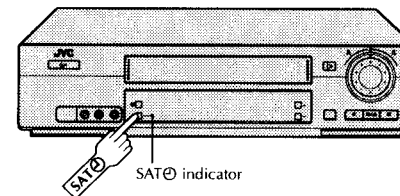

ATTENTION

- Be sure not to turn on the satellite receiver before the programme is executed; otherwise, the recorder will start recording when the satellite receiver's power is turned on.
 - If you have connected another appliance other than a satellite receiver to the AV2 (L-2) IN/DECODER connector, be sure not to engage the Auto Satellite Prog Rec mode; otherwise, the recorder will start recording when the connected appliance's power is turned on.
 - Auto Satellite Prog recording and timer-recording cannot be done at the same time.
 - When you press and hold the recorder's SAT button to engage the Auto Satellite Prog Rec mode, if the SAT indicator does not light but instead blinks quickly even though your satellite receiver's power is off, Auto Satellite Prog Recording will not work properly with that satellite receiver.
- If this is the case, perform "Express Timer Programming" (pg. 18) to timer-record a satellite programme.
- *Some satellite receivers output signals even if the power is off. Auto Satellite Prog Recording is not possible with those satellite receivers.

ACCESS MAIN MENU SCREEN


Press **MENU**.

ACCESS MODE SET SCREEN

Move the highlight bar (pointer) to "MODE SET" by pressing Δ or ∇ , then press **OK** or $\triangleright$.

SELECT L-2 SELECT MODE

Move the highlight bar (pointer) to "L-2 SELECT", by pressing Δ or ∇ , then press **OK** or $\triangleright$ to set to "SAT" or "L-2". Then press **MENU**.

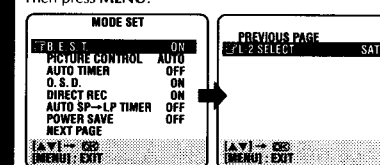

SET TAPE SPEED

Press **SP/LP** (///) to set the tape speed.

ENGAGE AUTO SATELLITE PROG REC MODE



Press and hold **SAT** for about 2 seconds. The SAT indicator lights up and the recorder turns off automatically.

- To disengage the Auto Satellite Prog Rec mode, press **SAT**. The SAT indicator goes off.
- If the recorder's power is off, it is not possible to engage the Auto Satellite Prog Rec mode.

NOTES:


- Auto Satellite Prog recording is possible with the AV2 (L-2) IN/DECODER connector only.
- When the Auto Satellite Prog Rec mode is engaged or the recorder's power is turned off after Auto Satellite Prog recording is finished, the recorder will not enter the Timer mode even though "AUTO TIMER" is set to "ON".
- After Auto Satellite Prog recording, the number of recorded programmes will not be displayed on the front display panel for the Instant ReView function (pg. 24).
- For timer programming of the satellite receiver, refer to the instruction manual of the satellite receiver.
- Auto Satellite Prog recording is not possible if your satellite receiver does not have a timer.
- The SAT indicator blinks while Auto Satellite Prog recording is in progress.
- Pressing the recorder's $\odot$ button while Auto Satellite Prog recording is in progress turns off the recorder's power and disengages the Auto Satellite Prog Rec mode.
- If there is more than one satellite programme you wish to record with Auto Satellite Prog Recording, it is not possible to set a different tape speed for each; the tape speed selected in step 4 will apply to all the programmes for Auto Satellite Prog recording.
- The B.E.S.I. system (pg. 22) does not work while Auto Satellite Prog recording is in progress.
- Just Clock (pg. 38) does not work when the Auto Satellite Prog Rec mode is engaged.
- Depending on the type of satellite receiver, the recorder may not record a short portion at the beginning of the programme or may record slightly longer than the actual length of the programme.
- If you engage the Auto Satellite Prog Rec mode when the satellite receiver's power is on, the recorder will not start Auto Satellite Prog recording even though the SAT indicator blinks. When the satellite receiver shuts off once and is turned back on again, the recorder starts recording.
- You can also record a programme from your cable system in the same way if the system has a timer and is connected to the recorder's AV2 (L-2) IN/DECODER connector.

Playback Picture Adjustment

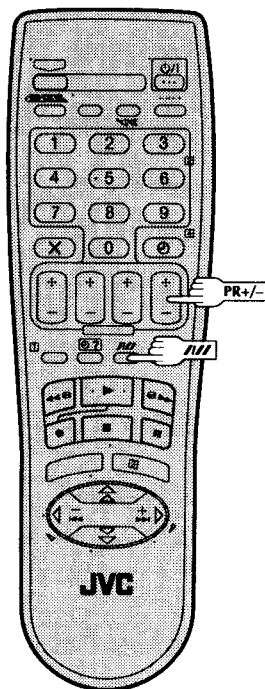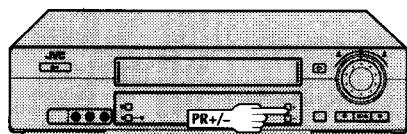

Manual Tracking

Your video recorder is equipped with automatic tracking control. For most tapes this will automatically adjust the tracking to suit the particular tape you are playing. In some circumstances it may be necessary to make manual tracking adjustments. This is usually only associated with old or worn tapes or recordings made on old or worn recorders. If the automatic tracking control fails to operate correctly you will see noise bars across the picture as shown on the left below. To correct this you can override the automatic control and adjust the tracking manually by pressing the **PR** buttons.



1 OVERRIDE AUTOMATIC TRACKING

Press **IIII** on the remote to engage manual tracking.

2 ADJUST TRACKING MANUALLY

Press **PR +** or **-** to adjust tracking.

3 RETURN TO AUTOMATIC TRACKING


Press **IIII** on the remote to re-engage automatic tracking.

NOTE:

When a new tape is inserted, the recorder returns to the automatic tracking mode automatically.

Minimizing Picture Degradation While Editing

Turn on the TV and select the VIDEO channel (or AV mode).

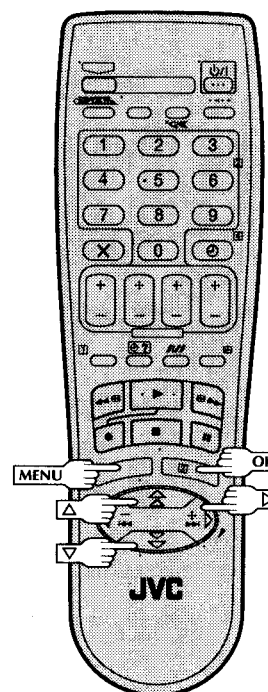

Picture Control

This feature helps you to adjust the playback picture quality according to your preference. *The default setting is "AUTO."

1 ACCESS MAIN MENU SCREEN

Press **MENU**.

2 ACCESS MODE SET SCREEN

Move the highlighted bar (pointer) to "MODE SET" by pressing **Δ** or **∇**, then press **OK** or **▷**.

3 SELECT PICTURE CONTROL SET MODE

Move the highlighted bar (pointer) to "PICTURE CONTROL" by pressing **Δ** or **∇**, then press **OK** or **▷** to select the desired mode.

AUTO: Provides optimised picture benefits of B.E.S.T. Picture System. Normally select "AUTO".

EDIT: Minimizes picture degradation during editing (recording and playback).

SOFT: Reduces image coarseness when viewing overplayed tapes containing a lot of noise.

SHARP: Clearer, sharper-edged picture when viewing images with lots of flat, same-coloured surfaces such as cartoons.

MODE SET	
B.E.S.T.	ON
PICTURE CONTROL	AUTO
AUTO TIMER	OFF
O.S.D.	ON
DIRECT REC	ON
AUTO SP-LP TIMER	OFF
POWER SAVE	OFF
NEXT PAGE	OFF
Δ ∇ → ←	END
ENTER	EXIT

NOTES:

- When you select "EDIT", "SOFT" or "SHARP", the selected mode will not change until you select again.
- When you select "EDIT" to dub tapes, be sure to select "AUTO" after you finish dubbing the tapes.



4 RETURN TO NORMAL SCREEN

Press **MENU**.

NOTES:

- When "B.E.S.T." is "OFF", "PICTURE CONTROL" switches automatically from "AUTO" to "NORM".
- Select "EDIT" when you are dubbing tapes. Refer to page 30 or 31.

Edit From A Camcorder

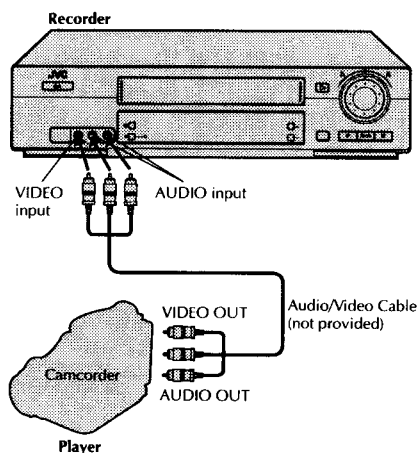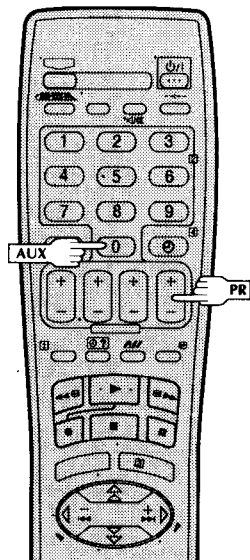


You can use a camcorder as the source player and your video recorder as the recorder.

- 1 MAKE CONNECTIONS**
Connect the camcorder's AUDIO/VIDEO OUT connectors to the recorder's front panel AUDIO/VIDEO input connectors.
• When using a monaural camcorder, connect its AUDIO OUT connector to the AUDIO L input connector on your recorder.
- 2 SET RECORDER'S INPUT MODE**
Press **AUX** and/or **PR** so that "F-1" appears in place of a preset position number.
- 3 SET EDIT MODE**
See "Picture Control" on page 29.
- 4 START CAMCORDER**
Engage its Play mode.
- 5 START RECORDER**
Engage its Record mode.

NOTES:

- All necessary cables can be obtained from your dealer.
- You can also use another video recorder as the player instead of a camcorder.
- When you select "EDIT" to dub tapes in step 3, be sure to select "AUTO" (or "NORM" when "B.E.S.T." is set to "OFF") after you finish dubbing the tapes.

Edit To Or From Another Video Recorder

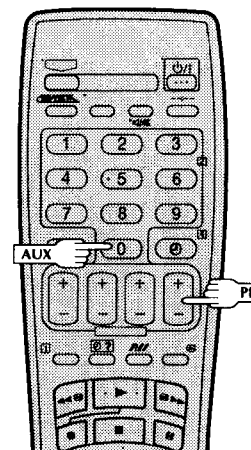


You can use your video recorder as the source player or as the recording deck.

- 1 MAKE CONNECTIONS**
Connect the player's 21-pin SCART connector to the recorder's 21-pin SCART connector as illustrated below.
When Using Your Video Recorder As The Source Player...
... connect its AV1 (L-1) IN/OUT connector to the recording deck.
When Using Your Video Recorder As The Recording Deck...
... connect its AV2 (L-2) IN/DECODER or AV1 (L-1) IN/OUT connector to the source player.
- 2 SET RECORDING DECK'S INPUT MODE**
Set to AUX. With this video recorder, press **AUX** and/or **PR** to select "L-1" for the AV1 (L-1) IN/OUT connector, or "L-2" for the AV2 (L-2) IN/DECODER connector, depending on the connector being used.
• When using the AV2 (L-2) IN/DECODER connector, set "L-2 SELECT" to the appropriate mode. (pg. 32)
- 3 SET EDIT MODE**
See "Picture Control" on page 29.
- 4 START SOURCE PLAYER**
Engage its Play mode.
- 5 START RECORDING DECK**
Engage its Record mode.

NOTES:

- All necessary cables can be obtained from your dealer.
- When you select "EDIT" to dub tapes in step 3, be sure to select "AUTO" (or "NORM" when "B.E.S.T." is set to "OFF") after you finish dubbing the tapes.
- When you use this recorder as the player for editing, be sure to set "O.S.D." to "OFF" before starting pg. 33).


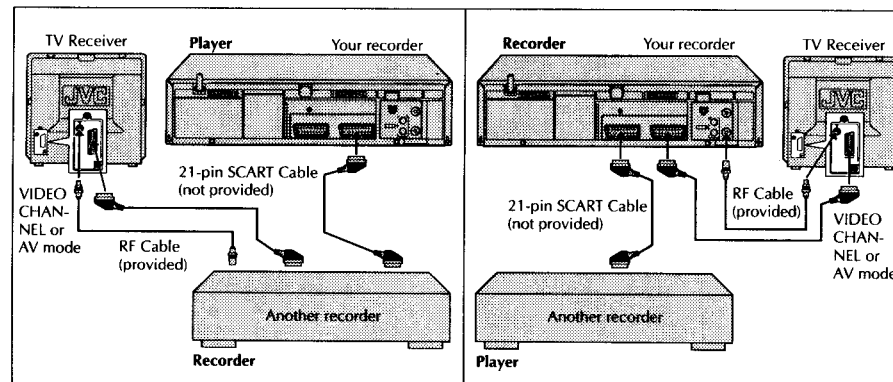


L-2 SELECT Setting

Set "L-2 SELECT" to the appropriate mode depending on the type of unit connected to the rear panel AV2 (L-2) IN/DECODER connector of this recorder.


- 1 Press **MENU** to access the Main Menu screen.
- 2 Press Δ to move the highlight bar (pointer) to "MODE SET", then press **OK** or $\triangleright$.
- 3 Press Δ to move the highlight bar (pointer) to "L-2 SELECT".
- 4 Press **OK** or $\triangleright$ to select "L-2", "DECODER" or "SAT".
 - a-L-2 : To use this recorder as the recording deck with the player connected to the AV2 (L-2) IN/DECODER connector, or to use the satellite receiver connected to the AV2 (L-2) IN/DECODER connector.
 - b-DECODER : To use a decoder connected to the AV2 (L-2) IN/DECODER connector.
 - c-SAT : To view a satellite programme with the TV set while the recorder is turned off. (pg. 26)
- 5 Press **MENU** to return to normal screen.

- If you have a satellite receiver or a decoder connected to the AV2 (L-2) IN/DECODER connector, be sure to set "L-2 SELECT" back to appropriate mode after editing.
- If you're not connecting a satellite receiver or a decoder to the AV2 (L-2) IN/DECODER connector, leave "L-2 SELECT" set to "L-2".
- The default setting is "L-2"; if the recorder's memory backup has expired due to a power cut or because the AC was removed from the recorder, "L-2" will be automatically selected when the power is restored to the recorder. If you are using a satellite receiver or a decoder, be sure to set "L-2 SELECT" back to appropriate mode.
- When "L-2 SELECT" is set to "SAT", "SAT" appears on screen or display panel instead of "L-2" or "L2".

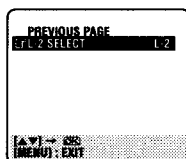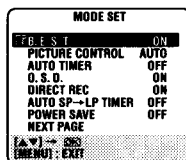


Other Functions

Turn on the TV and select the VIDEO channel (or AV mode).

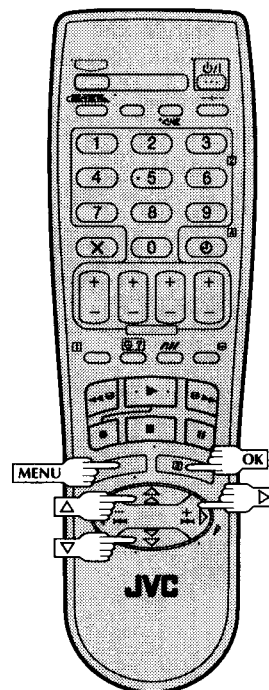

The superimposed indication on the TV screen tells you what the recorder is doing.

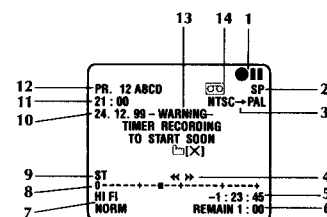

On-Screen Display

You can choose whether or not to have various operational indicators appear on screen, by setting this function ON or OFF.

ACCESS MAIN MENU SCREEN


Press **MENU**.

ACCESS MODE SET SCREEN

Move the highlight bar (pointer) to "MODE SET" by pressing Δ , then press **OK** or $\triangleright$.

ENABLE/DISABLE ON-SCREEN DISPLAY

The default setting is "ON", so if you want on-screen displays, leave the setting as it is and go to step 4. If you don't want the displays to appear, press Δ to move the highlight bar (pointer) to "O.S.D." and press **OK** or $\triangleright$ to set "O.S.D." to "OFF".

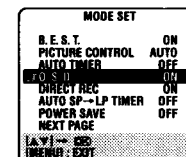

RETURN TO NORMAL

Press **MENU**.


NOTES:

- When you use this recorder as the player for editing, be sure to set "O.S.D." to "OFF" before starting.
- During playback, the operation mode indicators may sometimes be disturbed depending on the type of tape being used.

- 1- Operation mode indicators
- 2- Tape speed SP/LP/EP (EP is for NTSC playback only)
- 3- NTSC playback display (pg. 36)
- 4- Tape direction
- 5- Counter display
- 6- Tape remaining time indicator (pg. 15)
- 7- Audio mode display (pg. 25)
- 8- Tape position indicator (pg. 12)
- 9- Type of Broadcast (pg. 25)
- 10- Current day/month/year
- 11- Clock display
- 12- Channel position number and station name/Aux. indicator (L-1, L-2, SAT* or F-1)
- * When "L-2 SELECT" is set to "SAT" (pg. 32), "SAT" appears instead of "L-2".
- 13- Timer warning display (pg. 17, 19)
- 14- Cassette loaded mark

Power Save Mode

You can reduce the power consumption while the recorder is turned off.

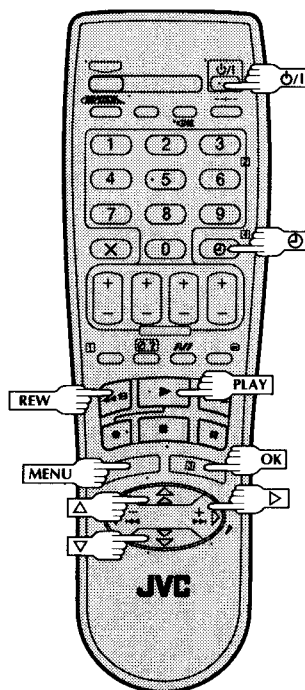

1 ACCESS MAIN MENU SCREEN

Press MENU.


2 ACCESS MODE SET SCREEN

Press Δ / ∇ to move the highlight bar (pointer) to "MODE SET", then press OK or $\triangleright$.



3 SELECT POWER SAVE MODE

Press Δ / ∇ to move the highlight bar (pointer) to "POWER SAVE", then press OK or $\triangleright$ to set to "ON".

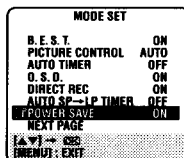

4 RETURN TO NORMAL SCREEN

Press MENU.

NOTES:

- During Power Save, the display panel will be turned off.
- The Just Clock function (pg. 38) does not work while the Power Save mode is engaged.
- While the recorder is in the Power Save mode, the picture may be distorted momentarily when you turn on/off the recorder.
- Power Save does not work when ...
 - ... the recorder is in the Timer mode.
 - ... the recorder's power is turned off after timer-recording (or Instant Timer Recording).
 - ... the Auto Satellite Prog Recording mode is engaged (pg. 26).
 - ... "L-2 SELECT" is set to "DECODER" or "SAT" (pg. 32).

Auto Timer


When the Auto Timer is set to ON the timer is automatically engaged when the recorder power is turned off and automatically disengaged when the recorder is powered back on.

1 ACCESS MAIN MENU SCREEN

Press MENU.


2 ACCESS MODE SET SCREEN

Press Δ / ∇ to move the highlight bar (pointer) to "MODE SET", then press OK or $\triangleright$.

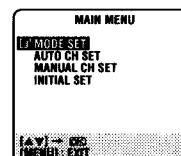

3 SELECT MODE

Press Δ / ∇ to move the highlight bar (pointer) to "AUTO TIMER", then press OK or $\triangleright$ to select either "ON" or "OFF".

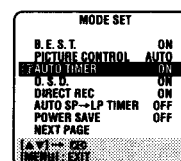

4 RETURN TO NORMAL SCREEN

Press MENU.

NOTE:

For safety, when Auto timer is set to "OFF", all other recorder functions are disabled while the Timer mode is engaged. To disengage the timer, press $\ominus$ (TIMER).

Next Function Memory

The Next Function Memory "tells" the recorder what to do after rewinding. Before continuing, make sure the recorder is in the Stop mode.

- a- For Automatic Start Of Playback After Tape Rewind ...
 - ... press REW, then press PLAY within 2 seconds.
- b- For Automatic Power Off After Tape Rewind ...
 - ... press REW, then press $\ominus$ /I within 2 seconds.
- c- For Automatic Timer Standby After Tape Rewind ...
 - ... press REW, then press $\ominus$ (TIMER) within 2 seconds.

Auto SP $\rightarrow$ LP Timer

If, when timer-recording in SP mode, there is not enough tape to record the entire programme, the recorder automatically switches to LP mode to allow complete recording.

For Example ...

Recording a programme of 210 minutes in length onto a 180-minute tape

Approximately 150 minutes Approximately 60 minutes

SP mode	LP mode
Total 210 minutes	

Make sure you set "AUTO SP $\rightarrow$ LP TIMER" to "ON" at the Mode Set screen before the timer-recording starts.

1 ACCESS MAIN MENU SCREEN


Press MENU.

2 ACCESS MODE SET SCREEN

Press Δ / ∇ to move the highlight bar (pointer) to "MODE SET", then press OK or $\triangleright$.

3 SELECT MODE

Press Δ / ∇ to move the highlight bar (pointer) to "AUTO SP $\rightarrow$ LP TIMER", then press OK or $\triangleright$ to select "ON".

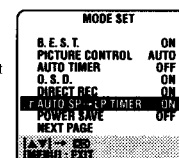

4 RETURN TO NORMAL SCREEN

Press MENU.

NOTES:

- The Auto SP $\rightarrow$ LP Timer feature is not available during ITR (Instant Timer Recording), and the feature will not work properly with any tapes longer than E-180 or with some tapes of shorter lengths.
- If you have programmed the recorder to timer-record 2 or more programmes, the second programme and those thereafter may not fit on the tape if you set "AUTO SP $\rightarrow$ LP TIMER" to "ON". In this case, make sure the mode is not engaged, then set the tape speed manually during timer programming.
- In order to ensure that the recording fits on the tape, this feature may leave a short non-recorded section at the end of the tape.
- There may be some picture noise and sound disturbance at the point on the tape where the recorder switches from SP to LP mode.
- If you perform timer recording with both PDC and the Auto SP $\rightarrow$ LP Timer activated, and the programme goes beyond its originally scheduled length, there may be times when the programme cannot be recorded in its entirety.

Repeat Playback

Your video recorder can automatically play back the whole tape 100 times repeatedly.



- 1 START PLAYBACK**
Press **PLAY**.
- 2 ACTIVATE REPEAT PLAYBACK**
Press **PLAY** and hold for over 5 seconds, then release.
 - The Play indicator (▶) on the display panel blinks slowly.
 - The tape plays 100 times automatically, and then stops.
- 3 STOP PLAYBACK**
Press **STOP** at any time to stop playback.


NOTE:

Pressing **PLAY**, **REW**, **FF** or **PAUSE** also stops Repeat Playback.

NTSC Playback


Your video recorder is equipped with NTSC circuitry that can play back NTSC tapes.

- 1 LOAD A CASSETTE**
Insert a cassette recorded in NTSC.
- 2 START PLAYBACK**
Press **PLAY**.
 - "NTSC→PAL" appears on the screen for about 5 seconds.
 - Some TVs shrink the picture vertically and place black bars at the top and bottom of the screen. This is not a malfunction on the part of either the video recorder or the TV.
 - The picture may roll up and down. This can be corrected using the V-HOLD control found on some TVs. (This cannot be corrected if the TV does not have a V-HOLD control.)
 - The counter and tape remaining time readings will be incorrect.
 - During search, still, or frame-by-frame playback, the picture will be distorted, and there may be a loss of colour.
 - Depending on the type of TV, the top and bottom portions of superimposed displays may be cut off during NTSC playback.

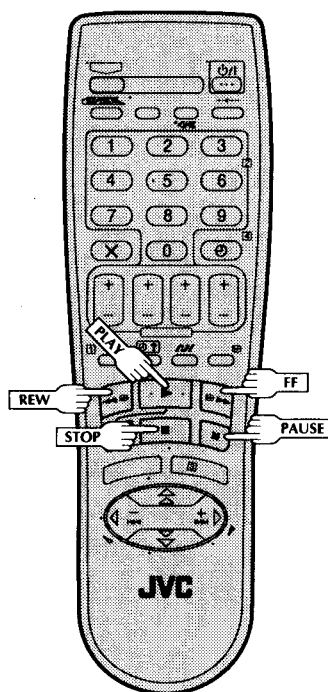

Connection To A Stereo System

These instructions enable you to connect your video recorder to your Hi-Fi stereo system (if you have one) and listen to the soundtrack through the stereo.

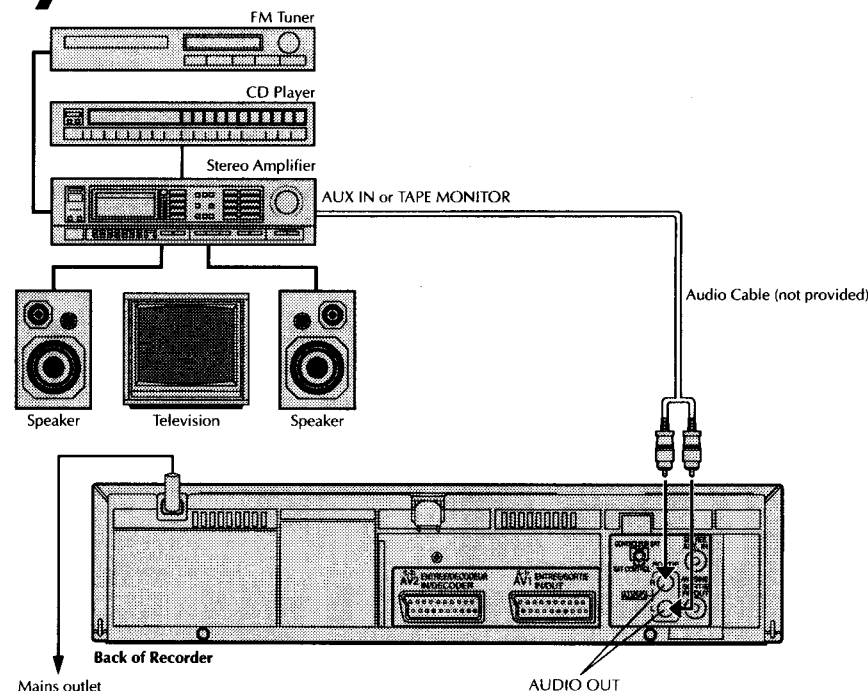

MAKE CONNECTIONS

- 1** Connect the AUDIO OUT L and R connectors on your video recorder to the AUX IN or TAPE MONITOR terminals on your stereo system's receiver or amplifier.

NOTES:


- When connecting your recorder's audio output connectors to a stereo amplifier, make sure you connect L and R correctly.
- If you can receive NICAM TV broadcasts in your area, this recorder can record them independently of the TV set and play them back through the connected stereo system.
- When listening to sound through the connected stereo system, turn the TV's volume down completely.

CAUTIONS:

- This recorder has a dynamic range of more than 80 dB with regards to its Hi-Fi audio capability. It is recommended that you check the maximum level if you are going to listen to the Hi-Fi audio signals through a stereo amplifier. A sudden surge in the input level to the speakers may damage them.
- Some speakers and televisions are specially shielded to prevent television interference. If both are of the non-shielded type, do not place the speakers adjacent to the TV set as this can adversely affect the video playback picture.

Clock Set

Turn on the TV and select the VIDEO channel (or AV mode).

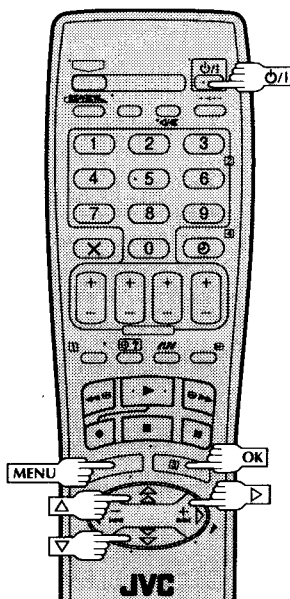

Just Clock

The Just Clock function provides accurate time keeping through automatic adjustments at regular intervals, by reading data from a PDC signal. The Just Clock option can be set "ON" or "OFF" at the Clock Set screen (the default setting is "ON"). Press OK until the Just Clock setting begins blinking, then press Δ / ∇ to change the setting.

IMPORTANT: If you turn the Just Clock function off, the accuracy of your recorder's built-in clock may be impaired, which could adversely affect timer recording.

NOTES:

- Just Clock (when set to "ON") adjusts the recorder's built-in clock every hour, except for 23:00, 0:00, 1:00 and 2:00.
- Just Clock is not effective when...
 - the recorder's power is on.
 - the recorder is in the Timer mode.
 - a difference of more than 3 minutes exists between the built-in clock's time and the actual time.
 - the recorder is in the Auto Satellite Prog Rec mode (pg. 26).
 - "L-2 SELECT" is set to "SAT". (pg. 32)
- If Just Clock is set to "ON", the recorder's clock is automatically adjusted at the start/end of Summer Time.
- Just Clock may not function properly in poor reception conditions.

IMPORTANT

If you performed Auto Set Up (pg. 6), Preset Download (pg. 7) or Auto Channel Set (pg. 42), without ever having set the clock previously, the recorder's built-in clock is also set automatically.

Perform the following steps only if —

- Auto Clock Set has not been performed correctly by Auto Set Up, Preset Download or Auto Channel Set.
- the recorder's memory backup has expired.
- or
- you want to change Just Clock setting ("Just Clock" in the left column).

TURN THE RECORDER ON

Press Δ / ∇ .

ACCESS MAIN MENU SCREEN


Press MENU.

ACCESS INITIAL SET SCREEN

Move the highlight bar (pointer) to "INITIAL SET" by pressing Δ / ∇ , then press OK or $\triangleright$.

ACCESS CLOCK SET SCREEN

Move the highlight bar (pointer) to "CLOCK SET" by pressing Δ / ∇ , then press OK or $\triangleright$. The Clock Set screen appears.

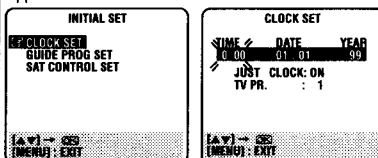

SET DATE AND TIME

Press Δ / ∇ to set the time, then press OK or $\triangleright$. The "date" display begins blinking. Repeat the same procedure to set the date and year.

- When you set the time, press and hold Δ / ∇ to change the time by 30 minutes.
- When you set the date, press and hold Δ / ∇ to change the date by 15 days.

SET JUST CLOCK

The default setting is "ON". Set as desired by pressing Δ / ∇ , then press OK or $\triangleright$.

- For the just clock function, Δ / ∇ "Just Clock" on the left.
- If you set to "OFF", you can disregard the next step as you won't be able to receive regular clock adjustments.

SET CLOCK DATA SOURCE PRESET

The recorder is preset to receive clock setting and adjustment data from preset position 1. Press Δ / ∇ to set the preset position to the number representing the station transmitting clock setting data (BBC1, BBC2, etc.), then press OK or $\triangleright$.

START CLOCK OPERATION

Press MENU.

VIDEO Plus+ Setup

IMPORTANT

Normally, Auto Set Up (pg. 6), Preset Download (pg. 7) or Auto Channel Set (pg. 42) sets the Guide Program Numbers automatically. You need to set the Guide Program Numbers manually only in the following cases.

- When timer-programming with VIDEO Plus+, the preset position, where the station you wish to record is received on your recorder, is not selected or when you add a channel after Auto Set Up or Auto Channel Set has taken place.
- Set the Guide Program Number for that station manually.
- When you wish to timer-record a satellite programme with VIDEO Plus+.
- Set the Guide Program Numbers for all satellite broadcasts received on your satellite receiver.

Turn on the TV and select the VIDEO channel (or AV mode).

Guide Program Number Set

ACCESS MAIN MENU SCREEN

Press MENU.

ACCESS INITIAL SET SCREEN


Press Δ / ∇ to move the highlight bar (pointer) to "INITIAL SET", then press OK or $\triangleright$.

ACCESS GUIDE PROG SET SCREEN

Press Δ / ∇ to move the highlight bar (pointer) to "GUIDE PROG SET", then press OK or $\triangleright$.

ENTER GUIDE PROG NUMBER


Press Δ / ∇ to enter the Guide Program number for the desired station as shown in the TV listings. Then press OK or $\triangleright$.

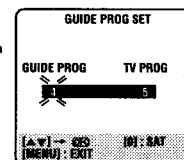

(Ex.) When inputting the Guide Program number 4 for CH4.

ENTER RECEIVING PRESET POSITION NUMBER

Press the NUMBER key "0" to select "TV PROG" or "SAT". Then press Δ / ∇ to input the number of the preset position on which the Guide Program number's broadcast is received by the recorder or the satellite receiver. Then press OK or $\triangleright$.

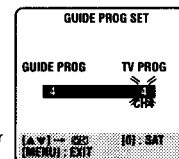

(Ex.) If CH4 is received on preset position 4.

- To timer-record a satellite programme with VIDEO Plus+, you need to install the provided Satellite Controller and perform the procedure described in "Satellite Receiver Control Setting" (pg. 10).
- Repeat steps 4 and 5 as necessary.

RETURN TO NORMAL SCREEN



Press MENU.

Guide Program Number

"Guide Program (GUIDE PROG) number" refers to the assigned TV station numbers, according to broadcast area, for VIDEO Plus+ timer recording. The Guide Program numbers can be found in most TV listings.

Video Channel Set

Video Channel (RF Output Channel) is the channel on which your TV receives picture and sound signals from the video recorder through the RF cable.

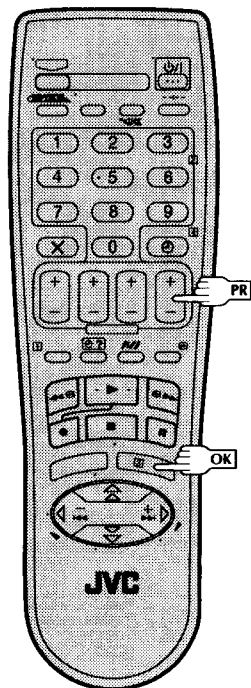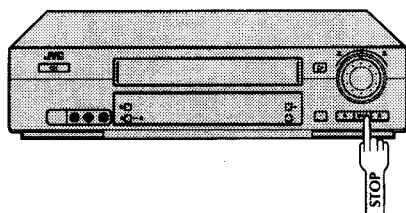

IMPORTANT

Perform the following steps only if —
 — Video Channel Set has not been done correctly by the Auto Set Up function (pg. 6).
 — interference appears in the TV picture after you have moved to a different area or a new station has started broadcasting in your area.
 — you change the connection between your recorder and TV from RF connection to AV connection, or vice versa.

- If you have connected the video recorder to your TV via both the provided RF cable and a 21-pin SCART cable (AV connection), you do not need the video channel so you have to set the video channel to off. — Go to "With AV Connection" below.
- If you have connected the video recorder to your TV via the provided RF cable only (RF connection), you have to set the correct video channel — Go to "With RF Connection" on page 41.

With AV Connection

Before performing the following procedure, make sure that:

- the mains power cord is plugged into the mains outlet.
- the video recorder is turned off and there is no cassette inserted in the recorder.
- batteries have been installed in the remote control.

ACCESS VIDEO CHANNEL SET MODE

- 1 Press and hold down **STOP** on the recorder until the display panel shows the following.



SET VIDEO CHANNEL

- 2 Press **PR -** until the display panel shows "_OUT -".



- Now the video channel is set to off.

EXIT VIDEO CHANNEL SET MODE



- 3 Press **OK**.

To view picture signals from the video recorder, set your TV to its AV mode. Refer to the instructions supplied with your TV set for how to do this.

With RF Connection

Before performing the following procedure, make sure that:

- the mains power cord is plugged into the mains outlet.
- the video recorder is turned off and there is no cassette inserted in the recorder.
- the connected TV is turned on.
- batteries have been installed in the remote control.

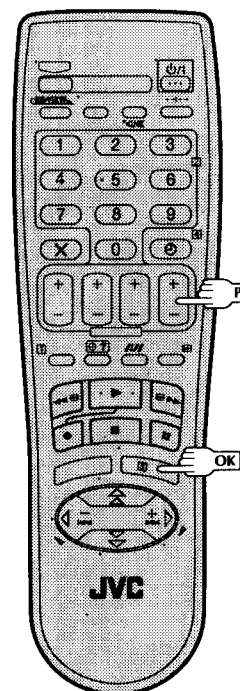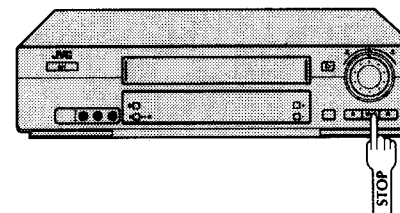

ACCESS VIDEO CHANNEL SET MODE

- 1 Press and hold down **STOP** on the recorder until the display panel shows the following.



SET VIDEO CHANNEL

- 2 Press **PR +** or **-** to set the video recorder to a vacant channel between 22 and 69 which is not occupied by any local station in your area. Refer to list on page 48 for details of broadcast stations in your area.

(Ex.) If channel 36 is available in your area



Then set your TV to UHF channel 36. (Refer to the instructions supplied with your TV set for how to do this.)

- If the two vertical white bars appear clearly on the screen as shown in the illustration at bottom left, go to step 3.
- If the two vertical white bars do not appear clearly, re-set the video recorder to another vacant channel and try again.

IMPORTANT


- If you set the video recorder to a channel which is occupied by a local station or has neighbouring channels that are occupied by local stations, the picture reception quality will be affected and some interference noise will appear on the TV screen. Be sure to select a vacant channel which has no broadcast on neighbouring channels.
- If you cannot obtain the two vertical white bars clearly with any channel between 22 and 69, consult your JVC dealer.

EXIT VIDEO CHANNEL SET MODE

- 3 Press **OK**.

To view picture signals from the video recorder, set your TV to the Video Channel.


TEST SIGNAL



The channel on which the screen on the left appears clearly in step 2 is your Video Channel.

Tuner Set

Turn on the TV and select the VIDEO channel (or AV mode).

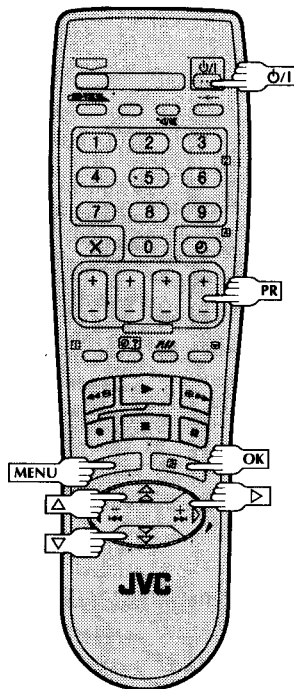

IMPORTANT

Perform the following steps only if —

- Auto Channel Set has not been set correctly by Auto Set Up function (pg. 6) or Preset Download (pg. 7).
- you have moved to a different area or if a new station starts broadcasting in your area.

Your recorder needs to memorise all necessary stations in preset positions in order to record TV programmes. Auto Channel Set automatically assigns all receivable stations in your area to call them up by using the **PR** buttons without going through any vacant channel.

Auto Channel Set

TURN ON THE RECORDER


Press **PH**.

ACCESS MAIN MENU SCREEN


Press **MENU**.

PERFORM AUTO CHANNEL SET

Move the highlight bar (pointer) to "AUTO CH SET" by pressing **Δ** or **▽**, then press **OK** or **▷**.

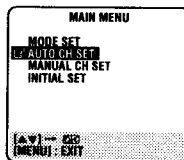

- When you have connected the video recorder to a TV offering T-V Link via the AV connection (pg. 5) and the TV is turned on, the recorder automatically performs the Preset Download (pg. 7) even if you select "AUTO CH SET".

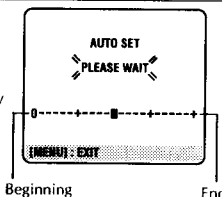

- The Auto Set screen appears, and remains on screen while the recorder searches for receivable stations. As Auto Channel Set progresses, the "■" mark on the screen moves from left to right. Wait until the screen as shown in step 4 appears.
- Auto Channel Set usually takes about 4 – 12 minutes; the duration varies by area.

VIEW CONFIRMATION SCREEN

4

After "SCAN COMPLETED" is displayed on the screen for about 5 seconds, a Confirmation screen looking like the one on the right appears. The stations your recorder located appear on a Confirmation screen — preset positions (PR), channels (CH) and station names (ID — pg. 47). The blueback screen and the programme currently being broadcast by the station which is blinking appear alternately for 8 seconds each.

To view the next page, use the **Δ** **▽** **◀** **▶** button on the remote control.

PR	CH	ID	PR	CH	ID
01	20	BBCT	08	---	---
02	23	ITV	09	---	---
03	23	ITV	10	---	---
04	30	CH4	11	---	---
05	37	CH5	12	---	---
06	---	---	13	---	---
07	---	---	14	---	---

- The Guide Program numbers will also be set automatically during Auto channel Set.

RETURN TO NORMAL SCREEN

5

Press **MENU**.


- Using the Confirmation screen, you can skip or add preset positions, enter station names and perform other operations. Refer to pages 44 – 48 for the procedures.
- Depending on reception conditions, the stations may, on occasion, not be stored in order, and the station names may not be stored correctly.

IMPORTANT

- In certain reception conditions, station names may not be stored correctly, and auto Guide Program Number Set may not work properly. If the Guide Program numbers are not set properly, when you timer-record a TV programme using VIDEO Plus+, the recorder will record a TV programme of a different station. When programming the timer using VIDEO Plus+, be sure to check that the preset position corresponding to the broadcasting station you wish to record has been selected (pg. 16, "VIDEO Plus+ Timer Programming").
- Your video recorder memorizes all detected stations even if reception of some of them is poor. In these cases picture quality may be poor. To delete those stations which have an unacceptable picture **▶** "Delete A Channel" on page 45.

NOTES:

- Fine tuning is performed automatically during Auto Channel Set. If you wish to perform it manually, refer to page 45.
- If, for any reason, you perform Auto Channel Set when the aerial cable is not connected properly, "SCAN COMPLETED -NO SIGNAL-" appears on the screen in step 4. When this happens, make sure of the aerial connection and press **OK**; Auto Channel Set will take place again.

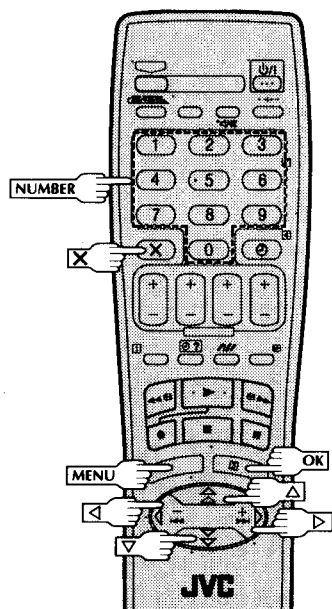

Storing Channels Manually

To store channels that were not stored during Auto Set Up (☞ pg. 6), Preset Download (☞ pg. 7) or Auto Channel Set (☞ pg. 42).

1 ACCESS MAIN MENU

Press **MENU**.

2 ACCESS CONFIRMATION SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "MANUAL CH SET", then press **OK** or $\triangleright$. The Confirmation screen appears.

3 SELECT POSITION

Press $\Delta \nabla \triangleleft \triangleright$ until an open position in which you want to store a channel begins blinking, then press **OK**. The Manual Channel Set screen appears.


(Ex.) To store in position 6.

PR	CH	ID	PR	CH	ID
01	26	BBC1	08	---	---
02	33	BBC2	09	---	---
03	23	ITV	10	---	---
04	30	CH4	11	---	---
05	37	CH5	12	---	---
06	---	---	13	---	---
07	---	---	14	---	---

The blueback screen and the programme currently being broadcast by the selected channel appear alternately for 8 seconds each.

4 SELECT BAND


Press $\Delta \nabla$ to change the band between CH (regular) and CC (cable), then press $\triangleright$.

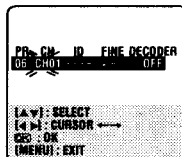

The blueback screen and the programme currently being broadcast by the selected channel appear alternately for 8 seconds each.

5 INPUT CHANNEL

Press the **NUMBER** keys to input the channel number you want to store.

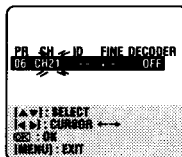

The blueback screen and the programme currently being broadcast by the selected channel appear alternately for 8 seconds each.

- To input the registered station name (ID - ☞ pg. 47), press $\triangleright$ until "L-2" (ID setting) begins blinking, then press $\Delta \nabla$.
- For fine tuning adjustment, press $\triangleright$ until "+/-" begins blinking, then press $\Delta \nabla$. While tuning, "+" or "-" appears.
- When "L-2 SELECT" is set to "L-2" or "SAT", the "DECODER" setting cannot be changed (☞ pg. 32).

6 ENTER NEW CHANNEL INFORMATION

Press **OK** and the Confirmation screen appears.

- Repeat steps 3 through 6 as necessary.

7 CLOSE CONFIRMATION SCREEN

Press **MENU**.

- To change positions, see "Change Station Preset Position" (☞ pg. 45).
- If you wish to set station names other than the ones registered in your recorder, ☞ "Set Stations (B)" on page 46.

ATTENTION

Guide Program numbers are not set when channels are stored manually. If an attempt is made at timer programming with VIDEO Plus+ in this state, the "GUIDE PROG SET" screen appears; set the Guide Program numbers on this screen, ☞ "ATTENTION - Regarding Guide Program Number Set" on page 17.

Or perform "Guide Program Number Set" (☞ pg. 39).

Delete A Channel

Perform steps 1 and 2 of "Storing Channels Manually" on page 44 to access the Confirmation screen before continuing.

1 SELECT ITEM

Press $\Delta \nabla \triangleleft \triangleright$ until the item you want to delete begins blinking.

2 DELETE CHANNEL

Press **X**.

- The item directly beneath the cancelled one moves up one line.
- Repeat steps 1 and 2 as necessary.

3 CLOSE CONFIRMATION SCREEN

Press **MENU**.

When Receiving A Scrambled Broadcast

1 SELECT DECODER MODE

Set "L-2 SELECT" to "DECODER" (☞ pg. 32).

2 ACCESS CONFIRMATION SCREEN

Perform steps 1 and 2 of "Storing Channel Manually" on page 44.

3 SELECT POSITION

Press $\Delta \nabla \triangleleft \triangleright$ to select the channel position broadcast-ing scrambled programmes, then press **OK** twice.

4 CHANGE DECODER SETTING

Press $\triangleright$ until "OFF" (decoder setting) begins blinking, and set it to "ON" by pressing $\Delta \nabla$.

5 RETURN TO CONFIRMATION SCREEN

Press **OK**.

- Repeat steps 3 through 5 as necessary.

6 CLOSE CONFIRMATION SCREEN

Press **MENU**.

NOTE:

Scrambled programmes are not currently broadcast in the U.K.

Change Station Preset Position

Perform steps 1 and 2 of "Storing Channels Manually" on page 44 to access the Confirmation screen before continuing.

1 SELECT ITEM

Press $\Delta \nabla \triangleleft \triangleright$ until the item you want to move begins blinking. Then press **OK** and the station name (ID) and its channel (CH) number begin blinking.

2 SELECT NEW POSITION

Press $\Delta \nabla \triangleleft \triangleright$ to move the station to the new preset position, then press **OK**.

Example: If you moved the station in position 4 to position 2, the stations originally in positions 2 and 3 each move down one space.

PR	CH	ID	PR	CH	ID	PR	CH	ID
01	26	BBC1	08	---	---	01	26	BBC1
02	23	ITV	09	---	---	02	23	ITV
03	30	CH4	10	---	---	03	30	CH4
04	37	CH5	11	---	---	04	37	CH5
05	---	---	12	---	---	05	---	---
06	---	---	13	---	---	06	---	---
07	---	---	14	---	---	07	---	---

- Repeat steps 1 and 2 as necessary.

3 CLOSE CONFIRMATION SCREEN

Press **MENU**.

Fine-Tuning Channels Already Stored

Perform steps 1 and 2 of "Storing Channels Manually" on page 44 to access the Confirmation screen before continuing.

1 SELECT CHANNEL TO FINE-TUNE

Press $\Delta \nabla \triangleleft \triangleright$ until the channel you want to tune begins blinking.

2 ACCESS MANUAL CHANNEL SET SCREEN

Press **OK** twice. The Manual Channel Set screen appears.

3 PERFORM TUNING

Press $\triangleright$ until "+/-" begins blinking, then press $\Delta \nabla$ until the picture is clearest. Then press **OK**.

- The Confirmation screen appears.
- Repeat steps 1 through 3 as necessary.

4 CLOSE CONFIRMATION SCREEN

Press **MENU**.

Set Stations (A)

Set station names that are registered in your recorder.

Perform steps 1 and 2 of "Storing Channels Manually" on page 44 to access the Confirmation screen before continuing.

1 SELECT ITEM

Press $\Delta \nabla$ until the item you want begins blinking.


2 ACCESS MANUAL CHANNEL SET SCREEN

Press **OK** twice.

3 SELECT NEW STATION

Press $\triangleright$ until the station name (ID) begins blinking, then press $\Delta \nabla$ until the new station's name (ID) you want to store begins blinking.

Registered station names (pg. 47) appear as you press $\Delta \nabla$.

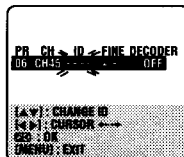

4 SWITCH STATIONS

Press **OK**.

- The Confirmation screen appears.
- Repeat steps 1 through 4 as necessary.

5 CLOSE CONFIRMATION SCREEN

Press **MENU**.

Set Stations (B)

Set station names other than the ones registered in your recorder.

Perform steps 1 and 2 of "Storing Channels Manually" on page 44 to access the Confirmation screen and then perform steps 1 and 2 of "Set Stations (A)" on the left before continuing.

1 SELECT STATION NAME CHARACTER

Press $\triangleright$ until the first letter of the station name begins blinking.



2 ENTER NEW CHARACTER

Press $\Delta \nabla$ to cycle through the characters (A-Z, 0-9, -, *, +, = (space)) and stop when the desired character is indicated, then press $\triangleright$ to enter. Enter the remaining characters the same way (maximum of 4). After entering all characters, press **OK**.

- The Confirmation screen appears.
- If you make a mistake, press $\triangleleft$ until the incorrect character begins blinking. Then enter the correct character by pressing $\Delta \nabla$.

3 CLOSE CONFIRMATION SCREEN

Press **MENU**.

NOTE:

The characters available for the station name (ID) are A-Z, 0-9, -, *, +, = (space) (maximum of 4).

TV Station And ID List

STATION NAME	ID*
Anglia TV	ANGL
ARD	ARD
ARTE	ARTE
BBC Group	BBC
BBC1	BBC1
BBC2	BBC2
Berlin 1	BLN1
Berlin 2	BLN2
Border TV	BORD
Bayern1	BR1
Bayern3	BR3
BRT1	BRT1
BRT2	BRT2
Children Ch	CHLD
Canal +	CH+
CNN	CNN
Channel TV	CHNL
Central TV	CNTR
Channel 4	CH 4
Channel 5	CH 5
DRS	DRS
DR TV	DRTV
DSF	DSF
Euronews	EURN
Euronews	EURO
Eurosports	EURS
France1	FR1
France2	FR2
France3	FR3
Granada TV	GRNA
Grampian TV	GRMP
Hessen1	HR1
Hessen3	HR3
HRT	HRT
HTV	HTV
ITV Network	ITV
Kabelkanal	KABL
London	LNDN
MDR	MDR
MTV	MTV
Nord3	N3
NDR1	NDR1
NDR3	NDR3
NED1	NED1
NED2	NED2
NED3	NED3
Network 2	NET2
NRK	NRK
N-TV	N-TV
Offener Kanal	OKAN
ORF1	ORF1
ORF2	ORF2
ORF3	ORF3
OWL 3	OWL3
Premiere	PRM1
PRO7	PRO7
RAI1	RAI1
RAI2	RAI2
RAI3	RAI3
RB1	RB1
RB3	RB3
Rikisutvarpid-S	RKPS
RTBF 1	RTB1
RTBF 2	RTB2
RTE 1	RTE1
RTL	RTL
RTL 2	RTL2
RTP	RTP

STATION NAME	ID*
SAT	SAT
SAT 1	SAT1
Scottish TV	SCOT
SC4	SC4
SDR	SDR
SDR1	SDR1
SFB1	SFB1
SFB3	SFB3
SKY	SKY
Sky One	SKY1
Sky Net	SKYN
Sport	SPRT
SR 1	SR1
Super RTL	SRTL
STV Test	STVT
STV 1	STV1
STV 2	STV2
Suedwest3	SWR
SWF 1	SWF1
Schweiz4	SWZ4
TYNE TEES	TEES
Text	TEXT
TF1	TF1
TNT int	TNT
TRT int	TRT
TSI	TSI
TSR	TSR
TSW	TSW
TVE	TVE
TV Polonia	TVPA
TVP 1	TVP1
TVP 2	TVP2
TVS	TVS
TV2	TV2
TV5	TV5
Tele Zurich	TZUR
Ulster TV	ULST
Veronica	VERN
VIVA	VIVA
VIVA2	VIV2
VOX	VOX
VTM	VTM
VT4	VT4
West1	WDR1
West3	WDR3
YLE 1	YLE1
YLE 2	YLE2
Yorkshire TV	YORK
ZDF	ZDF
Zurich 1	ZUR1
3SAT	3SAT

* The "ID" abbreviation is what is shown on-screen in lieu of the station name. The "ID" abbreviation is listed in the Confirmation screen and is displayed on the TV screen each time the recorder is tuned to a different station.

TV Station Channel Number Guide

For customers in the U.K.

Only the main stations are listed. There are in addition many relay stations, and full lists are available from the BBC and ITV.

	BBC1	BBC2	ITV	CH4	CH5
London & South-East					
Bluebell Hill	40	46	43	65	—
Crystal Palace	26	33	23	30	37
Dover	50	56	66	53	—
Heathfield	49	52	64	67	—
Oxford	57	63	60	53	49
South-West					
Beacon Hill	57	63	60	53	—
Caradon Hill	22	28	25	32	—
Huntshaw Cross	55	62	59	65	67
Redruth	51	44	41	47	37
Stockland Hill	33	26	23	29	—
Channel Islands					
Fremont Point	51	44	41	47	—
South					
Hannington	39	45	42	66	35
Midhurst	61	55	58	68	—
Rowridge	31	24	27	21	—
West					
Mendip	58	64	61	54	37
East					
Sandy Heath	31	27	24	21	39
Sudbury	51	44	41	47	35
Tacolneston	62	55	59	65	52
Midlands					
Ridge Hill	22	28	25	32	35
Sutton Coldfield	46	40	43	50	37
The Wrekin	26	33	23	29	35
Waltham	58	64	61	54	35
North					
Belmont	22	28	25	32	56
Emley Moor	44	51	47	41	37

	BBC1	BBC2	ITV	CH4	CH5
North-West					
Caldbeck	30	34	28	32	56
Winter Hill	55	62	59	65	48
North-East					
Bilsdale West Moor	33	26	29	23	35
Chatton	39	45	49	42	—
Pontop Pike	58	64	61	54	68
Scotland					
Angus	57	63	60	53	—
Black Hill	40	46	43	50	37
Sandale	22	—	—	—	—
Caldbeck	—	34	28	32	56
Creigkelly	31	27	24	21	48
Darvel	33	26	23	29	35
Durris	22	28	25	32	67
Eitshal	33	26	23	29	—
Keelylang Hill	40	46	43	50	—
Knock More	33	26	23	29	—
Rosemarkie	39	45	49	42	67
Rumster Forest	31	27	24	21	—
Selkirk	55	62	59	65	52
Wales					
Blaenplwyf	31	27	24	21	56
Carmel	57	63	60	53	—
Llanddona	57	63	60	53	—
Moel-y-Parc	52	45	49	42	—
Presely	46	40	43	50	37
Wenvoe	44	51	41	47	—
Northern Ireland					
Brougher Mountain	22	28	25	32	—
Divis	31	27	24	21	37
Limavady	55	62	59	65	—

Questions And Answers

PLAYBACK

Q. What happens if the end of the tape is reached during playback or search?

A. The tape is automatically rewound to the beginning.

Q. Can the video recorder indefinitely remain in the still mode?

A. No. It stops automatically after 5 minutes to protect the heads.

Q. During search, slow, still and frame-by-frame playback, I can't hear any audio. What's the problem?

A. This is normal.

Q. When returning from variable-speed search to normal playback, the picture is disturbed. Should I be concerned about this?

A. No, it is normal.

Q. Noise bars appear during variable-speed search. What's the problem?

A. This is normal.

Q. Sometimes, during Index Search, the video recorder can't find the programme I want to see. Why not?

A. There may be index codes too close together.

RECORDING

Q. When I pause and then resume a recording, the end of the recording before the pause is overlapped by the beginning of the continuation of recording. Why does this happen?

A. This is normal. It reduces distortion at the pause and resume points.

Q. Can the video recorder indefinitely remain in the Record-Pause mode?

A. No. The video recorder shuts off automatically after 5 minutes to protect the heads.

Q. What happens if the tape runs out during recording?

A. The video recorder automatically rewinds it to the beginning or, if Timer Recording, the cassette is ejected.

TIMER RECORDING

Q. "O" and "E" remain lit on the display panel. Is there a problem?

A. No. This is a normal condition for a timer recording in progress.

Q. Can I programme the timer while I'm watching a tape or a TV broadcast?

A. You won't see the picture as it is replaced by the on-screen menu, but the audio from the program or tape you're viewing can be heard.

ATTENTION

This recorder contains microcomputers. External electronic noise or interference could cause malfunctioning. In such cases, switch the recorder off and unplug the mains power cord. Then plug it in again and turn the recorder on. Take out the cassette. After checking the cassette, operate the unit as usual.

Troubleshooting

Before requesting service for a problem, use this chart to see if you can correct the trouble yourself. Small problems are often easily corrected, and this can save you the trouble of sending your video recorder off for repair.

POWER

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
1. No power is applied to the recorder.	• The mains power cord is disconnected.	Connect the mains power cord.
2. The clock is functioning properly, but the recorder cannot be powered.	• "⊙" is displayed on the display panel with Auto Timer set to "OFF".	Press the ⊙ button to turn the "⊙" indicator off.
3. The remote control won't function.	• The batteries are discharged.	Replace the dead batteries with new ones.

TAPE TRANSPORT

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
1. The tape does not run during recording.	• "⏏" is displayed on the display panel.	Press PLAY to turn the "⏏" indicator off.
2. The tape will not rewind or fast-forward.	• The tape is already fully rewind or fast-forwarded.	Check the cassette.

PLAYBACK

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
1. The playback picture does not appear while the tape is running.	• If you're using the RF connection the TV receiver's channel selector is not set to the VIDEO channel. ... the recorder's VIDEO channel has not been correctly set. • If you're using the AV connection, the TV receiver is not set to the AV mode.	If you are using the RF connection set the TV receiver to the VIDEO channel. (⌘ pg. 6) ... Perform "Video Channel Set" (⌘ pg. 40) If you are using the AV connection, set the TV to its AV mode.
2. Noise appears during visual search.	• This is normal.	
3. Noise appears during normal playback.	• The automatic tracking mode is engaged.	Try manual tracking (⌘ pg. 28).
4. The playback picture is blurred or interrupted while TV broadcasts are clear or "USE CLEANING CASSETTE" message appears on the screen.	• The video heads may be dirty.	Use a dry cleaning cassette TCL-2UX or consult your JVC dealer.
5. Breaks are noticeable in Hi-Fi soundtrack.	• Automatic tracking is engaged.	Engage and adjust tracking manually (⌘ pg. 28) or press AUDIO to change the soundtrack to "NORM" (⌘ pg. 25).

RECORDING

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
1. Recording cannot be started.	• There is no cassette loaded, or the cassette loaded has had its Record Safety tab removed.	Insert a cassette, or using adhesive tape, reseal the slot where the tab was removed.
2. TV broadcasts cannot be recorded.	• "L-1", "L-2", "SAT" or "F-1" has been selected as the input mode.	Set to the desired preset.
3. Tape-to-tape editing is not possible.	• The source (another video recorder, camcorder) has not been properly connected. • All necessary power switches have not been turned on. • The input mode is not correct.	Confirm that the source is properly connected. Confirm that all units' power switches are turned on. Set the input mode to "L-1", "L-2", "SAT" or "F-1".

4. Camcorder recording is not possible.

- The camcorder has not been properly connected.
- The input mode is not correct.

Confirm that the camcorder is properly connected.
Set the input mode to "L-1", "L-2", "SAT" or "F-1".

TIMER RECORDING


SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
1. Timer recording won't work.	• The clock and/or the timer have been set incorrectly. • The timer is not engaged.	Re-perform the clock and/or timer settings. Press ⊙ and confirm that "⊙" is displayed on the display panel.
2. Timer programming is not possible.	• Timer recording is in progress.	Timer programming can't be performed while a timer recording is in progress. Wait until it finishes.
3. "⊙" and "⏏" on the display panel won't stop blinking.	• The timer is engaged but there's no cassette loaded.	Load a cassette with the Record Safety tab intact, or cover the hole using adhesive tape.
4. The cassette is automatically ejected, and "⊙" and "⏏" on the display panel won't stop blinking.	• The loaded cassette has had its Record Safety tab removed.	Remove the cassette and cover the hole with adhesive tape, or insert a cassette with the Record Safety tab intact.
5. "⊙" blinks for 10 seconds and the Timer mode is disengaged.	• ⊙ has been pressed when there are no programs in memory, or the timer record information has been programmed incorrectly.	Check the programmed data and re-programme as necessary, then press ⊙ again.
6. The cassette is automatically ejected, the power shuts off and "⊙" and "⏏" won't stop blinking.	• The end of the tape was reached during timer recording.	The programme may not have been recorded in its entirety. Next time make sure you have enough time on the tape to record the entire programme.
7. VIDEO Plus+ does not timer-record properly.	• The recorder's preset positions have been set incorrectly.	Refer to "Guide Program Number Set" and re-perform the procedure (⌘ pg. 39).

OTHER PROBLEMS

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
1. Whistling or howling is heard from the TV during camcorder recording.	• The camcorder's microphone is too close to the TV. • The TV's volume is too high.	Position the camcorder so its microphone is away from the TV. Turn the TV's volume down.
2. When scanning channels, some of them are skipped over.	• Those channels have been designated to be skipped.	If you need the skipped channels, restore them (⌘ pg. 44).
3. The preset cannot be changed.	• Recording is in progress.	Press PAUSE to pause the recording, change presets, then press PLAY to resume recording.
4. Channel settings that were made manually seem to have changed or disappeared.	• After the manual settings were made, Auto Channel Set was performed.	Perform manual setting again.
5. No channels are stored in the recorder's memory.	• The TV aerial cable was not connected to the recorder when Auto Set Up was performed.	Connect the TV aerial cable to the recorder properly and turn off the recorder power once, then turn the recorder power back on again. The recorder will try Auto Set Up again (⌘ pg. 6).


Index

FRONT VIEW

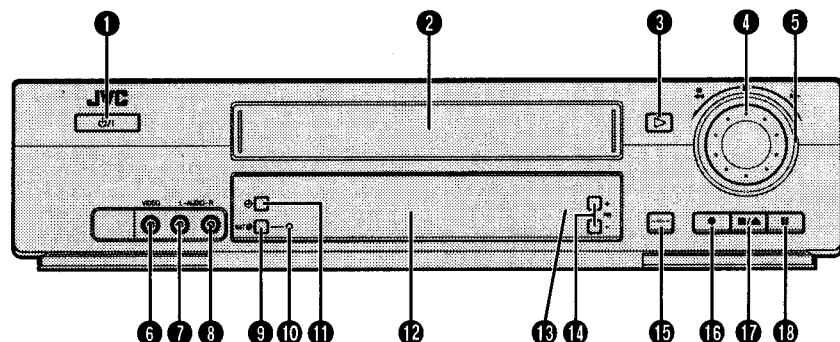


- 1 **STANDBY/ON** ϕ /I Button turns recorder on/off (loading a cassette also turns power on).
- 2 **Cassette Loading Slot** is where cassette is inserted; door closes, "cassette loaded" indicator lights up on front display panel.
- 3 **PLAY** Button plays back tape $\Rightarrow$ pg. 12; cancels Pause, Still, Slow, Search modes. $\Rightarrow$ pg. 13
- 4 **JOG** Dial plays back frame by frame during Still or Play mode. $\Rightarrow$ pg. 13
- 5 **SHUTTLE** Ring rewinds or fast-forwards tape during Stop mode $\Rightarrow$ pg. 12; performs forward and reverse slow-motion and search during Still or Play mode. $\Rightarrow$ pg. 13
- 6 **VIDEO Input Connector** enables easy connection of video output from another recorder or camcorder for editing. $\Rightarrow$ pg. 30
- 7 **AUDIO Input Connector [L]** enables easy connection of audio output (mono) from another recorder, camcorder or other source for editing. $\Rightarrow$ pg. 30
- 8 **AUDIO Input Connector [R]** enables easy connection of audio output (Hi-Fi) from another recorder, camcorder or other source for editing. $\Rightarrow$ pg. 30
- 9 **SAT** $\odot$ Button enables/disables the Auto Satellite Prog Rec mode. $\Rightarrow$ pg. 27
- 10 **SAT** $\odot$ Indicator lights up during Auto Satellite Prog Rec mode. $\Rightarrow$ pg. 27
- 11 **Timer** $\odot$ Button engages timer-standby mode. $\Rightarrow$ pg. 17, 19
- 12 **Display Panel** provides clear view of various displays and indicators. $\Rightarrow$ pg. 53
- 13 **Infrared Beam Receiving Window** is where remote control should be aimed when in use.
- 14 **PR +/-** Buttons select a preset position. $\Rightarrow$ pg. 14
- 15 **--|--** (Display) Button switches display between clock time, tape remaining time, counter readings and preset position*. $\Rightarrow$ pg. 15
*Preset position is not displayed during playback.
- 16 **RECORD** Button starts regular recording (press once), Instant Timer Recording (press twice); sets duration of ITR. $\Rightarrow$ pg. 14, 15
- 17 **STOP/EJECT** Button stops tape; ejects tape during Stop mode. $\Rightarrow$ pg. 12
- 18 **PAUSE** Button stops tape temporarily during recording $\Rightarrow$ pg. 14; stops tape temporarily during playback; plays back frame by frame with each additional press. $\Rightarrow$ pg. 13

REAR VIEW

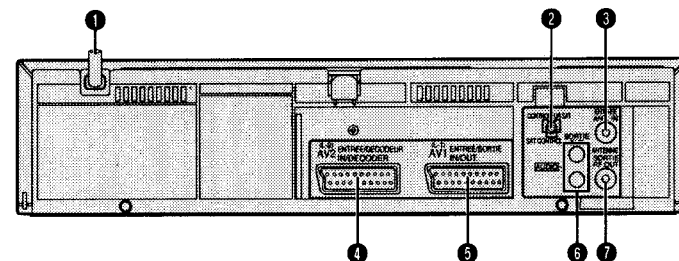

- 1 **Mains Power Cord** supplies power to recorder. $\Rightarrow$ pg. 5
- 2 **SAT CONTROL** Connector enables connection of the provided Satellite Controller for timer recording with a satellite receiver. $\Rightarrow$ pg. 10
- 3 **ANT. IN** Connector enables connection of aerial. $\Rightarrow$ pg. 5
- 4 **AV2 (L-2) IN/DECODER** Connector enables connection of satellite receiver, decoder or second recorder; input recordable when "L-2" selected. $\Rightarrow$ pg. 26, 31
- 5 **AV1 (L-1) IN/OUT** Connector enables AV connection to TV or second recorder; input recordable when "L-1" selected. $\Rightarrow$ pg. 5, 31
- 6 **AUDIO OUT (L/R)** Connectors enable connection of audio cassette recorder, TV or second video recorder for dubbing. $\Rightarrow$ pg. 37
- 7 **RF OUT** Connector enables connection to aerial terminal of TV receiver. $\Rightarrow$ pg. 5


DISPLAY PANEL

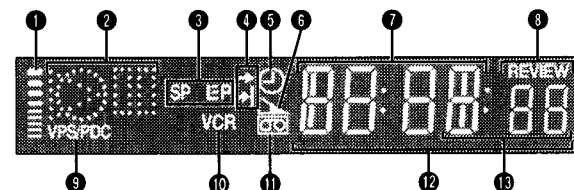

- 1 **B.E.S.T. Picture System Display** lights from bottom to top while B.E.S.T. is active. $\Rightarrow$ pg. 22
- 2 **Symbolic Mode Indicators**

PLAY: FF/REW VARIABLE SEARCH:	$\triangleright$	STILL: SLOW:	$\triangleright$ $\square$
		RECORD:	$\odot$
		RECORD PAUSE:	$\odot$ $\square$
- 3 **Tape Speed Indicators** display mode of recording; light during Record or Play mode. $\Rightarrow$ pg. 14
*EP is only for NTSC playback.
- 4 **Programme Time Indicators** show the programme start time ($\rightarrow$) and the programme stop time ($\rightarrow$) for timer-recording. $\Rightarrow$ pg. 18
- 5 **"Timer"** Indicator lights when $\odot$ has been pressed to engage Timer mode. $\Rightarrow$ pg. 17, 19
- 6 **Tape Remaining Time Indicator** displays time remaining on tape when certain buttons are pressed. $\Rightarrow$ pg. 15
- 7 **Channel Display** shows preset position where the station currently being received is stored.
Clock Display shows current time. $\Rightarrow$ pg. 8
- 8 **Instant REVIEW** Indicator blinks after timer-recording and shows how many programmes have been timer-recorded. $\Rightarrow$ pg. 24
- 9 **PDC Indicator** lights when PDC has been engaged for timer recording. $\Rightarrow$ pg. 17, 19
*VPS (Video Programme System) recording is not currently available in the U.K. and not possible with this recorder.
- 10 **VCR Indicator** lights when the video recorder is in the video mode. At this point, the TV automatically enters AV mode. $\Rightarrow$ pg. 12
- 11 **"Cassette Loaded"** Mark lights once a cassette is inserted; remains lit until cassette ejected.
- 12 **Counter** shows time elapsed since playback or recording began.
With $\triangle$ displayed, shows time remaining from current tape position to end of tape ($\Rightarrow$ pg. 15). Counter, Preset Position*, Clock and Tape Remaining Time Display appear alternately when **--|--** (Display) is pressed.
*Preset Position is not displayed during playback.
- 13 **Mode** shows external input mode selected (L-1, L-2, SAT* or F-1).
*When "L-2 SELECT" is set to "SAT" ($\Rightarrow$ pg. 32), "SAT" appears instead of "L-2".

REMOTE CONTROL

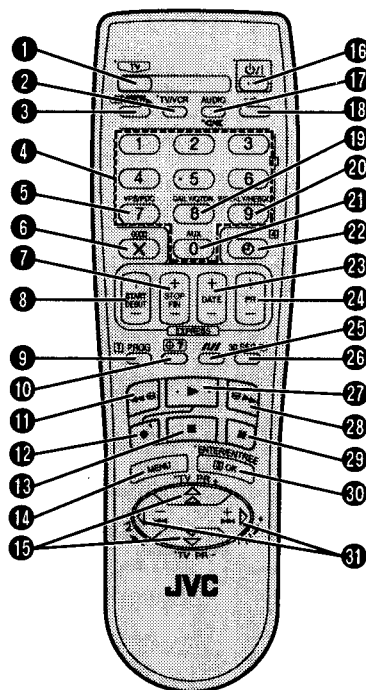

Buttons with a small dot on the left side of the name can also be used to operate your JVC TV while holding down the TV button.
 ⇨ "Operating JVC TVs" on page 55.

This remote control transmits A code signals only; it is not applicable to B code signals.

- 1 **TV Button** enables remote control of connected TV. ⇨ "Operating JVC TVs" on page 55
- 2 **TV/VCR Button** switches connected TV's mode between TV and AV. ⇨ pg. 12 and "Operating JVC TVs" on page 55
- 3 **REVIEW Button** "reviews" timer-recorded programme. ⇨ pg. 24
- 4 **NUMBER Keys** are used in preset position selection ⇨ pg. 14, VIDEO Plus+ timer programming ⇨ pg. 16.
- 5 **PDC Button** enables/disables PDC recording. ⇨ pg. 17, 19
** VPS (Video Programme System) recording is not currently available in the U.K. and not possible with this recorder.*
- 6 **X Button** cancels timer-programme. ⇨ pg. 20
- 7 **0000 Button** resets counter to 0:00:00. ⇨ pg. 15
- 8 **STOP +/- Button** inputs programme Stop Time. ⇨ pg. 18
- 9 **START +/- Button** accesses Regular Program screen; inputs programme Start Time. ⇨ pg. 18
- 10 **PROG Button** accesses VIDEO Plus+ Program screen. ⇨ pg. 16
- 11 **? Button** accesses Program screens/displays to check the programme that you have programmed (next programme's information screen/display appears each time button is pressed). ⇨ pg. 20
- 12 **Rewind [REW] Button** rewinds tape; initiates reverse high-speed search. ⇨ pg. 12, 13
- 13 **Record Button** — same as button on recorder. ⇨ pg. 14, 15
- 14 **Stop Button** — same as button on recorder. ⇨ pg. 12
- 15 **MENU Button** accesses Menu screen. ⇨ pg. 9
- 16 **TV PR +/- Button** is used for selection in on-screen menus. ⇨ pg. 9
TV PR +/- selects the connected TV's/ satellite receiver's channel. ⇨ "Operating JVC TVs" on page 55

- 17 **STANDBY/ON $\square/\square$ Button** — same as button on recorder.
- 18 **AUDIO Button** changes output sound mode. ⇨ pg. 25
 $\square/\square$ (TV Muting) Button mutes sound of connected TV. ⇨ "Operating JVC TVs" in the right column.
- 19 **-- -- (Display) Button** switches display between clock time, tape remaining time, counter readings and preset position*. ⇨ pg. 15
** Preset position is not displayed during playback.*
- 20 **DAILY Button** enables timer recording of daily serials. ⇨ pg. 17, 19
- 21 **WEEKLY Button** enables timer recording of weekly serials. ⇨ pg. 17, 19
- 22 **AUX Button** selects recorder's auxiliary input mode. ⇨ pg. 30, 31
- 23 **(TIMER) Button** — same as button on recorder. ⇨ pg. 17, 19
- 24 **DATE +/- Button** inputs date of programme for timer recording. ⇨ pg. 18
- 25 **PR +/- Button** — same as button on recorder. ⇨ pg. 14
- 26 **Auto Tracking Button (///)** enables/disables auto tracking mode during playback ⇨ pg. 28
- 27 **SP/LP Button** selects tape speed. ⇨ pg. 14
- 28 **30 SEC Button** initiates a 30-second period of fast-motion playback. ⇨ pg. 24
- 29 **Play Button** — same as button on recorder. ⇨ pg. 12, 13
- 30 **Fast Forward [FF] Button** fast-forwards tape; initiates forward high-speed search. ⇨ pg. 12, 13
- 31 **Pause Button** — same as button on recorder. ⇨ pg. 13, 14
- 32 **OK Button** enters selections made in on-screen menus. ⇨ pg. 9
- 33 **$\triangleleft \triangleright$ Button** initiates functions such as Index Search ⇨ pg. 24, variable-speed search, frame by frame playback. ⇨ pg. 13
TV $\triangleleft$ +/- Button controls volume of connected TV. ⇨ "Operating JVC TVs" in the right column.

How To Use

The remote control can operate most of your video recorder's functions, as well as basic functions of JVC TV sets. (See below.)

- Point the remote control toward the sensor window.
- The maximum operating distance of the remote control is about 8 m.

Operating JVC TVs

To operate your TV, while holding down the TV button, press the corresponding button: **STANDBY/ON $\square/\square$, TV/VCR, TV PR +/-, TV $\triangleleft$ +/-, $\square/\square$ (TV Muting).**


NOTES:

- When inserting the batteries, be sure to insert in the correct directions as indicated under the battery cover.
- Depending on the type of JVC TV, there may be cases where some or all functions cannot be operated using the remote control.
- If the remote control doesn't work properly, remove its batteries, wait a short time, replace the batteries and then try again.

SECTION 1 DISASSEMBLY

1.1 DISASSEMBLY FLOW CHART

This flowchart lists the disassembling steps for the cabinet parts and P.C. boards in order to gain access to item(s) to be serviced. When reassembling, perform the step(s) in reverse order. Bend, route and dress the flat cables as they were originally laid.

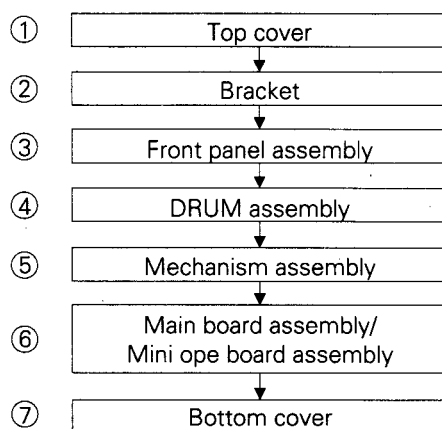

1.2 HOW TO READ THE DISASSEMBLY AND ASSEMBLY

STEP /LOC NO.	PART NAME	FIG. NO.	POINT	NOTE
①	TOP COVER	D1	3(S1a), (S1b)	
②	BRACKET	D2	2(S2)	
③	FRONT PANEL ASSEMBLY	D3	7(L3), CN7003(WR3) [HR-J770EK/J770EU]	<NOTE 3a> <NOTE 3b> <NOTE 3c>

↑ (1)
↑ (2)
↑ (3)
↑ (4)
↑ (5)

- (1) Order of steps in Procedure
When reassembling, perform the step(s) in the reverse order. These numbers are also used as the identification (location) NO. of parts Figures.
 - (2) Part name to be removed or installed.
 - (3) Fig.No. showing procedure or part location
 - (4) Identification of part to be removed,unhooked,unlocked, released,unplugged,unclamped or unsoldered. P = Spring, W = Washer, S = Screw, L = Locking tab, CNxx(WRxx) = Remove the wire (WRxx) from the connector (CNxx).
- NOTE:** The bracketed () WR of the connector symbol are assigned nos. in priority order and do not correspond to those on the spare parts list.
- (5) Adjustment information for installation

1.3 DISASSEMBLY/ASSEMBLY METHOD

STEP /LOC NO.	PART NAME	FIG. NO.	POINT	NOTE
①	TOP COVER	D1	3(S1a), (S1b)	
②	BRACKET	D2	2(S2)	
③	FRONT PANEL ASSEMBLY	D3	7(L3), CN7003(WR3) [HR-J770EK/J770EU]	<NOTE 3a> <NOTE 3b> <NOTE 3c>
④	DRUM ASSEMBLY	D4	3(S4a),CN1(WR4a), CN1(WR4b),2(S4b), DRUM SHIELD	<NOTE 3c>
⑤	MECHANISM ASSEMBLY	D5	2(S5a),(S5b),(S5c), 2(L5), CN1(WR5)	<NOTE 3c> <NOTE 5a> <NOTE 5b> <NOTE 5c>
⑥	MAIN BOARD ASSEMBLY/ MINI OPE BOARD ASSEMBLY [HR-J670EK/J670EU]	D6	3(S6a), (S6b), (S6c),6(L6a),(L6b), [HR-J670EK/J670EU], CN7003(WR6) [HR-J670EK/J670EU]	<NOTE 3c> <NOTE 6>
⑦	BOTTOM COVER	D7	2(L7a), 9(L7b)	<NOTE 7>

<NOTE3a>

When reattaching the Front panel assembly, make sure that the door opener ② of the Cassette holder assembly is lowered in position prior to the reinstallation.

<NOTE3b>

When reattaching the Front panel assembly, pay careful attention to the switch lever not to make it touch the switch knob ⑥ of the Main board assembly from the side. (If the switch knob of the Main board assembly is damaged, cassette loading is impossible.)

<NOTE3c>

Be careful not to damage the connector and wire etc. during connection and disconnection. When connecting the wire to the connector, be careful with the wire direction.

<NOTE5a>

When it is required to remove the screws (S5a) retaining the Mechanism assembly, please refer to the "Procedures for Lowering the Cassette holder assembly"(See on pages 1-3).

<NOTE5b>

When removing the Mechanism assembly only, unhook the two spacers connecting it with the Main board assembly with pliers from the back side of the Main board assembly first, and then remove the Mechanism assembly.

<NOTE5c>

When reattaching the Mechanism assembly to the Main board assembly, take care not to damage the sensors on the Main board assembly (D3001: LED, Q3002: Start sensor, Q3003: End sensor).

<NOTE6>

When removing the PC Support from the bottom chassis, take care not to damage the locking portion of the PC Support.

<NOTE7>

When removing the bottom cover, push down the two tabs (L7a) to slide the bottom cover.

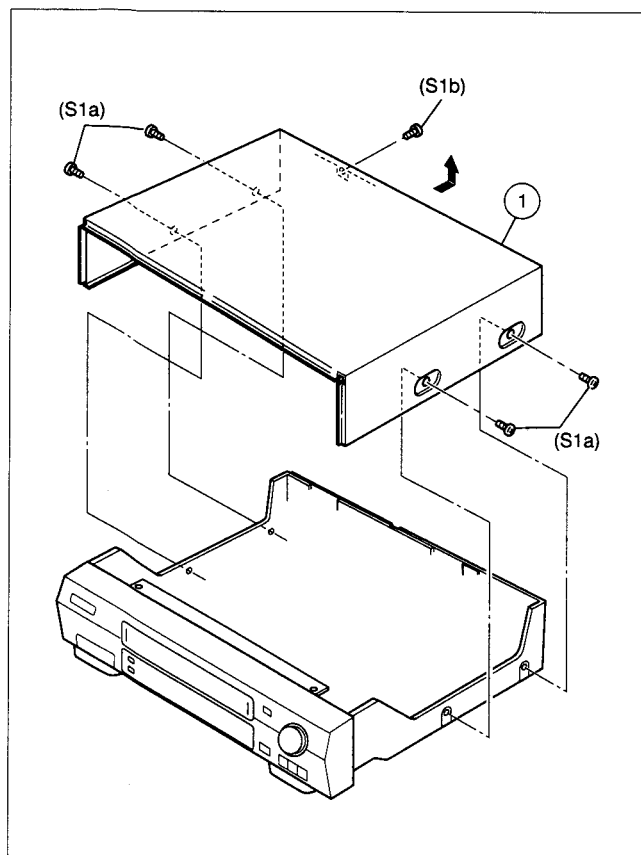


Fig. D1

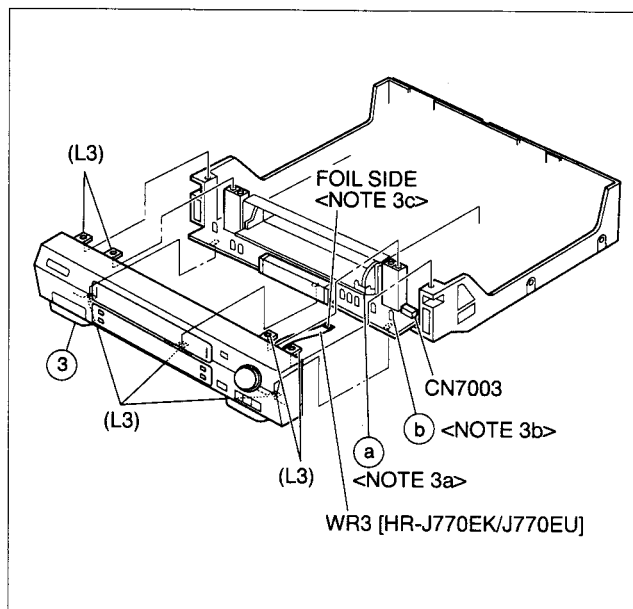


Fig. D3

NOTE: When installing the DRUM assembly, secure the screws (S4a) in the order of ①, ②, ③.

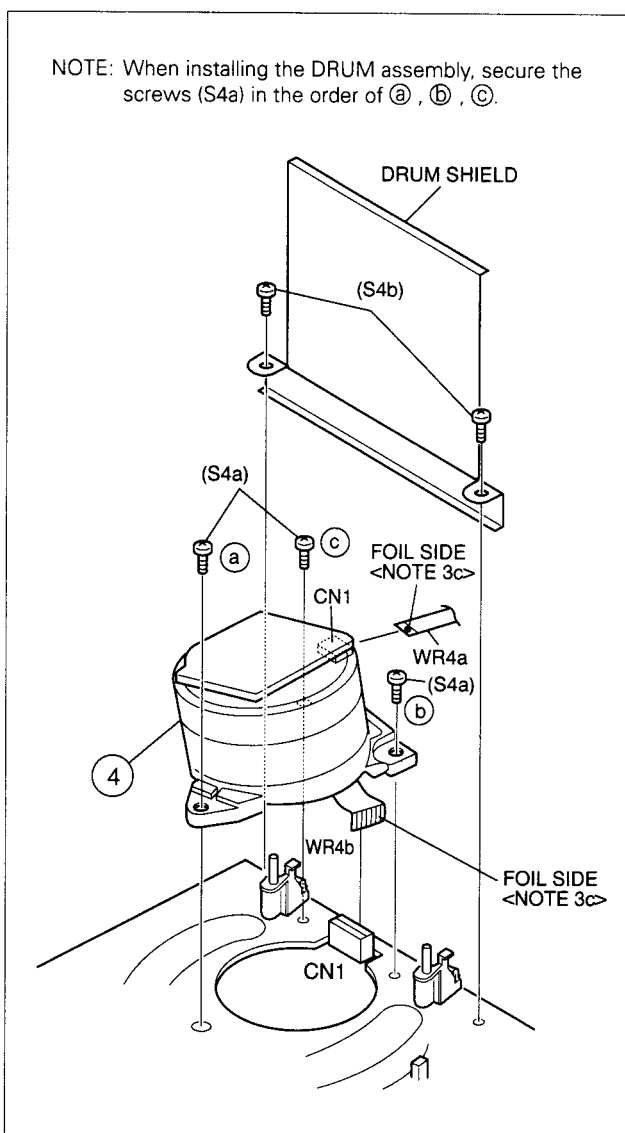


Fig. D4

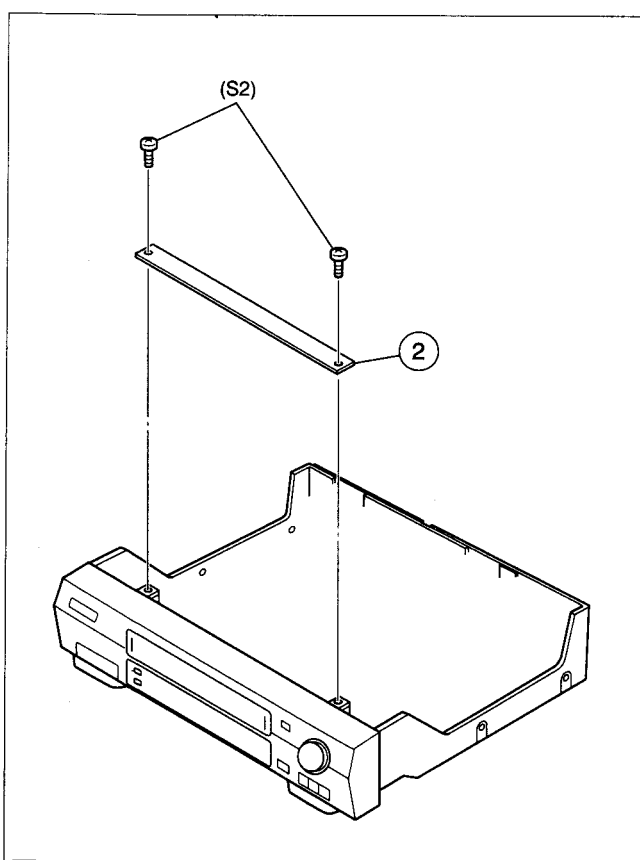


Fig. D2

NOTE: When installing the Mechanism assembly, secure the screws (S5a) in the order of ③, ⑤.

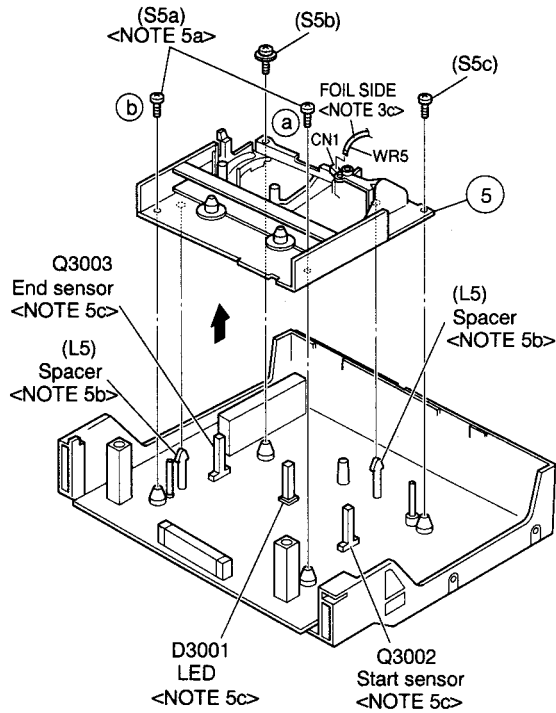


Fig. D5

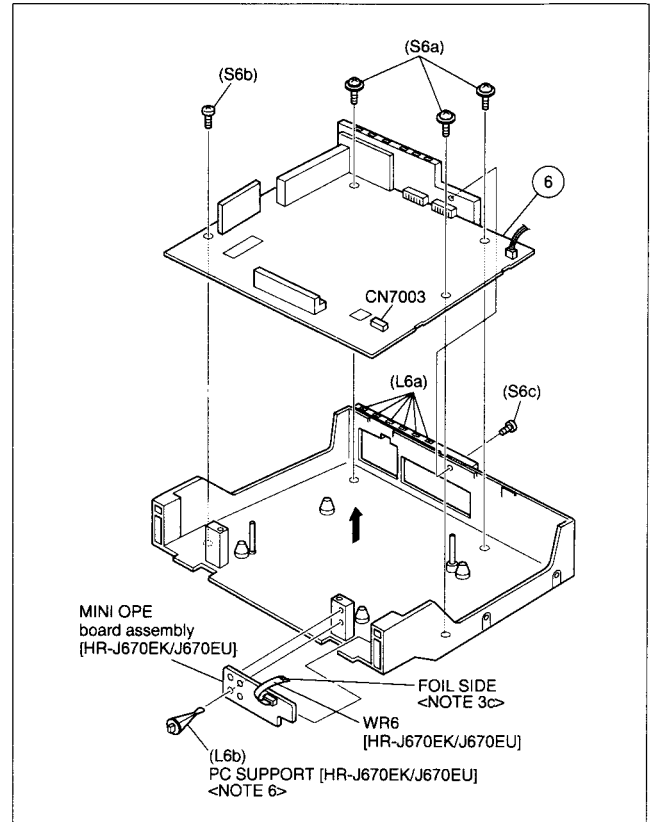


Fig. D6

Procedures for Lowering the Cassette holder assembly

As the mechanism of this unit is integrated with the Housing assembly, the holder must be lowered and the two screws unscrewed when removing the Mechanism assembly.

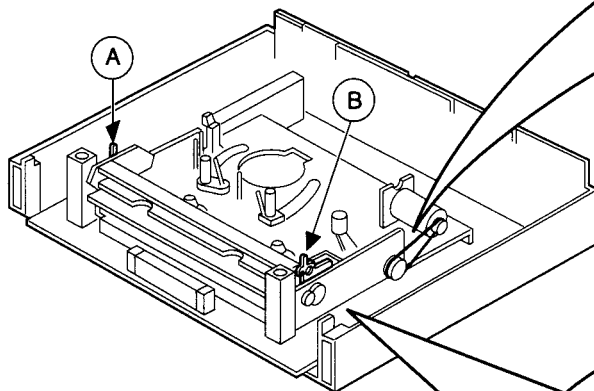


Fig. 1

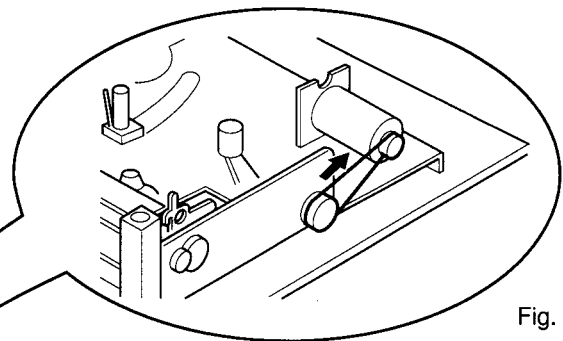


Fig. 2

Turn the loading motor pulley in the direction as indicated by Fig.2. As both ① and ② levers are lodged twice, push the levers in the direction as indicated by Fig.3 to release them. When pushing the levers, do it in the order of ①, ②, ②, ①. When the holder has been lowered, turn the pulley until the cassette holder is securely in place without allowing any up/down movement.

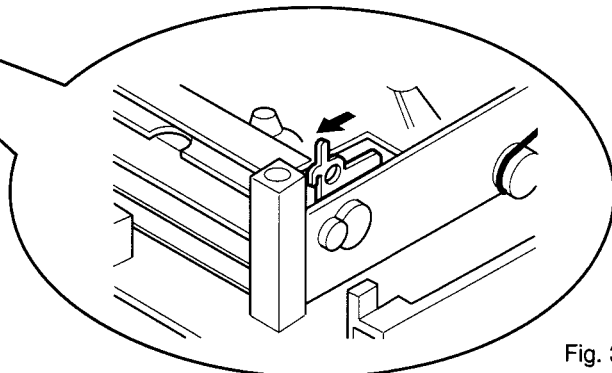


Fig. 3

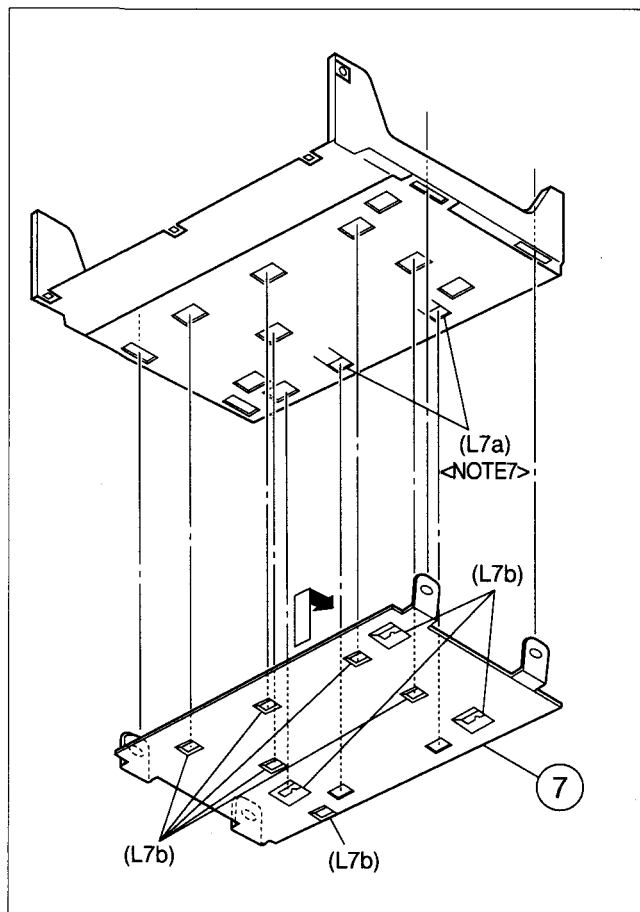


Fig. D7

1.4 SERVICE POSITION

In order to facilitate diagnosis and the repair of the Mechanism assembly, this unit is constructed so as to allow the Mechanism and Main board assemblies to be removed together from the Bottom chassis assembly.

1.4.1 How to take out the Mechanism and Main board assemblies

- (1) Remove the Top cover, Bracket and Front panel assembly, and remove the Mini ope board assembly for HR-J670EK/J670EU. (See 1.3 DISASSEMBLY/ASSEMBLY METHOD.)
- (2) Lower the cassette holder, and make the preparations required in order to remove the screws from the Mechanism assembly. (Refer to the "Procedures for Lowering the Cassette holder assembly" on pages 1-3 of 1.3 DISASSEMBLY/ASSEMBLY METHOD.)
- (3) Take out 2 screws (A), 1 screw (B) and 1 screw (C) as shown in Fig. 1-4-1.

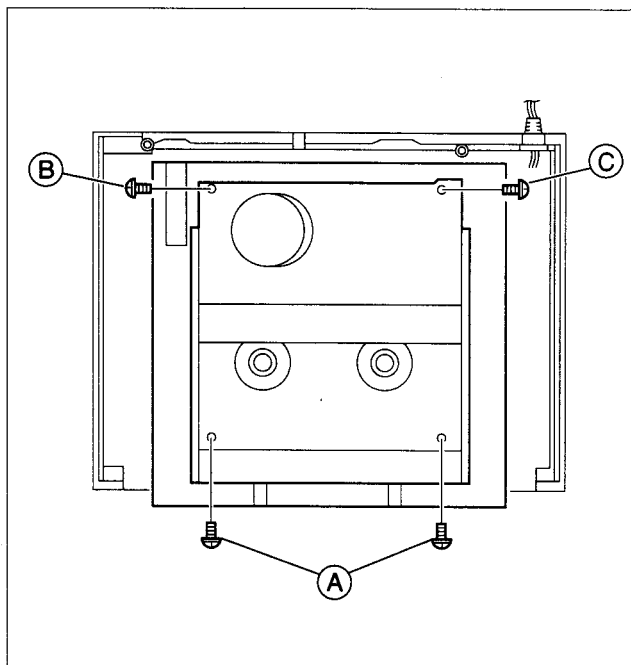


Fig. 1-4-1

- (4) Take out 3 screws (D), 1 screw (C) and 1 screw (E).
- (5) Remove the Main board and Mechanism assemblies together while holding the edge of the Main board assembly. At this stage be careful of the power cord and prongs of the jacks on the back side. (See Fig. 1-4-2.)

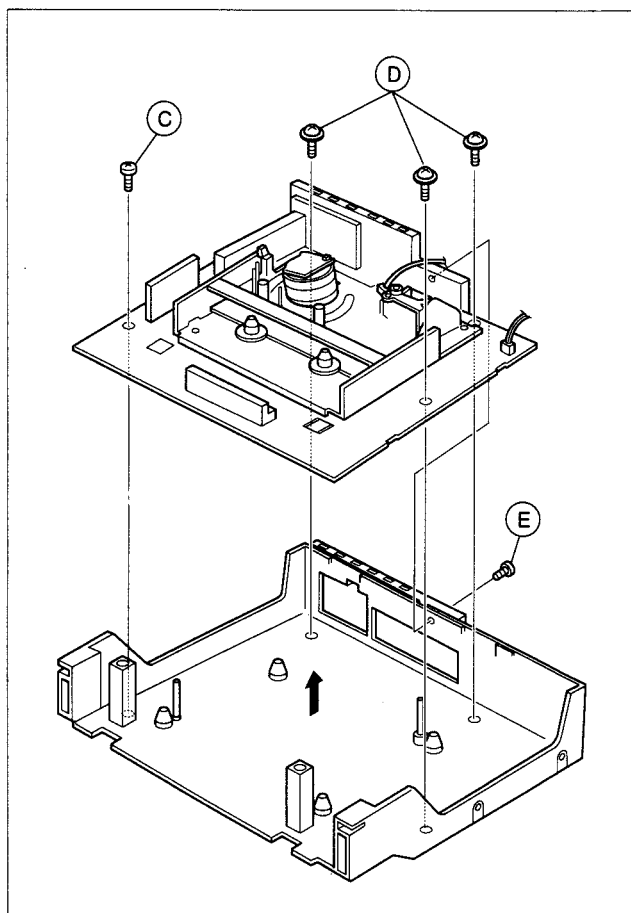


Fig. 1-4-2

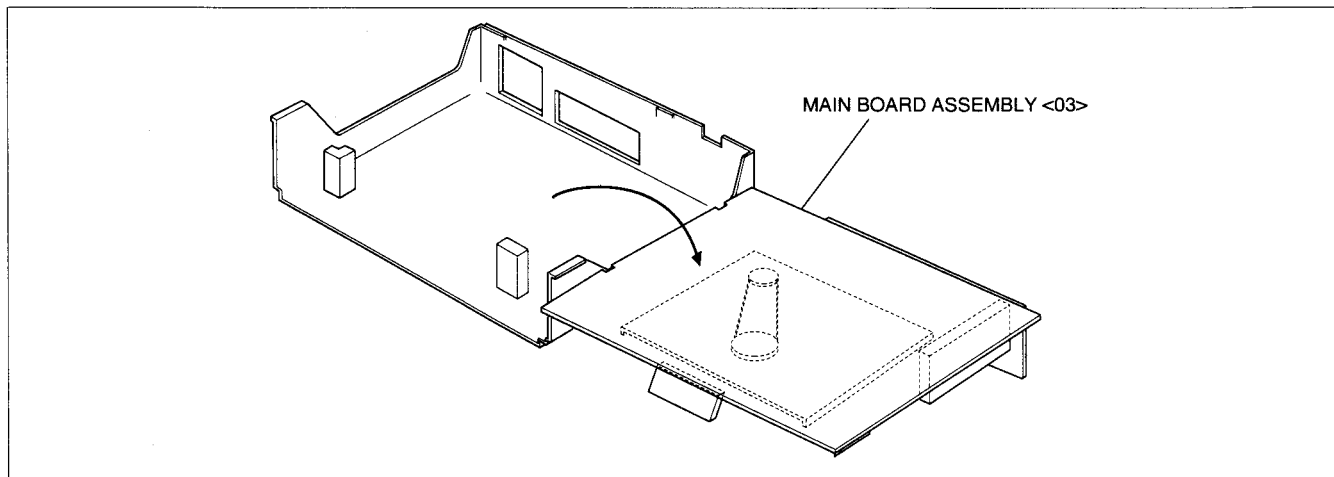


Fig. 1-4-3

- (6) Connect the power cord to the wall socket, and lift the cassette holder.
(Before turning on the power make sure that there is nothing which may produce a short circuit, such as faulty soldering.)
- (7) When performing a diagnosis or repair of the Main board assembly with a cassette tape in place, turn on the power, insert a cassette tape, and turn over the Main board and Mechanism assemblies together.

NOTES: • When carrying out diagnosis and repair of the Main board assembly in the service position, be sure to ground both the Main board and the Mechanism assemblies.

If they are improperly grounded, there may be noise on the playback picture or the FDP counter display may move even when the mechanism is kept in an inoperative status.

- When performing diagnostics of the tape playback or recording condition in the "SERVICE POSITION", enter the desired mode before turning the set upside down, and do not change the mode during diagnostics while the set is placed upside down. If you want to switch the mode, turn the set to the normal position.

1.5 MECHANISM SERVICE MODE

This model has a unique function to enter the mechanism into every operation mode without loading of any cassette tape. This function is called the "MECHANISM SERVICE MODE".

1.5.1 How to set the "MECHANISM SERVICE MODE"

- (1) Disconnect VCR from AC.
- (2) Connect TPGND and TP7001 (TEST) on the Main board assembly with a jump wire.
- (3) Connect VCR to AC.
- (4) Press the POWER button.
- (5) With lock levers **A** and **B** on the left and right of the Cassette holder assembly pulled toward the front, slide the holder in the same direction as the cassette insertion direction. (For the positions of lock levers **A** and **B**, refer to the "Procedures for Lowering the Cassette holder assembly" on pages 1-3 of 1.3 DISASSEMBLY/ASSEMBLY METHOD.)
- (6) The cassette holder lowers and, when the loading has completed, the mechanism enters the desired mode.


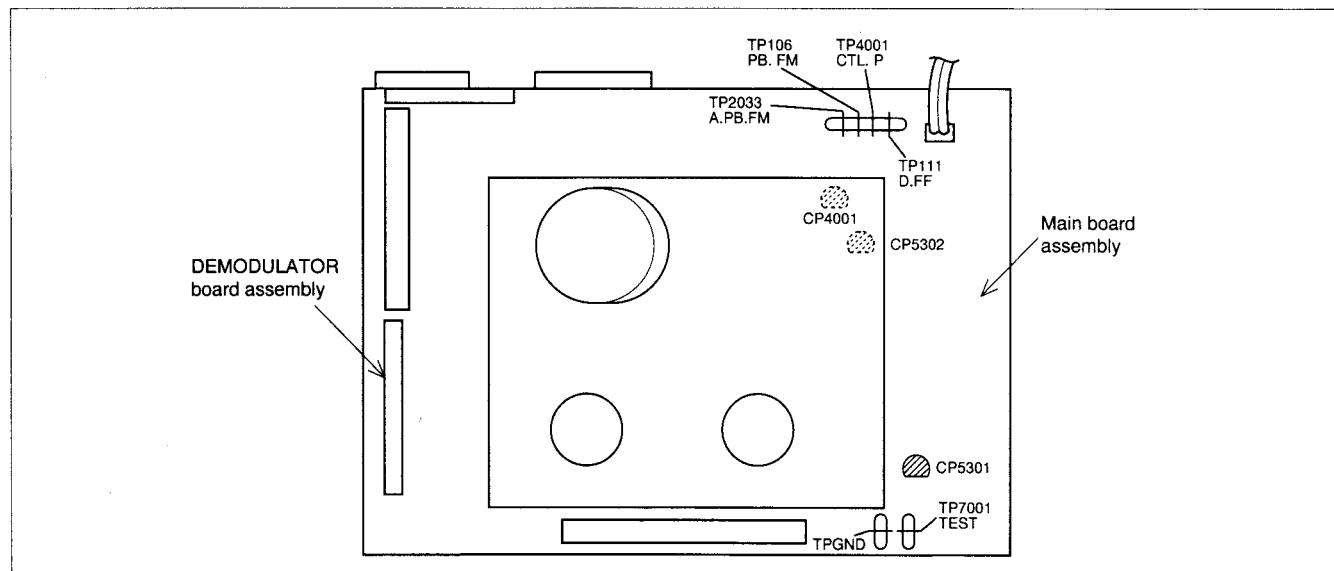


Fig. 1-5-1

1.6 EMERGENCY DISPLAY FUNCTION

This unit has a function for storing the history of the past two emergencies (EMG) and displaying them on each FDP. With the status of the VCR and mechanism at the moment an emergency occurred can also be confirmed.

FDP display switching

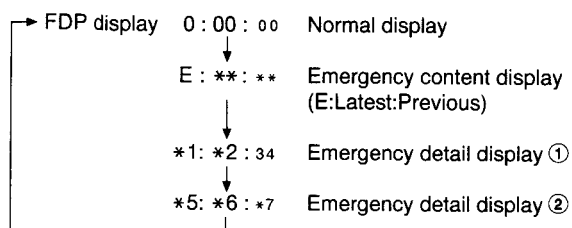

- NOTES:**
- The emergency detail display ① ② show the information on the latest emergency. It becomes " -- : -- : -- " when there is no latest emergency record.
 - When using the Jig RCU, set its custom code to match the custom code of the VCR.


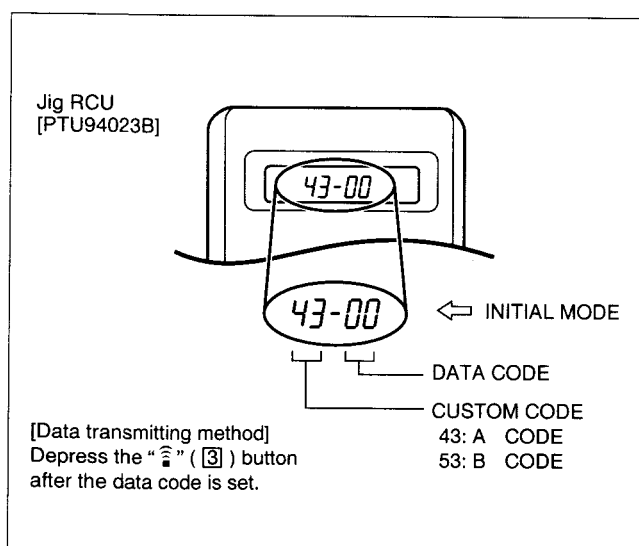


Fig. 1-6-1 Jig RCU

1.6.1 Displaying the emergency information

- (1) Transmit the code "59" from the Jig RCU.
The FDP shows the emergency content in the form of "E: **: **".



NOTE: • For the emergency content, see "1.6.3 Emergency content description".

- (2) Transmit the code "59" from the Jig RCU again.
The FDP shows the emergency detail information ① in the form of "*1: *2: 34".
 - *1 : Deck operation mode at the moment of emergency
 - *2 : Mechanism operation mode at the moment of emergency
 - 3- : Mechanism sensor information at the moment of emergency
 - 4 : Mechanism mode position at the moment of emergency

NOTE: • For the emergency detail information ①, see "1.6.4 Emergency detail information ①".

- (3) Transmit the code "59" from the Jig RCU once again.
The FDP shows the emergency detail information ② in the form of "*5: *6: *7".
 - *5 : Type of the cassette tape in use ①.
 - *6 : Winding position of the cassette tape in use
 - *7 : Type of the cassette tape in use ② (Winding area)

NOTE: • For the emergency detail information ②, see "1.6.5 Emergency detail information ②".

- (4) Transmit the code "59" from the Jig RCU once again to reset the display.

1.6.2 Clearing the emergency history

- (1) Display the emergency history.
- (2) Transmit the code "36" from the Jig RCU.
- (3) Reset the emergency display.

1.6.3 Emergency content description

NOTE: Emergency contents "E08/E09" are for the model with Dynamic Drum (DD).

FDP	CONTENT	CAUSE
E01: Loading EMG	When the mechanism mode cannot be changed to another mode even when the loading motor has rotated for more than 4 seconds in the loading direction, [E:01] is identified and the power is turned off.	① The mechanism is locked in the middle of mode transition. ② The mechanism is locked at the loading end due to the encoder position reading error during mode transition. ③ Power is not supplied to the loading MDA.
E02: Unloading EMG	When the mechanism mode cannot be changed to another mode even when the loading motor has rotated for more than 4 seconds in the unloading direction, [E:02] is identified and the power is turned off.	① The mechanism is locked in the middle of mode transition. ② The mechanism is locked at the unloading end due to the encoder position reading error during mode transition. ③ Power is not supplied to the loading MDA.
E03: Take Up Reel Pulse EMG	When the take-up reel pulse has not been generated for more than 4 seconds in the capstan rotating mode, [E:03] is identified, the pinch rollers are turned off and stopped, and the power is turned off. However, the reel EMG is not detected in STILL/SLOW modes.	① The take-up reel pulse is not generated in the FWD transport modes (PLAY/FWD SEARCH/FF, etc.) because; 1) The idler gear is not meshed with the take-up reel gear; 2) The idler gear is meshed with the take-up reel gear, but incapable of winding due to too large mechanical load (abnormal tension); 3) The take-up reel sensor does not output the FG pulse. ② The supply reel pulse is not generated in the REV transport modes (REV SEARCH/REW, etc.) because; 1) The idler gear is not meshed with the supply reel gear. 2) The idler gear is meshed with the supply reel gear, but incapable of winding due to too large a mechanical load (abnormal tension); 3) The supply reel sensor does not output the FG pulse. ③ Power is not supplied to the reel sensors.
E04: Drum FG EMG	When the drum FG pulse has not been input for more than 3 seconds in the drum rotating mode, [E:04] is identified, the pinch rollers are turned off and stopped, and the power is turned off.	① The drum could not start or the drum rotation has stopped due to too large a load on the tape, because; 1) The tape tension is abnormally high; 2) The tape is damaged or a foreign object (grease, etc.) adheres to the tape. ② The drum FG pulse did not reach the System controller CPU because; 1) The signal circuit is disconnected in the middle; 2) The FG pulse generator (hall device) of the drum is faulty. ③ The drum control voltage (DRUM CTL V) is not supplied to the MDA. ④ Power is not supplied to the drum MDA.
E05: Cassette Eject EMG	When the eject operation does not complete in 3 seconds after the start, [E:05] is identified, the pinch rollers are turned off and stopped, and the power is turned off. When the cassette insertion operation does not complete in 3 seconds after the start, the cassette is ejected. In addition, when the operation does not complete within 3 seconds after the start, [E:05] is also identified and the power is turned off immediately.	① The cassette cannot be ejected due to a failure in the drive mechanism of the housing. ② When the housing load increases during ejection, the loading motor is stopped because of lack of headroom in its drive torque. Housing load increasing factors: Temperature environment (low temperature, etc.), mechanism wear or failure. ③ The sensor/switch for detecting the end of ejection are not functioning normally. ④ The loading motor drive voltage is lower than specified or power is not supplied to the motor (MDA). ⑤ When the user attempted to eject a cassette, a foreign object (or perhaps the user's hand) was caught in the opening of the housing.
E06: Capstan FG EMG	When the capstan FG pulse has not been generated for more than 1 second in the capstan rotating mode, [E:06] is identified, the pinch rollers are turned off and stopped, and the power is turned off. However, the capstan EMG is not detected in STILL/SLOW/FF/REW modes.	① The capstan could not start or the capstan rotation has stopped due to too large a load on the tape, because; 1) The tape tension is abnormally high (mechanical lock); 2) The tape is damaged or a foreign object (grease, etc.) is adhered to the tape (occurrence of tape entangling, etc.). ② The capstan FG pulse did not reach the System controller CPU because; 1) The signal circuit is disconnected in the middle; 2) The FG pulse generator (MR device) of the capstans is faulty. ③ The capstan control voltage (CAPSTAN CTL V) is not supplied to the MDA. ④ Power is not supplied to the capstan MDA.
E07: SW Power Short-Circuit EMG	When short-circuiting of the SW power supply with GND has lasted for 0.5 second or more, [E:07] is identified, all the motors are stopped and the power is turned off.	① The SW 5 V power supply circuit is shorted with GND. ② The SW 12 V power supply circuit is shorted with GND.
E08: DD Initialized (Absolute Position Sensor) EMG	When DD tilting does not complete in 4 seconds, [E:08] is identified, the tilt motor is stopped and the power is turned off.	① The absolute value sensor is defective. (The soldered parts have separated.) ② The pull-up resistor at the absolute sensor output is defective. (The soldered parts have separated.) ③ Contact failure or soldering failure of the pins of the connector (board-to-board) to the absolute value sensor. ④ The absolute value sensor data is not sent to the System Controller CPU.
E09: DD FG EMG	When the DD FG pulse is not generated within 2.5 seconds, [E:09] is identified, the tilt motor is stopped and the power is turned off.	① The FG sensor is defective. (The soldered parts have separated.) ② The pull-up resistor at the FG sensor output is defective. (The soldered parts have separated.) ③ Contact failure or soldering failure of the pins of the connector (board-to-board) to the FG sensor. ④ The power to the sensor is not supplied. (Connection failure/soldering failure) ⑤ The FG pulse is not sent to the System Controller CPU. ⑥ The tilt motor is defective. (The soldered parts have separated.) ⑦ The drive power to the tilt motor is not supplied. (Connection failure/soldering failure) ⑧ The tilt motor drive MDA - IC is defective. ⑨ Auto-recovery of the DD tilting cannot take place due to overrun.
E0A: Supply Reel Pulse EMG	When the supply reel pulse has not been generated for more than 10 seconds in the capstan rotating mode, [E:0A] is identified and the cassette is ejected (but the power is not turned off). However, note that the reel EMG is not detected in the SLOW/STILL mode.	① The supply reel pulse is not generated in the FWD transport mode (PLAY/FWD SEARCH/FF, etc.) because; 1) PLAY/FWD or SEARCH/FF is started while the tape in the inserted cassette is cut in the middle; 2) A mechanical factor caused tape slack inside and outside the supply reel side of the cassette shell. In this case, the supply reel will not rotate until the tape slack is removed by the FWD transport, so the pulse is not generated until then; 3) The FG pulse output from the supply reel sensor is absent. ② The take-up reel pulse is not generated in the REV transport mode (REV SEARCH/REW, etc.). 1) REV SEARCH/REW is started when the tape in the inserted cassette has been cut in the middle; 2) A mechanical factor caused tape slack inside and outside the take-up reel side of the cassette shell. In this case, the supply reel will not rotate until the tape slack is removed by the REV transport, so the pulse will not be generated until that time; 3) The FG pulse output from the take-up reel sensor is absent. ③ The power to a reel sensor is not supplied.
EU1: Head clog warning	Presupposing the presence of the control pulse output in the PLAY mode, when the value obtained by mixing the two V.FM output channels (without regard to the A.FM output) has remained below a certain threshold level for more than 10 seconds, [E:U1] is identified and recorded in the emergency history. During the period in which a head clog is detected, the FDP and OSD repeat the "3-second warning display" and "7-second noise picture display" alternately. EMG code : "E:U1" / FDP : "U:01" / OSD : "Try cleaning tape." The head clog warning is reset when the above-mentioned threshold has been exceeded for more than 2 seconds or the mode is changed to another mode than PLAY.	

Table 1-6-1

1.6.4 Emergency detail information ①

The status (electrical operation mode) of the VCR and the status (mechanism operation mode/sensor information) of the mechanism in the latest emergency can be confirmed based on the figure in EMG detail information ①.

[FDP display]

*1 : *2 : 3 4

- *1 : Deck operation mode at the moment of emergency
- *2 : Mechanism operation mode at the moment of emergency
- 3- : Mechanism sensor information at the moment of emergency
- 4 : Mechanism mode position at the moment of emergency

*1 : Deck Operation Mode

Display	Deck Operation Mode
00	STOP with pinch roller pressure off (or tape present with P.OFF)
01	STOP with pinch roller pressure on
04	PLAY
0E	REC
11	Cassette ejected
22	FF
26	FWD SEARCH (variable speed) including x2-speed
2E	INSERT REC
43	REW
47	REV SEARCH (variable speed)
4C	AUDIO DUB
6E	INSERT REC (VIDEO+AUDIO)
84	FWD STILL/SLOW
85	REV STILL/SLOW
8F	REC PAUSE
AF	INSERT REC PAUSE
CD	AUDIO DUB PAUSE
EF	INSERT REC (VIDEO+AUDIO) PAUSE

*2 : Mechanism Operation Mode

Display	Mechanism Operation Mode
00	STOP with pinch roller pressure off
01	STOP with pinch roller pressure on
02	U/L STOP (or tape being loaded)
04	PLAY
05	PLAY (x1-speed playback using JOG)
0E	REC
11	Cassette ejected
22	FF
26	FWD SEARCH (variable speed) including x2-speed
2E	INSERT REC
43	REW
47	REV SEARCH
4C	AUDIO DUB
6E	INSERT REC (VIDEO + AUDIO)
84	FWD STILL/SLOW
85	REV STILL/SLOW
8F	REC PAUSE
AF	INSERT REC PAUSE
C7	REV SEARCH (x1-speed reverse playback using JOG)
CD	AUDIO DUB PAUSE
EF	INSERT REC (VIDEO + AUDIO) PAUSE
F0	Mechanism being initialized
F1	POWER OFF as a result of EMG
F2	Cassette being inserted
F3	Cassette being ejected
F4	Transition from STOP with pinch roller pressure on to STOP with pinch roller pressure off
F5	Transition from STOP with pinch roller pressure on to PLAY
F6	Transition from STOP with pinch roller pressure on to REC
F7	Cassette type detection SEARCH before FF/REW is being executed
F8	Tape being unloaded
F9	Transition from STOP with pinch roller pressure off to STOP with pinch roller pressure on
FA	Transition from STOP with pinch roller pressure off to FF/REW
FB	Transition from STOP with pinch roller pressure off to REC.P (T.REC, etc.)
FC	Transition from STOP with pinch roller pressure off to cassette type detection SEARCH
FD	Short REV being executed after END sensor on during unloading
FE	Tension loosening being executed after tape loading (STOP with pinch roller pressure on)

3- : Mechanism Sensor Information

Display	Mechanism Sensor Information			
	S-VHS SW	REC SAFETY SW	START SENSOR	END SENSOR
0-	VHS	Tab broken	ON	ON
1-	VHS	Tab broken	ON	OFF
2-	VHS	Tab broken	OFF	ON
3-	VHS	Tab broken	OFF	OFF
4-	VHS	Tab present	ON	ON
5-	VHS	Tab present	ON	OFF
6-	VHS	Tab present	OFF	ON
7-	VHS	Tab present	OFF	OFF
8-	S-VHS	Tab broken	ON	ON
9-	S-VHS	Tab broken	ON	OFF
A-	S-VHS	Tab broken	OFF	ON
B-	S-VHS	Tab broken	OFF	OFF
C-	S-VHS	Tab present	ON	ON
D-	S-VHS	Tab present	ON	OFF
E-	S-VHS	Tab present	OFF	ON
F-	S-VHS	Tab present	OFF	OFF

-4 : Mechanism Mode Position

Display	Mechanism Mode Position
-0	EJECT position
-1	U/L STOP position
-2	Tape being loaded/unloaded (When the pole base is located on the rear side of the position just beside the drum)
-3	FF/REW position
-4	STOP with pinch roller pressure off
-5	REV (REV STILL/SLOW) position
-6	FWD (FWD STILL/SLOW) position, PLAY position
-7	Intermediate position during transition between other mechanism modes

NOTE: • As the display is always “-7” at any intermediate position between mechanism modes, the position of transitory EMG may sometimes not be locatable.

1.6.5 Emergency detail information ②

The type of the cassette tape and the cassette tape winding position can be confirmed based on the figure in EMG detail information ②.

[FDP display]

*5 : *6 : *7

- *5 : Type of the cassette tape in use ①
- *6 : Winding position of the cassette tape in use
- *7 : Type of the cassette tape in use ② (Winding area)

NOTE: • EMG detail information ② is the reference information stored using the remaining tape detection function of the cassette tape. As a result, it may not identify cassette correctly when a special cassette tape is used or when the tape has variable thickness.

*5 : Cassette tape type ①

Display	Cassette Tape Type ①
00	Cassette type not identified
16	Large reel/small reel (T-0 to T-15/T-130 to T-210) not classified
82	Small reel, thick tape (T-120) identified /thin tape (T-140) identified
84	Large reel (T-0 to T-60) identified
92	Small reel, thick tape (T-130) identified /thin tape (T-160 to T-210) identified
93	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) not classified
C3	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) being classified
D3	Small reel, thick tape/C cassette (T-0 to T-100/C cassette) being classified
E1	C cassette, thick tape (TC-0 to TC-20) identified
E2	Small reel, thick tape (T-0 to T-100) identified
E9	C cassette, thin tape (TC-30 to TC-40) identified
F1	C cassette, thick tape/thin tape (TC-10 to TC-40) not classified

NOTES: • Cassette tape type ① is identified a few times during mode transition and the identification count is variable depending on the cassette tape type. If an EMG occurs in the middle of identification, the cassette tape type may not be able to be identified.

- If other value than those listed in the above table is displayed, the cassette tape type is not identified.

*6 : Cassette tape winding position

The cassette tape winding position at the moment of EMG is displayed by dividing the entire tape (from the beginning to the end) in 22 sections using a hex number from "00" to "15".

- "00" : End of winding
- "15" : Beginning of winding
- "FF" : Tape position not identified

*7 : Cassette tape type ② (Winding area)

Display	Cassette Tape Type ②
00	Cassette type not identified
07	Small reel, thick tape T-5
08 - 0E	C cassette, thick tape TC-10
09 - 15	C cassette, thick tape TC-20P
0A - 0B	Small reel, thick tape T-20
0A - 16	C cassette, thin tape TC-30
0A - 16	C cassette, thin tape TC-40
0D - 0F	Small reel, thick tape T-40
11 - 14	Small reel, thick tape T-60
15 - 18	Small reel, thick tape T-80/DF-160
17 - 1A	Small reel, thick tape T-80/DF-180
19 - 1D	Small reel, thick tape T-100
1D - 21	Small reel, thick tape T-120/DF-240
1E - 1F	Small reel, thin tape T-140
1F - 23	Small reel, thick tape T-130
21 - 23	Small reel, thin tape T-160
21 - 23	Small reel, thin tape T-168
22 - 24	Small reel, thick tape DF-300
22 - 24	Small reel, thin tape T-180/DF-380
22 - 24	Small reel, thin tape T-210/DF-420
22 - 23	Large reel T-5
23 - 24	Large reel T-10
25 - 26	Large reel T-20
27 - 29	Large reel T-30
29 - 2B	Large reel T-40
2D - 2F	Large reel T-60

NOTE: • The values of cassette tape type ② in the above table are typical values with representative cassette tapes.

1.7 SYSCON CIRCUIT

1.7.1 Syscon CPU pin function (IC3001)

PIN NO.	LABEL	IN/OUT	FUNCTION
1	CTL(+)	IN/OUT	CTL(+)SIGNAL
2	SVSS	-	GND
3	CTL(-)	IN/OUT	CTL(-)SIGNAL
4	CTLBIAS	-	CTL BIAS VOLTAGE
5	CTLFB	-	NC
6	CTLAMPOUT	OUT	CTL PULSE OUTPUT
7	CTLSMTIN	IN	CTL PULSE INPUT
8	CFG	IN	CAPSTAN FG PULSE INPUT
9	SVCC	-	SYSTEM POWER
10	AVCC	-	SYSTEM POWER FOR ANALOG CIRCUIT
11	IND(L)	-	NC
12	IND(R)	-	NC
13	NORM/MESEC/S	IN	NORMAL MODE:L/MESECAM MODE:M/NC
14	A.ENV/ND(L)	IN	AUDIO PB FM ENV.INPUT/NON HiFi MODE:L
15	END SENSOR	IN	END SENSOR
16	NC	-	NC
17	START SENSOR	IN	START SENSOR
18	NC	-	NC
19	SCR ID	IN	SCRAMBLE CONTROL INPUT (SCRAMBLE:H)
20	VIDEO ENV	IN	AUTO TRACKING DETECT/INPUT THE AVERAGE OF PLAYBACK VIDEO SIGNAL
21	RF AGC	IN	CHANGES IN ATS+IC OUTPUT AS CAUSED BY CHANGES IN RECEIVER SENSITIVITY WHEN THE SAME CHANNEL IS RECEIVED MORE THAN ONCE ARE INPUT.
22	AFC	IN	TUNING LOCK
23	AVSS	-	GND FOR ANALOG CIRCUIT
24	CTL GAIN	OUT	CONTROL AMP OUT FREQUENCY RESPONSE SWITCHING
25	CAP REV(L)	OUT	CAPSTAN MOTOR REVERSE CONTROL (FWD:H/REV:L)
26	LSB	IN	MECHANISM MODE DETECT(B)
27	LSC	IN	MECHANISM MODE DETECT(C)
28	LSA	IN	MECHANISM MODE DETECT(A)
29	RC	IN	REMOTE CONTROL DATA INPUT
30	PROTECT	IN	DETECTION SIGNAL FOR SW POWER SUPPLY
31	PROJECT 50 IN	IN	CONTROL SIGNAL FOR TV LINK
32	POWER DET	IN	DETECTION SIGNAL FOR POWER DOWN OF AC POWER SUPPLY
33	PROJECT 50 OUT	OUT	CONTROL SIGNAL FOR TV LINK
34	STB/TEST	OUT	STROBE SIGNAL (FOR FDP DRIVER)
35	LMC1	OUT	LOADING MOTOR DRIVE(1)
36	LMC2	OUT	LOADING MOTOR DRIVE(2)
37	LMC3	OUT	LOADING MOTOR DRIVE(3)
38	P.CTL(H)	OUT	CONTROL SIGNAL FOR SWITCHING POWER SUPPLY
39	P.SAVE(L)	OUT	POWER SAVE:L
40	V_UP(H)	-	NC
41	SIDE BAND GAIN	OUT	VOLTAGE CONTROL SIGNAL FOR VIDEO FREQUENCY RESPONSE
42	NC	-	NC
43	VSS	-	GND
44	SAT_CTL	OUT	REMOTE CONTROL OUTPUT FOR SATELLITE RECEIVER
45	VCC	-	SYSTEM POWER
46	JSA	IN	INPUT FOR JOG SHUTTLE
47	JSB	IN	INPUT FOR JOG SHUTTLE
48	REC SAFETY	IN	REC SAFETY SWITCH DETECT (SW ON:L)
49	I2C DATA	IN/OUT	SERIAL DATA TRANSFER OUTPUT
50	I2C CLK	OUT	SERIAL DATA TRANSFER CLOCK
51	S.DATA TOSYS	IN	SERIAL DATA TRANSFER OUTPUT TO THE FDP DRIVER
52	S.DATA FRSYS	OUT	SERIAL DATA TRANSFER OUTPUT TO THE ON-SCREEN IC
53	S.CLK	OUT	SERIAL DATA TRANSMISSION CLOCK FROM THE FDP DRIVER TO THE ON-SCREEN IC
54	SP FG	IN	DETECTION SIGNAL FOR SUPPLY REEL ROTATION/TAPE REMAIN
55	SW2	OUT	"TUNER SYSTEM ""L"" MODE:L"
56	LOCK(L)	IN	TUNING PLL LOCK DETECT:L

PIN NO.	LABEL	IN/OUT	FUNCTION
57	TU CE	OUT	CHIP ENABLE OF THE TUNER UNIT
58	SW1	OUT	"TUNER SYSTEM ""L"" MODE:H"
59	TU FG	IN	DETECTION SIGNAL FOR TAKE-UP REEL ROTATION/TAPE REMAIN
60	TU CLK	OUT	CLOCK FOR DATA TRANSFER TO THE TUNER UNIT
61	TU DATA	OUT	TUNING DATA
62	FWE	-	NC
63	NMI(L)	-	NC
64	X2	-	TIMER CLOCK (32.768 kHz)
65	X1	-	TIMER CLOCK (32.768 kHz)
66	RES(L)	-	RESET TERMINAL (RESET ON:L)
67	OSC1(IN)	-	MAIN SYSTEM CLOCK (10MHz)
68	VSS	-	GND
69	OSC2(OUT)	-	MAIN SYSTEM CLOCK (10MHz)
70	VCC	-	SYSTEM POWER
71	MODE	-	NC
72	TU A MUTE(H)	OUT	TUNER AUDIO MUTE CONTROL (MUTE:H)
73	TU V MUTE(H)	OUT	TUNER VIDEO CONTROL (MUTE:H)
74	MESECAM(H)	OUT	MESECAM:H
75	I2C CLK2	OUT	SERIAL DATA TRANSFER CLOCK FOR MEMORY IC
76	I2C DATA2	IN/OUT	SERIAL DATA TRANSFER OUTPUT FOR MEMORY IC
77	SYNC DET(H)	IN	DETECTION OF VIDEO SYNC SIGNAL (DETECTED:H)
78	OSD CS	OUT	CHIP SELECT FOR THE ON-SCREEN IC
79	EE(L)	OUT	EE/PB CONTROL (EE MODE:L)
80	R.PAUSE	-	NC
81	FMA_SHORT(H)2	-	NC
82	VCC	-	SYSTEM POWER
83	FMA_SHORT(H)1	-	NC
84	VSS	-	GND
85	SP_SHORT(H)	OUT	MODE SELECT
86	LP_SHORT(H)	OUT	MODE SELECT
87	H.REC ST(H)	OUT	HiFi AUDIO SOUND RECORDING START
88	A.MUTE(H)	OUT	AUDIO MUTE CONTROL (MUTE:H)
89	PAL_PB(H)	OUT	PAL MODE:H
90	NC	-	NC
91	NC	-	NC
92	NC	-	NC
93	P.MUTE(L)	OUT	PICTURE MUTE CONTROL (MUTE:L)
94	SECAM(H)	-	NC
95	SECAM_DET	-	NC
96	NC	-	NC
97	NC	-	NC
98	C.SYNC	IN	COMPOSITE SYNC
99	A.FF	OUT	AUDIO FF OUTPUT
100	V.FF	OUT	ROTATION DETECTION SIGNAL FOR DRUM MOTOR/TIMING CONTROL SIGNAL FOR REC
101	CAPPWM	OUT	CAPSTAN MOTOR CONTROL
102	DRUMPWM	OUT	DRUM MOTOR CONTROL
103	NC	-	NC
104	N.REC ST(H)	OUT	NORMAL AUDIO SOUND RECORDING START
105	N.REC(H)	OUT	NORMAL AUDIO REC MODE CONTROL (REC:H)
106	NC	-	NC
107	DPG	IN	DRUM PICKUP PULSE INPUT (SWITCHING PULSE)
108	DFG	IN	DRUM FG PULSE INPUT
109	VCC	-	SYSTEM POWER
110	V.PULSE	OUT	V.PULSE ADDITION TIMING CONTROL
111	VSS	-	GND
112	CTLREF	-	CTL REFERENCE VOLTAGE

SECTION 2 MECHANISM ADJUSTMENT

2.1 BEFORE STARTING REPAIR AND ADJUSTMENT

2.1.1 Precautions

- (1) Unplug the power cable of the main unit before using your soldering iron.
- (2) Take care not to cause any damage to the conductor wires when plugging and unplugging the connectors.
- (3) Do not randomly handle the parts without identifying where the trouble is.
- (4) Exercise enough care not to damage the lugs, etc. during the repair work.
- (5) When installing the front panel assembly, be sure to hook the lug on the back side of the cassette door to the door opener of the cassette holder. If this operation is neglected it will not be possible to remove the cassette when ejecting because the housing door cannot be opened.

2.1.2 Checking for Proper Mechanical Operations

Enter the mechanism service mode when you want to operate the mechanism when no cassette is loaded. (See 1.5 MECHANISM SERVICE MODE.)

2.1.3 Manually Removing the Cassette Tape

1. In case of electrical failures

If you cannot remove the cassette tape which is loaded because of any electrical failure, manually remove it by taking the following steps.

- (1) Unplug the power cable and remove the top cover, bracket and front panel assembly. (See 1.3 DISASSEMBLY/ASSEMBLY METHOD.)
- (2) Unload the cassette by manually turning the loading motor of the mechanism assembly toward the front. In doing so, hold the tape by the hand to keep the slack away from any grease. (See Fig.2-1-1.)
- (3) Bring the pole base assembly (supply or take-up side) to a pause when it reaches the position where it is hidden behind the cassette tape.
- (4) Move the top guide toward the drum while holding down the lug **A** of the bracket retaining the top guide. Likewise hold part **B** down and remove the top guide. Section **C** of the top guide is then brought under the cassette lid. Then remove the top guide by pressing the whole cassette tape down. (See Fig.2-1-2.)
- (5) Remove the cassette tape by holding both the slackened tape and the cassette lid.
- (6) Take up the slack of the tape into the cassette. This completes removal of the cassette tape.

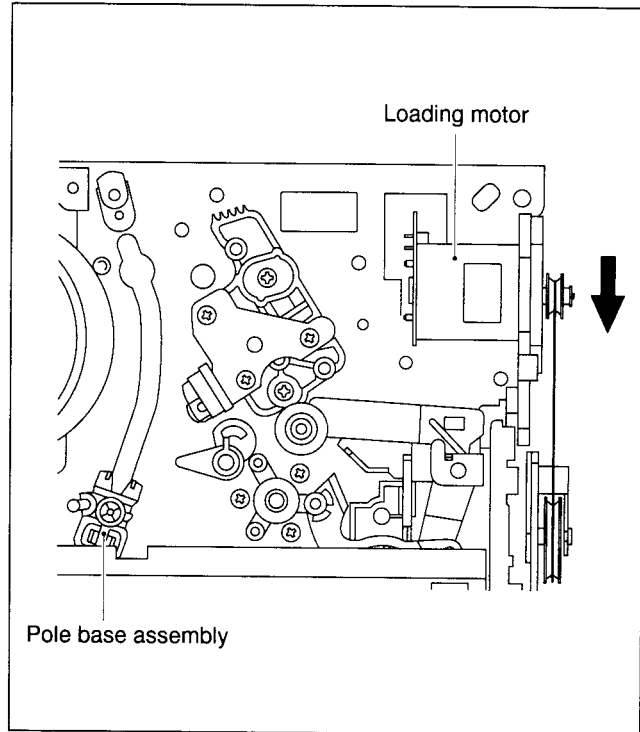


Fig. 2-1-1

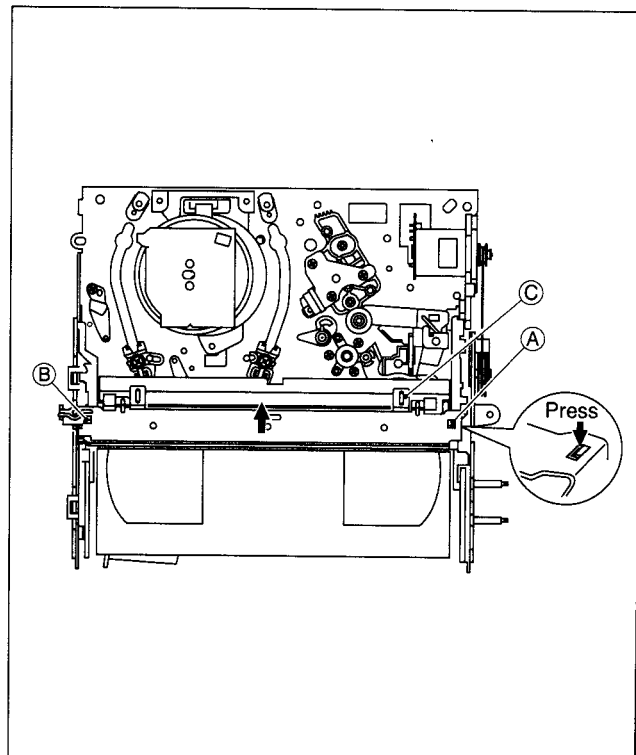


Fig. 2-1-2

2. In case of mechanical failure

If you cannot remove the cassette tape which is loaded because of any mechanical failure, manually remove it by taking the following steps.

- (1) Unplug the power cable and remove the top cover, front panel assembly and others so that the mechanism assembly is visible. (See 1.3 DISASSEMBLY/ASSEMBLY METHOD.)
- (2) While keeping the tension arm assembly of the mechanism assembly free from tension, pull the tape on the pole base assembly (supply or take-up side) out of the guide roller. (See Fig.2-1-3.)
- (3) Take the spring of the pinch roller arm assembly off the hook of the press lever assembly, and detach it from the tape. (See Fig.2-1-4.)
- (4) In the same way as in the electrical failure instructions in 2.1.3 (4), remove the top guide.
- (5) Raise the cassette tape cover. By keeping it in that position, draw out the cassette tape case from the cassette holder and take out the tape.
- (6) By hanging the pinch roller arm assembly spring back on the hook, take up the slack of the tape into the cassette.

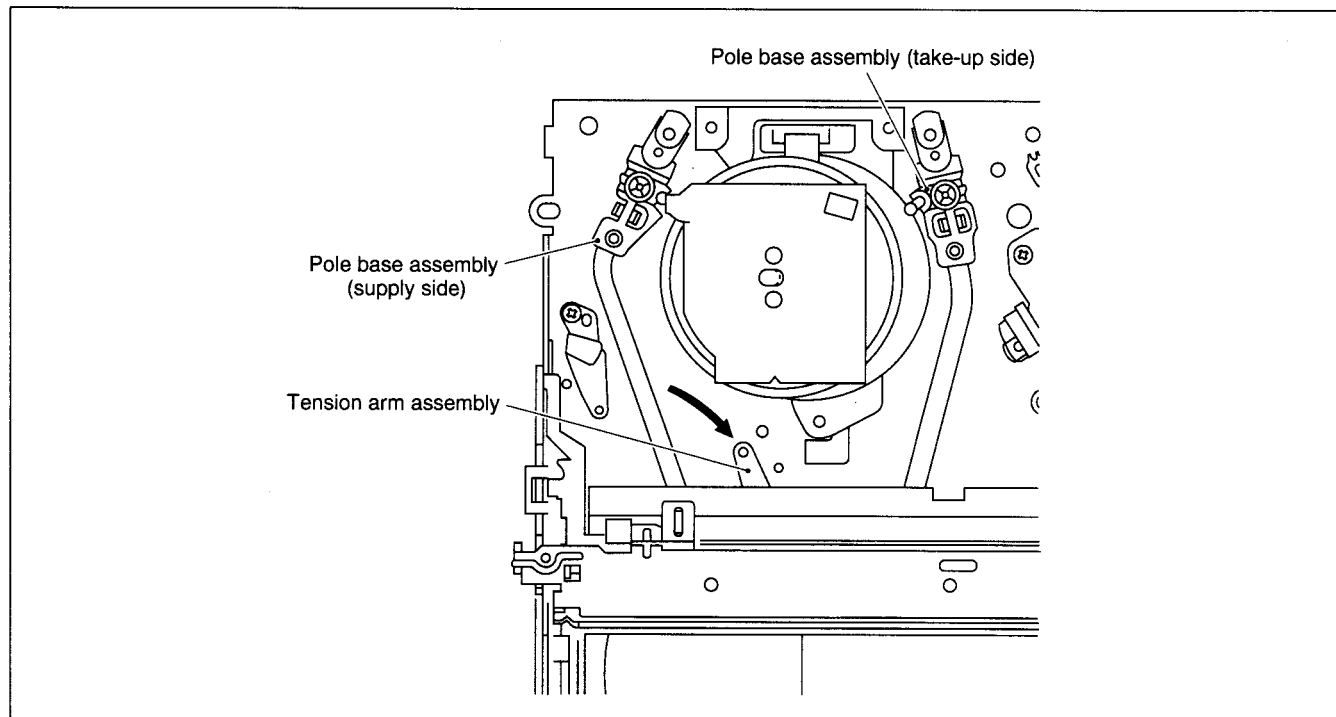


Fig. 2-1-3

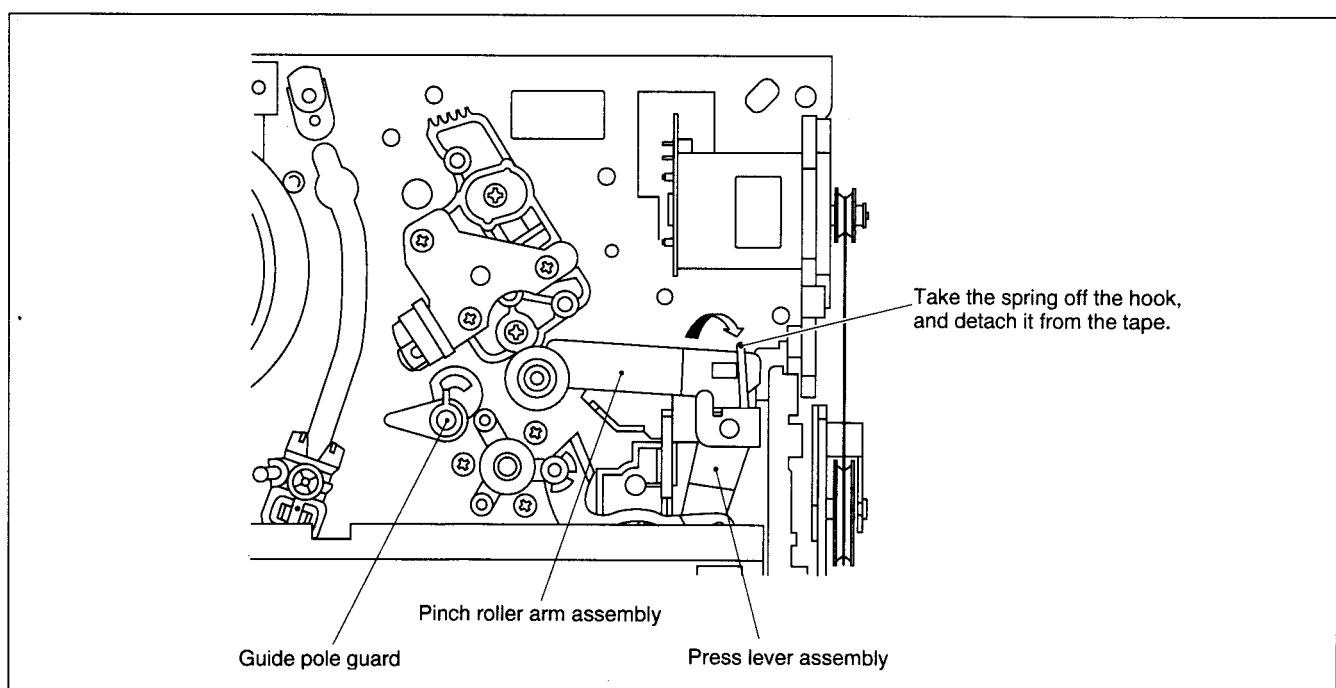


Fig. 2-1-4

2.1.4 Jigs and Tools Required for Adjustment

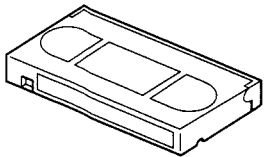
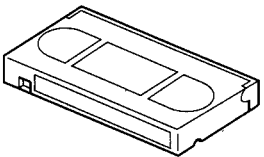
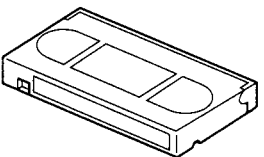
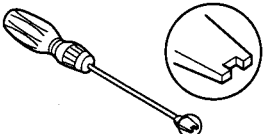
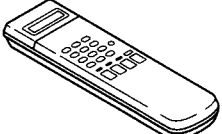
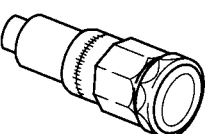
Alignment tape (SP) MHPE	Alignment tape (LP) MHPE-L	Back tension cassette gauge PUJ48076-2	A/C head positioning tool PTU94010
			
Roller driver PTU94002	Jig RCU PTU94023B	Torque gauge PUJ48075-2	
			

Table 2-1-1 Jigs and tools required for adjustment

2.1.5 Maintenance and Inspection

1. Location of major mechanical parts

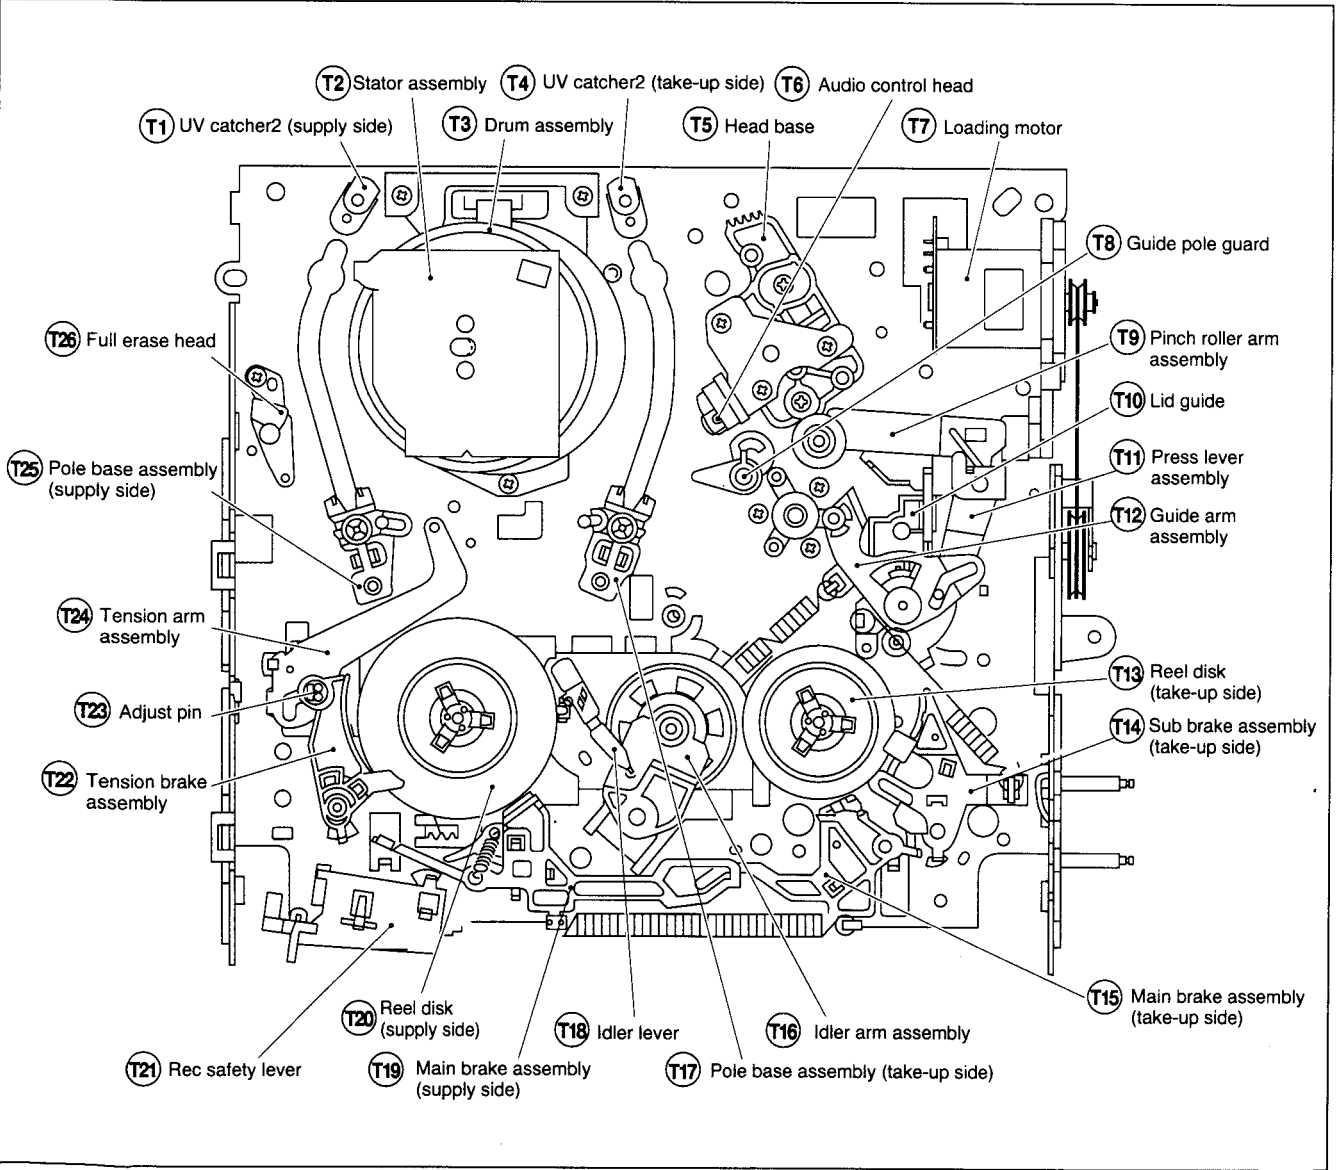


Fig. 2-1-5 Mechanism assembly top side

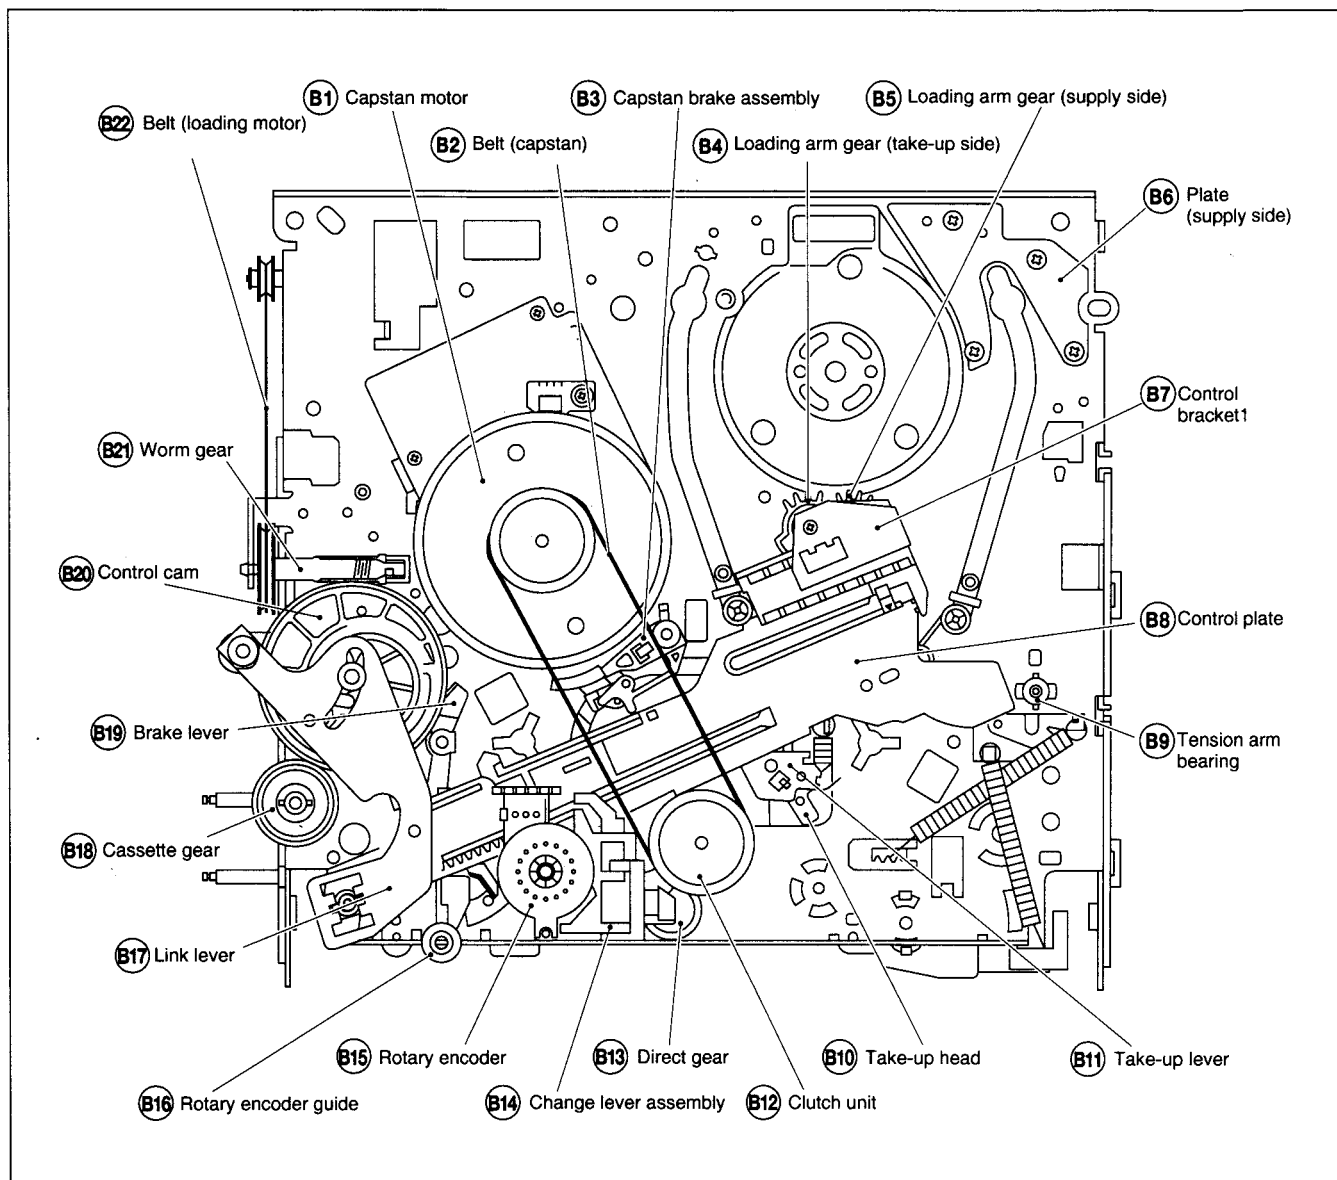


Fig. 2-1-6 Mechanism assembly bottom side

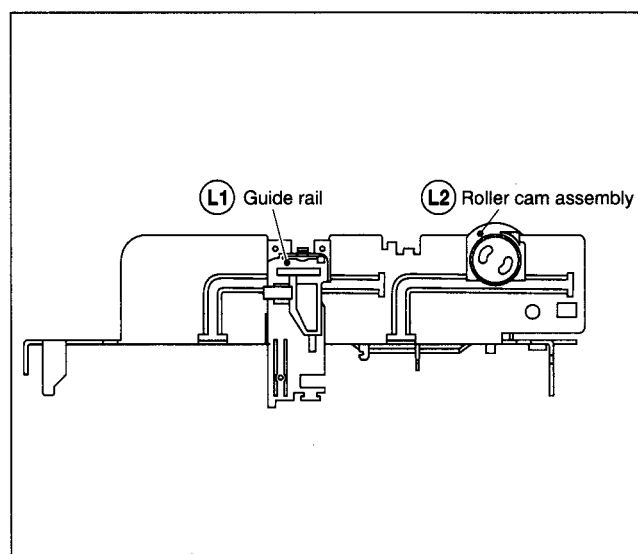


Fig. 2-1-7 Mechanism assembly left side

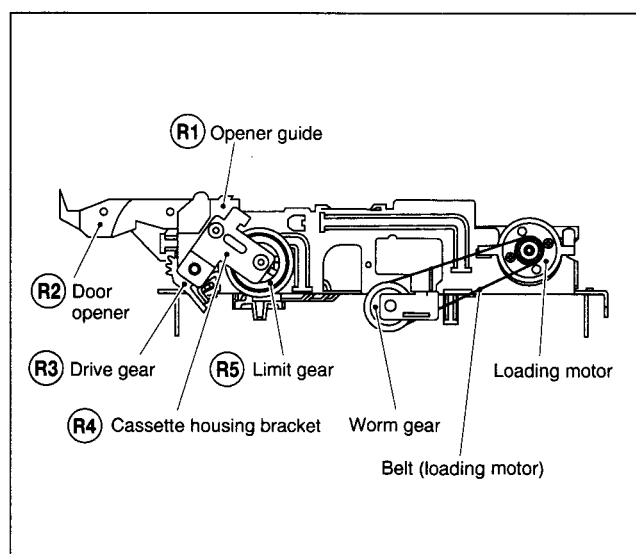


Fig. 2-1-8 Mechanism assembly right side

Note: This table shows the order in which parts are removed for replacement. To replace parts, remove them in the order of 1 to 18 as shown in the table. To install them, reverse the removal sequence. The circled numbers (symbols and numbers) preceding the individual part names represent the numbers in the "Location of major mechanical parts" table. Also, the "T", "B", and "T/B" on the right of each part name shows that the particular part is removed from the front, from the back, and from both sides of the mechanism, respectively.

Symbols and numbers					(L1)	(L2)	(R4)	(R1)	—	—	(R3)	—	(T9)	(T12)	(T11)	(T17)	(B19)	(B12)	(B14)	(B13)	(B17)	(B21)	(B7)	(B8)	(B5)	(B4)	(B11)	(T14)	(T15)	(T13)	(T22)	(T24)	(T18)	(B19)
Symbols and numbers	Removal parts		Front (T)/Back (B) of mechanism	Number of removal steps	Guide rail	Roller cam assembly	Cassette housing bracket	Opener guide	Relay gear	Cassette holder assembly	Drive gear	Drive arm	Pinch roller arm assembly	Guide arm assembly	Press lever assembly	UV catcher2	Rotary encoder	Clutch unit	Change lever assembly	Direct gear	Link lever	Worm gear	Control bracket1	Control plate	Loading arm gear (supply side)	Loading arm gear (take-up side)	Take-up lever	Sub brake assembly (take-up side)	Main brake assembly (take-up side)	Reel disk (take-up side)	Tension brake assembly	Tension arm assembly	Idler lever	Brake lever
	(Reference items)	Replacement parts																																
(L1)	2.2.3	Guide rail	T	1																														
(L2)	2.2.3	Roller cam assembly	T	1																														
(R4)	2.2.3	Cassette housing bracket	T	1																														
(R1)	2.2.3	Opener guide	T	2			1																											
(R2)	2.2.3	Door opener	T	3			1	2																										
—	2.2.3	Relay gear	T	3			1	2																										
(R6)	2.2.3	Limit gear	T	3			1	2																										
—	2.2.3	Cassette holder assembly	T	6	1	2	3	4	5																									
(R3)	2.2.3	Drive gear	T	4			1	2	3																									
—	2.2.3	Drive arm	T	8	1	2	3	4	5	6	7																							
(T9)	2.2.4	Pinch roller arm assembly	T	1																														
(T12)	2.2.5	Guide arm assembly	T	1																														
(T11)	2.2.5	Press lever assembly	T	3									1	2																				
(T6)	2.2.6	Audio control head	T	1																														
(T7)	2.2.7	Loading motor	T	1																														
(B1)	2.2.8	Capstan motor	T/B	1																														
(T17)	2.2.9	UV catcher2	T	1																														
(T17)	2.2.9	Pole base assembly (take-up side)	T/B	2													1																	
(T25)	2.2.9	Pole base assembly (supply side)	T/B	2													1																	
(B19)	2.2.10	Rotary encoder	B	1																														
(B12)	2.2.11	Clutch unit	B	1																														
(B14)	2.2.12	Change lever assembly	B	3													1	2																
(B13)	2.2.12	Direct gear	B	4													1	2	3															
—	2.2.12	Clutch gear1	B	5													1	2	3	4														
(B17)	2.2.13	Link lever	B	1																														
(B19)	2.2.14	Cassette gear	B	2																	1													
(B21)	2.2.14	Control cam	B	2																	1													
(B21)	2.2.14	Worm gear	B	1																														
(T10)	—	Lid guide	T/B	5									1	2	3							4												
(B7)	2.2.15	Control bracket1	B	1																														
(B8)	2.2.15	Control plate	B	6													1	2	3		4		5											
(B5)	2.2.16	Loading arm gear (supply side)	B	7													1	2	3		4		5	6										
(B4)	2.2.16	Loading arm gear (take-up side)	B	8													1	2	3		4		5	6	7									
—	2.2.16	Loading arm gear shaft	B	9													1	2	3		4		5	6	7	8								
(B11)	2.2.17	Take-up lever	T/B	7													1	2	3		4		5	6										
(B10)	2.2.17	Take-up head	T/B	8													1	2	3		4		5	6				7						
—	2.2.17	Control plate guide	T/B	8													1	2	3		4		5	6				7						
(B3)	2.2.18	Capstan brake assembly	T/B	7													1	2	3		4		5	6										
(T14)	2.2.19	Sub brake assembly(take-up side)	T/B	15	1	2	3	4	5	6	7	8					9	10	11		12		13	14										
(T15)	2.2.20	Main brake assembly(take-up side)	T/B	16	1	2	3	4	5	6	7	8					9	10	11		12		13	14				15						
(T19)	2.2.20	Main brake assembly(supply side)	T/B	9	1	2	3	4	5	6	7	8																						
(T13)	2.2.20	Reel disk (take-up side)	T/B	16	1	2	3	4	5	6	7	8					9	10	11		12		13	14					15					
(T22)	2.2.21	Tension brake assembly	T/B	9	1	2	3	4	5	6	7	8																						
(T20)	2.2.21	Reel disk (supply side)	T/B	10	1	2	3	4	5	6	7	8																				9		
(T24)	2.2.21	Tension arm assembly	T/B	10	1	2	3	4	5	6	7	8																				9		
(B9)	2.2.21	Tension arm bearing	T/B	10	1	2	3	4	5	6	7	8																				9		
(T18)	2.2.22	Idler lever	T/B	17	1	2	3	4	5	6	7	8					9	10	11		12		13	14						15	16			
(T16)	2.2.22	Idler arm assembly	T/B	18	1	2	3	4	5	6	7	8					9	10	11		12		13	14						15	16	17		
(B19)	—	Brake lever	T/B	18	1	2	3	4	5	6	7	8					9	10	11		12		13	14				15	16	17				
(B19)	—	Rotary encoder guide	T/B	19	1	2	3	4	5	6	7	8					9	10	11		12		13	14				15	16	17				18

2. Cleaning

Regular cleaning of the transport system parts is desirable but practically impossible. So make it a rule to carry out cleaning of the tape transport system whenever the machine is serviced.

When the video head, tape guide and/or brush get soiled, the playback picture may appear inferior or at worst disappear, resulting in possible tape damage.

- (1) When cleaning the upper drum (especially the video head), soak a piece of closely woven cloth or Kimu-wipe with alcohol and while holding the cloth onto the upper drum by the fingers, turn the upper drum counterclockwise.

Note: *Absolutely avoid sweeping the upper drum vertically as this will cause damage to the video head.*

- (2) To clean the parts of the tape transport system other than the upper drum, use a piece of closely woven cloth or a cotton swab soaked with alcohol.
- (3) After cleaning, make sure that the cleaned parts are completely dry before using the video tape.

3. Lubrication

With no need for periodical lubrication, you have only to lubricate new parts after replacement. If any oil or grease on contact parts is soiled, wipe it off and newly lubricate the parts.

- (1) See the mechanism assembly and disassembly diagrams (M4) for the lubricating or greasing spots. See Table 2-1-2 for the types of oil or grease to be used.

Type	Name	Serial No.	Symbols on the dis-assembly diagrams
Grease	Maltemp SH-P	KYODO-SH-P	AA
Oil	Cosmohydro HV56	COSMO-HV56	BB

Table 2-1-2 Grease and oil used for the unit

4. Suggested servicing schedule for main components

The following table indicates the suggested period for such service measures as cleaning, lubrication and replacement. In practice, the indicated periods will vary widely according to environmental and usage conditions. However, the indicated components should be inspected when a set is brought for service and the maintenance work performed if necessary. Also note that rubber parts may deform in time, even if the set is not used.

System	Parts Name	Operation Hours	
		~1000H	~2000H
Tape transport	Upper drum assembly	★○	○
	A/C head	★○	★○
	Lower drum assembly	★	★○
	Pinch roller arm assembly	★	★
	Full erase head	★	★
	Tension arm assembly	★	★
	Capstan motor (Shaft)	★	★
	Guide arm assembly	★	★
Drive	Capstan motor		○
	Capstan brake assembly		○
	Main brake assembly		○
	Belt (Capstan)	○	○
	Belt (Loading motor)		○
	Loading motor		○
	Clutch unit		○
	Worm gear		○
	Control plate		○
	Brush	★○	★○
Other	Tension brake assembly	○	○
	Rotary encoder		○

★: Cleaning

○: Inspection or Replacement if necessary

Table 2-1-3

2.2 REPLACEMENT OF MAJOR PARTS

2.2.1 Before Starting Disassembling (Phase matching between mechanical parts)

The mechanism of this unit is closely linked with the rotary encoder and system controller circuits.

Since the system controller detects the status of mechanical operation in response to phases of the rotary encoder (internal switch positions), the mechanism may not operate properly unless such parts as the rotary encoder, control plate, loading arm gear, control cam, cassette gear, limit gear, relay gear and drive gear are installed in their correct positions.

Especially, this model is not provided with any cassette housing assembly, so that cassette loading and unloading must be accomplished by operation of the cassette holder assembly. The latter is in turn driven by such parts as the drive gear, relay gear and limit gear. Exercise enough care, therefore, to have the phases of all this gear matching one another.

(For information on phase matching of the mechanism, see the instructions on how to install individual parts.)

This unit is provided with a mechanism assembly mode. It is therefore necessary to enter this mode for assembling and disassembling procedures. This mode is usually not in use, manually set it when it is required.

2.2.2 How to Set the Mechanism Assembling Mode

Remove the mechanism assembly and place it bottom side up. (See SECTION 1 DISASSEMBLY.) Turn the worm gear toward the front so that the guide hole of the control cam is brought into alignment with the hole at the mechanism assembly chassis. This position renders the mechanism assembling mode operational. Make sure that the control plate is located in alignment with the mark E. (See Fig.2-2-1.)

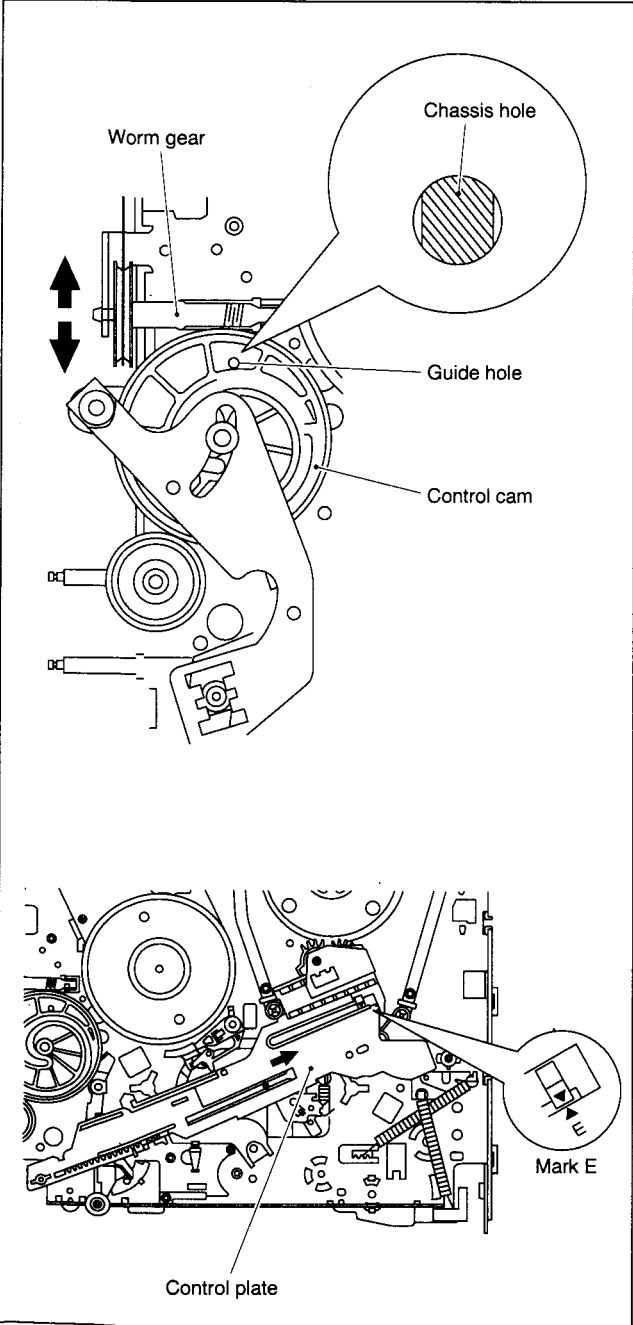


Fig. 2-2-1

2.2.3 Cassette Holder Assembly

1. How to remove

- (1) Remove the guide rail and roller cam assembly. (See Fig.2-2-2.)
(3 lugs on the guide rail and one lug on the roller cam assembly)

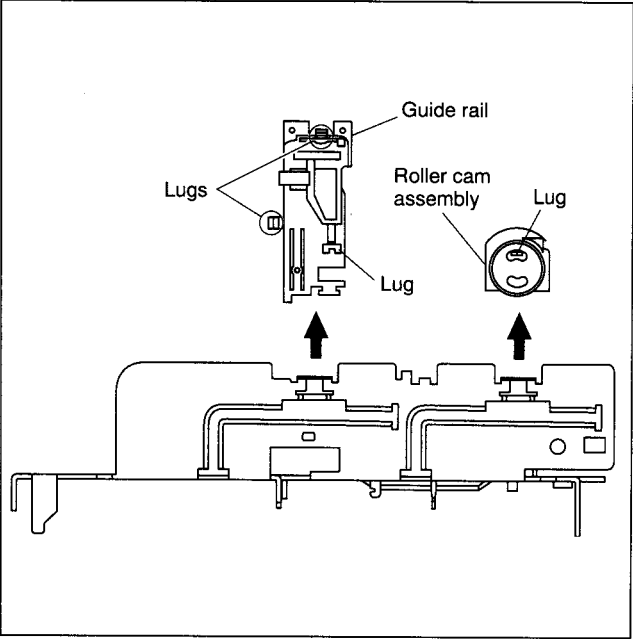


Fig. 2-2-2

- (2) Remove the two slit washers and remove the cassette housing bracket. (See Fig.2-2-3.)
- (3) Remove the opener guide, spring(A), door opener, relay gear and limit gear. (See Fig.2-2-3.)

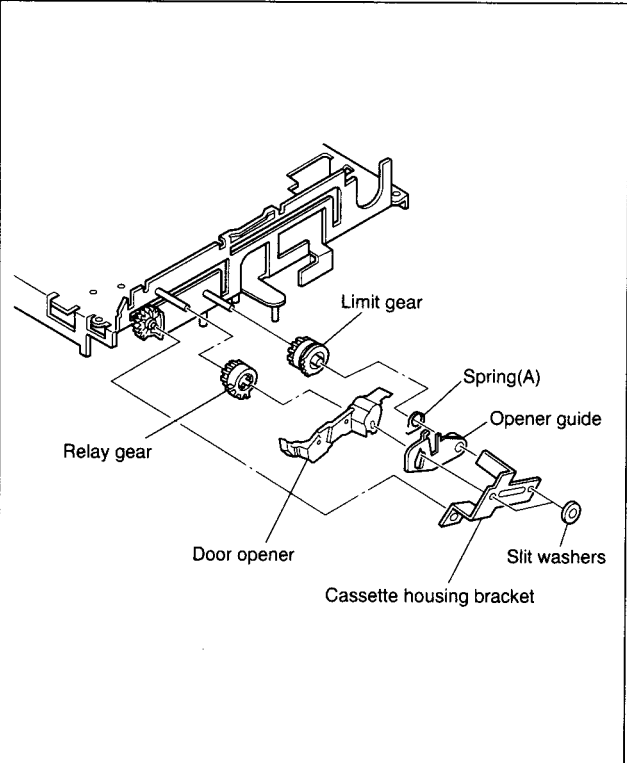


Fig. 2-2-3

- (4) While swinging the lock levers (R) and (L) of the cassette holder assembly toward the front, slide the cassette holder assembly until its legs come to where the guide rail and the roller cam assembly have been removed (so that the drive arm is upright). (See Fig.2-2-4.)

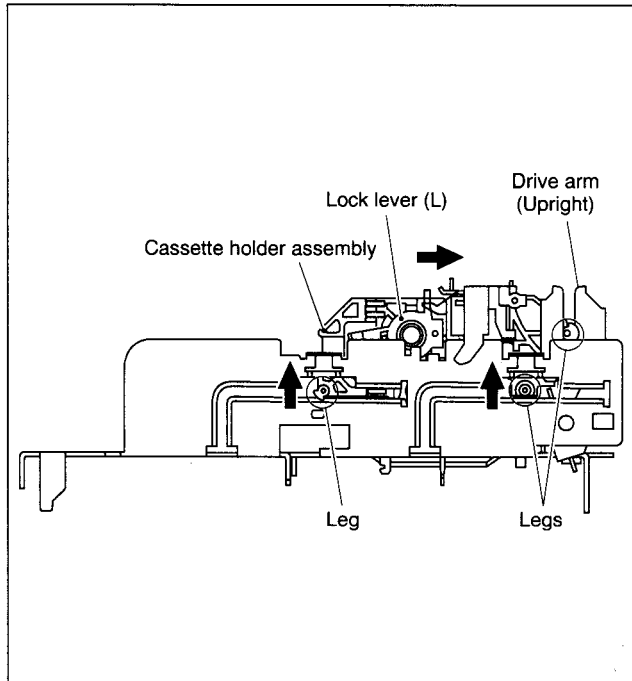


Fig. 2-2-4

- (5) While holding the left side of the cassette holder, lift the cassette holder assembly so that the three legs on the left side are all released. Then pull the legs (A) and (B) on the right side out of the rail and also pull up the leg (C). (See Fig.2-2-5 and Fig.2-2-6.)

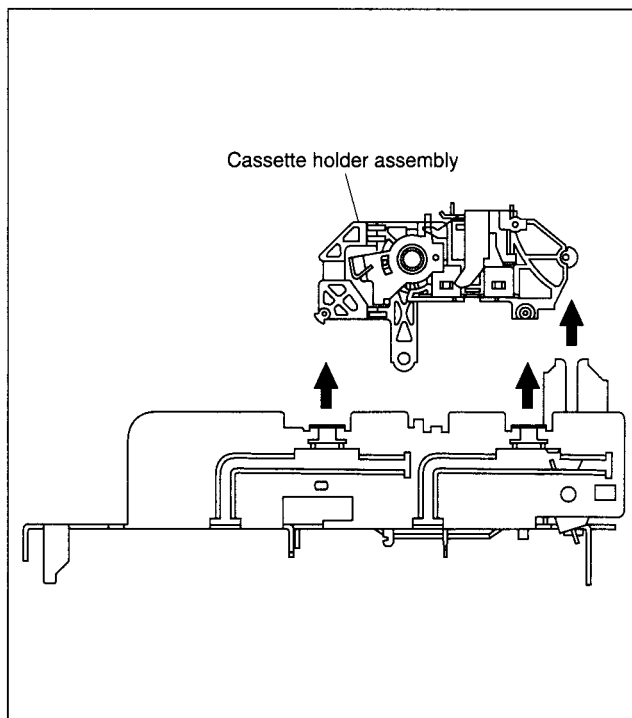


Fig. 2-2-5

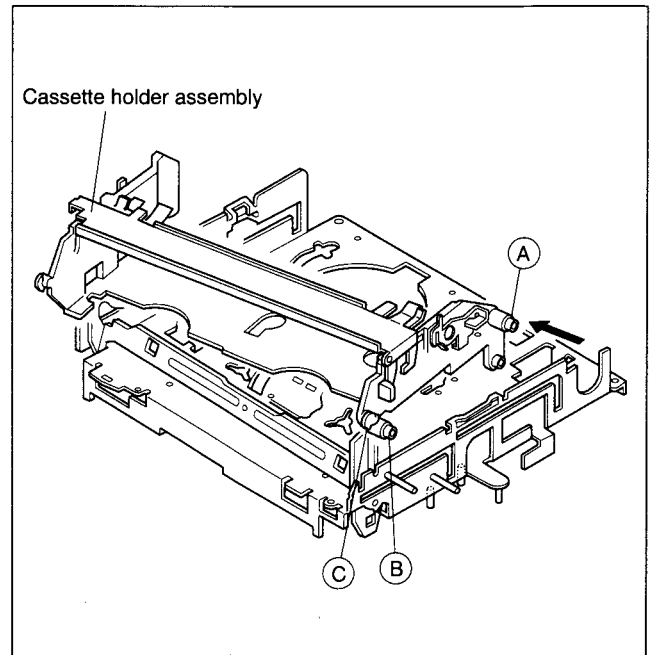


Fig. 2-2-6

- (6) Draw out the drive gear, and remove the drive arm.

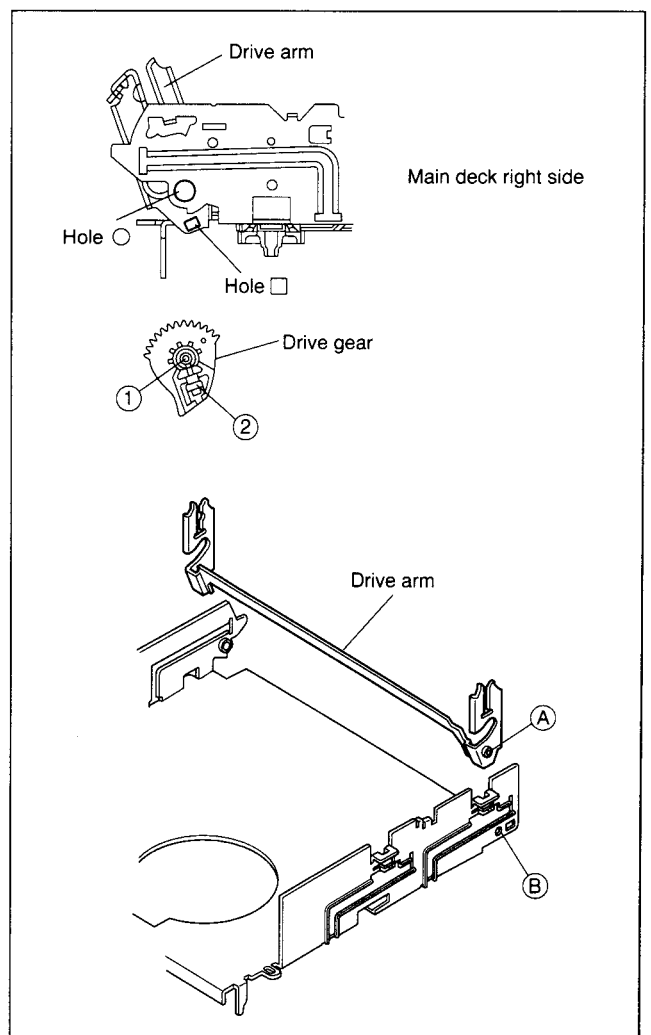


Fig. 2-2-7

2. How to install (Phase matching)

- (1) Insert the section (A) of the drive arm into the section (B) of the main deck.
- (2) Insert the section ① of the drive gear into the round hole, and the section ② into the square hole on the drive arm. (See Fig.2-2-7.)
- (3) Hold the drive arm upright and fit the leg (C) on the right side of the cassette holder assembly into the groove. (See Fig.2-2-8.)
- (4) While swinging the lock lever (R) of the cassette holder assembly toward the front, put the legs (A) and (B) into the rail. (See Fig.2-2-8.)
- (5) Drop the three legs on the left side of the cassette holder assembly into the groove at one time. (See Fig.2-2-9.)
- (6) Slide the whole cassette holder assembly toward the front to bring it to the eject end position.
- (7) Install the limit gear so that the notch on the outer circumference of the limit gear is brought into alignment with the guide hole on the main deck. (See Fig.2-2-10.)
- (8) Install so that the notch on the periphery of the relay gear is aligned with the notch of the main deck and that hole A of the relay gear is aligned with the hole A of the limit gear and that hole B of the relay gear is aligned with the hole B of the drive gear. (See Fig.2-2-10.)
- (9) Install the door opener, opener guide, spring(A) and cassette housing bracket and fasten the two slit washers.

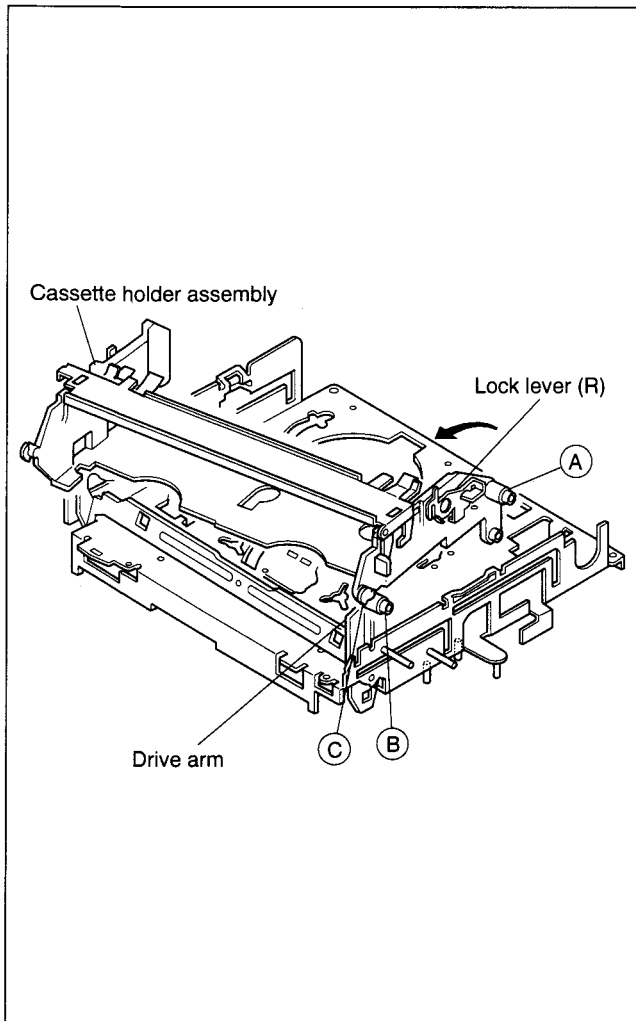


Fig. 2-2-8

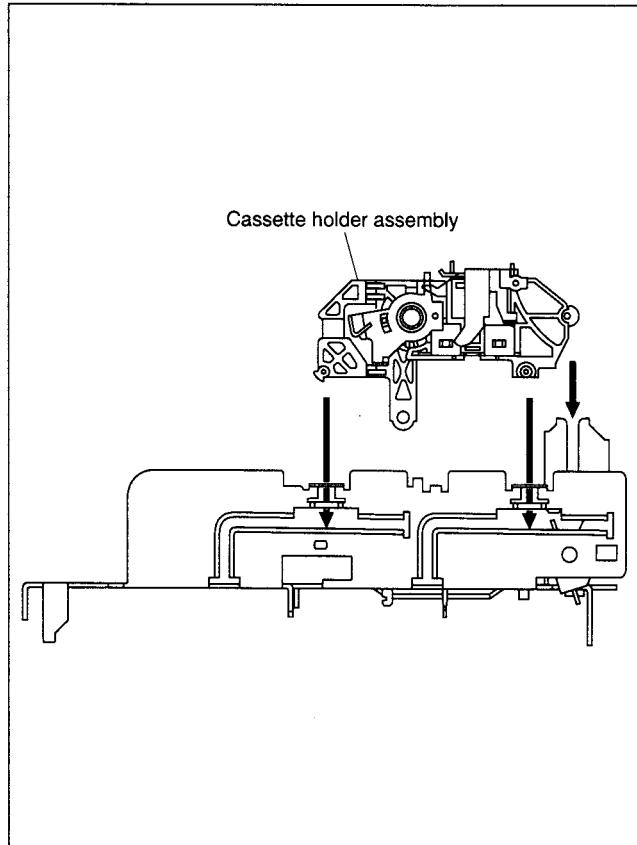


Fig. 2-2-9

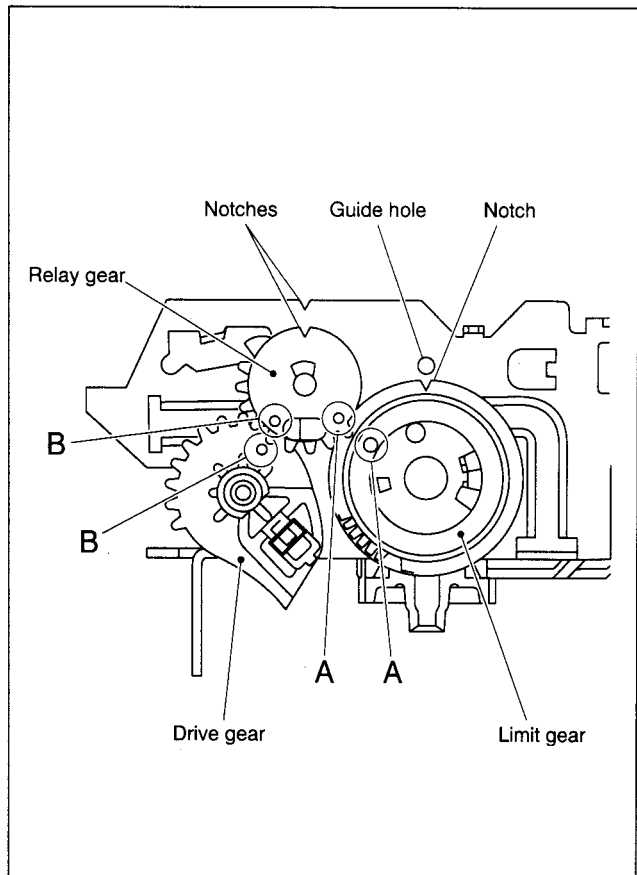


Fig. 2-2-10

2.2.4 Pinch Roller Arm Assembly

1. How to remove

- (1) Remove the spring from the hook of the press lever assembly.
- (2) Remove the slit washer and remove the pinch roller seat 2. (See Fig.2-2-11.)
- (3) Remove the pinch roller arm assembly by pulling it up.

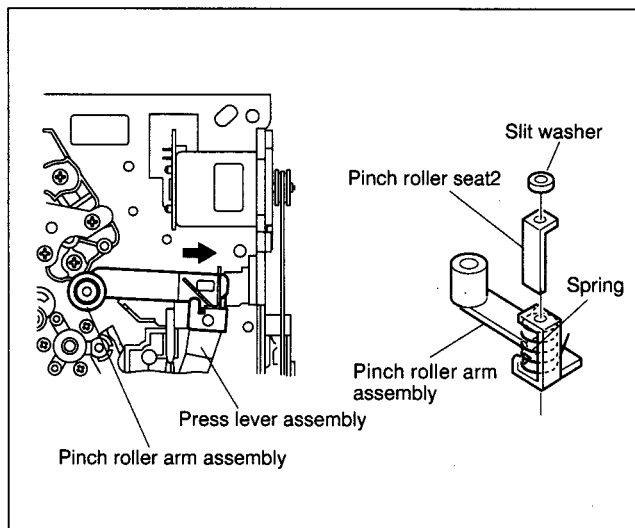


Fig. 2-2-11

2.2.5 Guide Arm Assembly and Press Lever Assembly

1. How to remove

- (1) Remove the spring and expand the lug of the lid guide in the arrow-indicated direction. Then remove the guide arm assembly by pulling it up.
- (2) Remove the press lever assembly by pulling it up. (See Fig.2-2-12.)

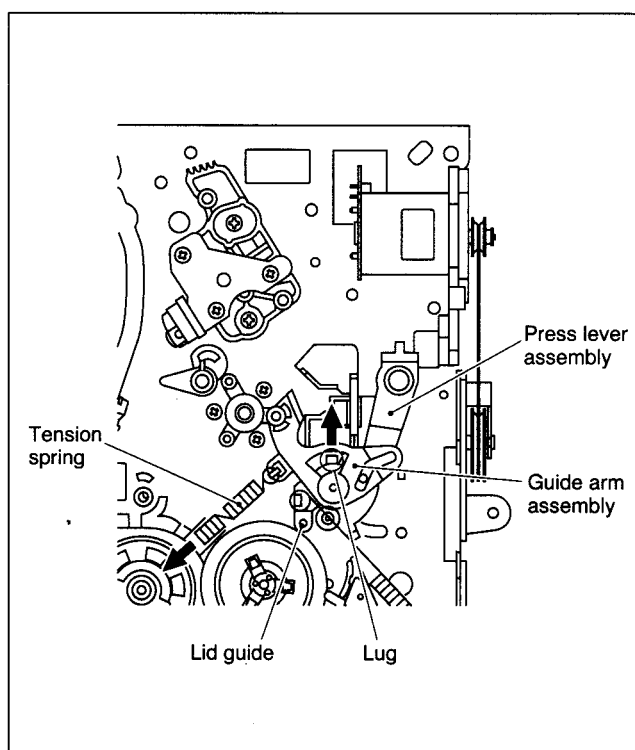


Fig. 2-2-12

2.2.6 Audio Control Head

1. How to remove

- (1) Remove the two screws (A) and remove the audio control head together with the head base.

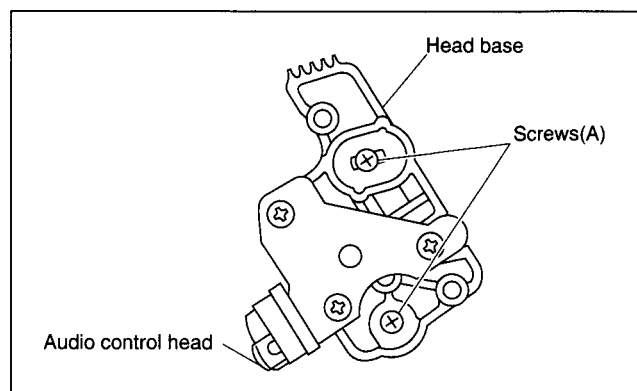


Fig. 2-2-13

- (2) When replacing only the audio control head, remove the three screws (B) while controlling the compression spring.

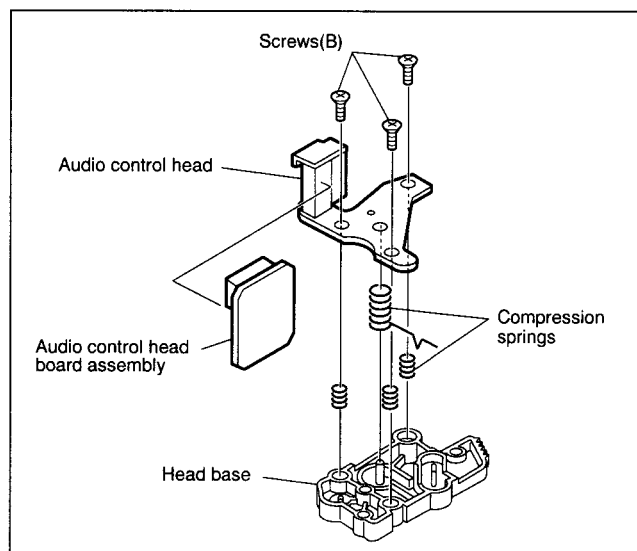


Fig. 2-2-14

2. How to install

- (1) To make the post-installation adjustment easier, set the temporary level as indicated in Fig.2-2-15. Also make sure that the screw centre is brought into alignment with the centre position of the slot.

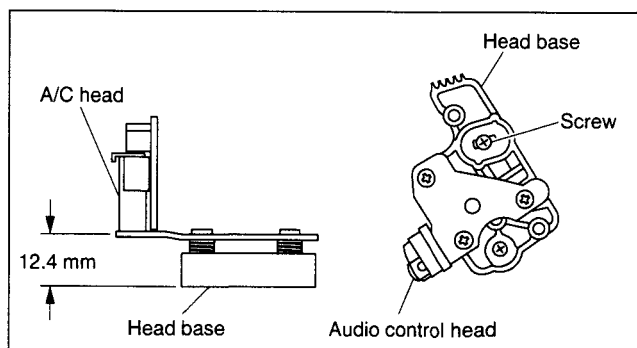


Fig. 2-2-15

2.2.7 Loading Motor

1. How to remove

- (1) Remove the belt wound around the worm gear.
- (2) Open the two lugs of the motor guide and remove the loading motor, loading motor board assembly and motor guide altogether by pulling them up.
- (3) When replacing the loading motor board assembly, take care with the orientation of the loading motor. (Install so that the loading motor label faces upward.)
- (4) When the motor pulley has been replaced, choose the fitting dimension as indicated in Fig.2-2-16.

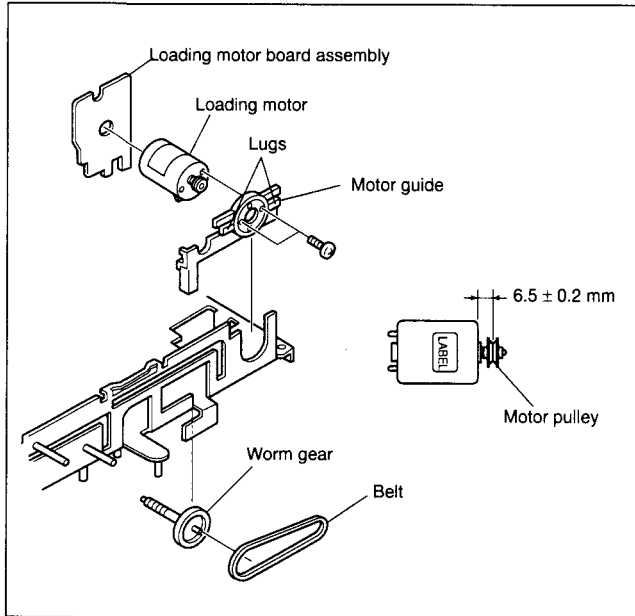


Fig. 2-2-16

2.2.8 Capstan Motor

1. How to remove

- (1) Remove the belt (capstan) on the mechanism assembly back side.
- (2) Remove the three screws (A) and remove the capstan motor.

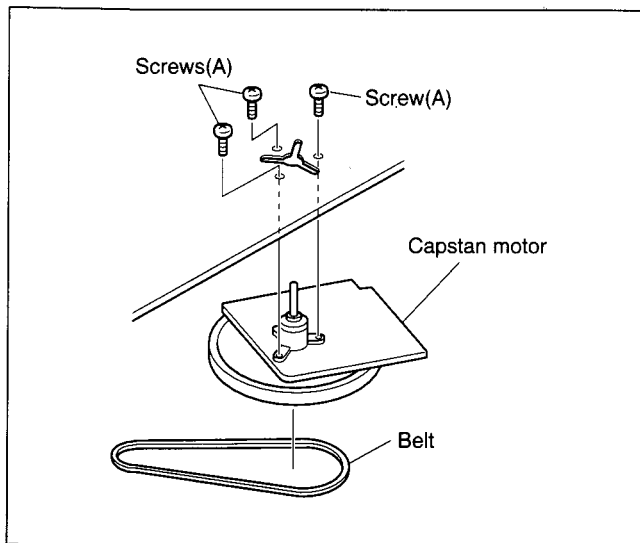


Fig. 2-2-17

2. How to install (Centering the mounting position)

When the capstan motor has once been removed and then reinstalled out of the initial correct position in the rotational direction, the capstan motor current may be unstable during operation in high or low temperatures. This may result in greater Wow & Flutter and occasionally in power break-down because of current over - load. Install the capstan motor while following the procedure given below.

(The capstan motor is centrally located when the unit is shipped from the factory.)

- (1) Provisionally tighten the three screws (A) securing the capstan motor.
- (2) Install the mechanism assembly to which the capstan motor is provisionally fastened on the bottom chassis which incorporates the Main board assembly. (No need to tighten the screws for mounting the mechanism.)
Make sure that all the connectors for the mechanism assembly and the Main board assembly are correctly installed as indicated in Fig. 2-2-18.

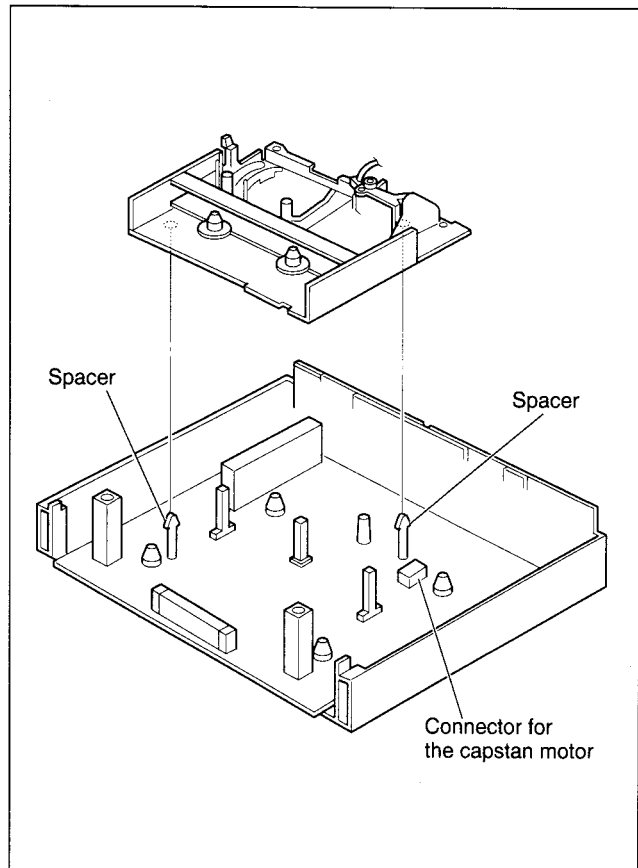


Fig. 2-2-18

- (3) Making sure that the connector for the capstan motor is correctly mounted, and securely tighten the three screws (A).

Note: When the capstan motor has been replaced with a new one, perform recording in the EP(or LP) mode for at least 2 minutes at normal temperatures immediately before starting the FF/REW or SEARCH operations (Aging).

2.2.9 Pole Base Assembly (supply or take-up side)

1. How to remove

- (1) Remove the UV catcher 2 on the removal side by loosening the screw (A).
- (2) Remove the pole base assembly on the supply side from the mechanism assembly by loosening the screw (B) on the mechanism assembly back side and sliding the pole base assembly toward the UV catcher 2.
- (3) As for the pole base assembly on the take-up side, turn the pulley of the loading motor to lower the cassette holder because the screw (B) is hidden under the control plate. (See the "Procedures for Lowering the Cassette holder assembly" of 1.3 DISASSEMBLY/ASSEMBLY METHOD.) Further turn the motor pulley to move the cassette holder until the screw (B) is no longer under the control plate (in the half-loading position). Then remove it as done for the supply side by removing the screw (B).

NOTE: After reinstalling the Pole base assembly and the UV catcher2, be sure to perform compatibility adjustment.

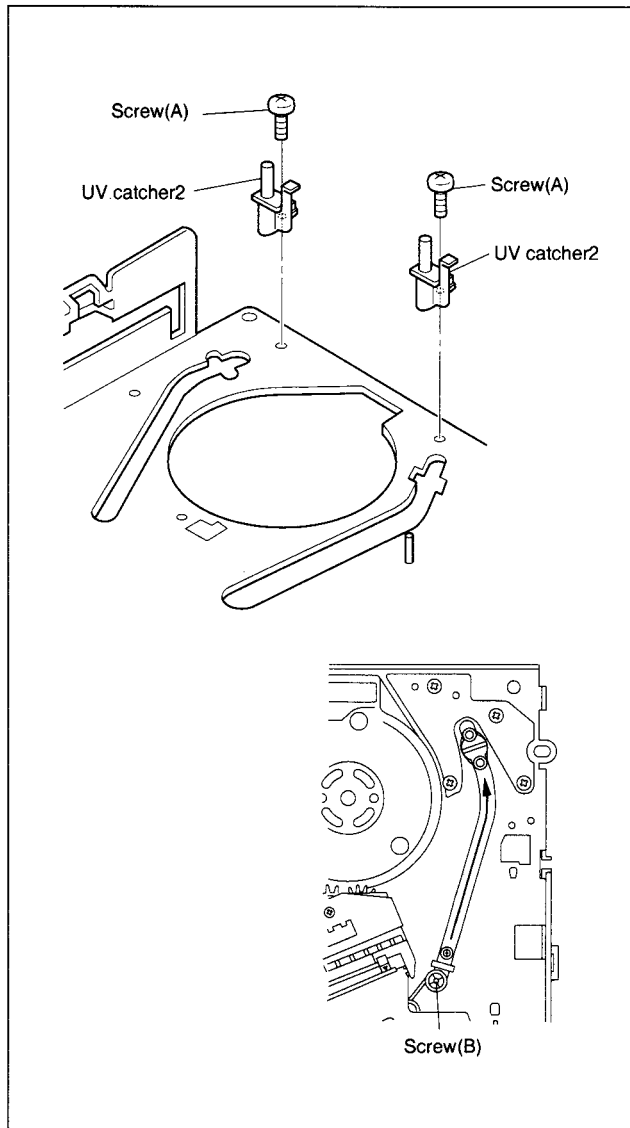


Fig. 2-2-19

2.2.10 Rotary Encoder

1. How to remove

- (1) Remove the screw (A) and remove the rotary encoder by pulling it up. (See Fig. 2-2-20.)

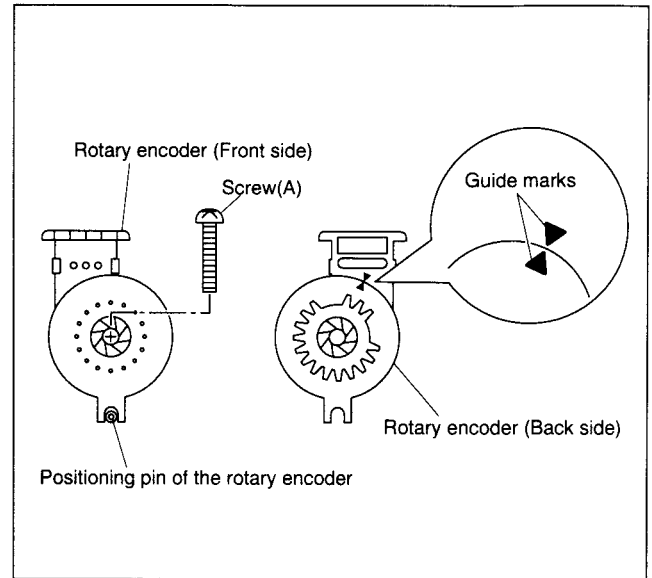


Fig. 2-2-20

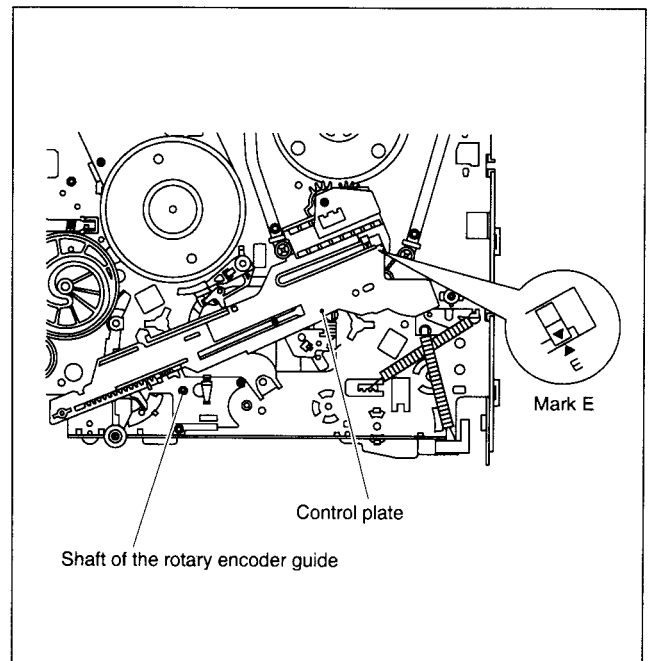


Fig. 2-2-21

2. How to install (Phase matching)

- (1) Make sure that the mark E of the control plate is in alignment with the mark ▼ of the loading arm gear shaft and bring the guide marks on the rotary encoder into alignment as indicated in Fig. 2-2-20. (See Fig. 2-2-20 and Fig. 2-2-21.)
- (2) Turn over the rotary encoder with its guide marks kept in alignment and install it by fitting on the shaft of the rotary encoder guide and the positioning pin.
- (3) Tighten the screw (A) to complete the installation.

2.2.11 Clutch Unit

- (1) Remove the belt wound around the capstan motor and the clutch unit.
- (2) Remove the slit washer and remove the clutch unit.

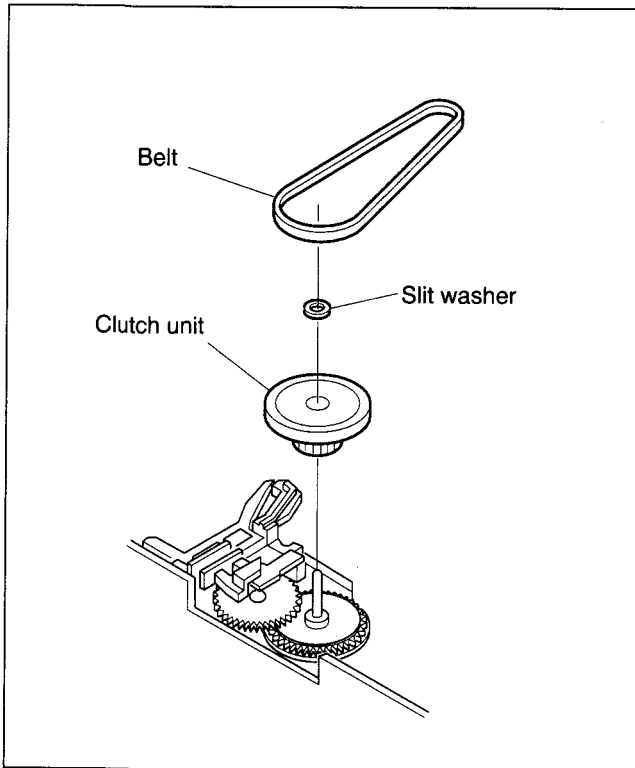


Fig. 2-2-22

2.2.12 Change Lever Assembly, Direct Gear and Clutch Gear1

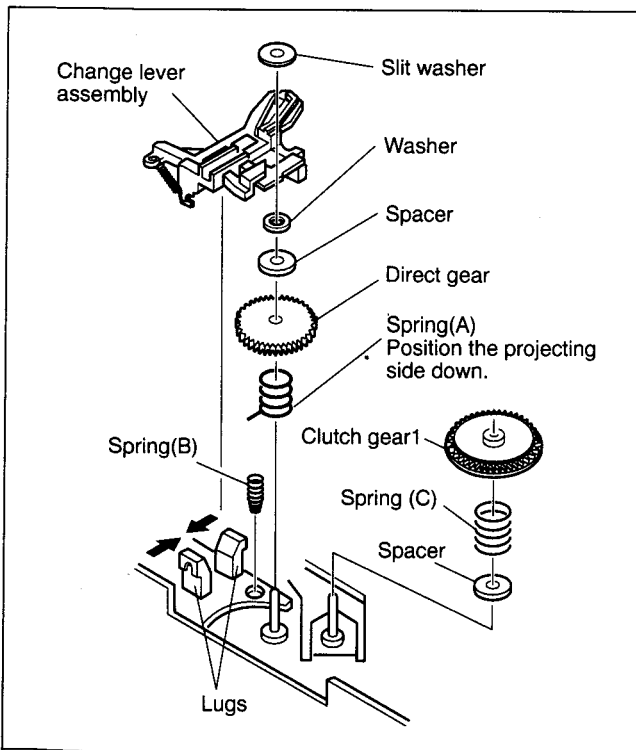


Fig. 2-2-23

1. How to remove

- (1) Release the two lugs of the rotary encoder guide in the arrow-indicated direction and remove the change lever assembly.
- (2) Remove the slit washer retaining the direct gear and remove the latter.
Take care so as not to lose the washer and spring. (See Fig.2-2-23.)

2. How to install

- (1) Install the clutch gear1, spring (A), spring (C), direct gear, spacer and others to the individual shafts of the main deck, and finally the slit washer. (See Fig.2-2-23.)
- (2) Let the spring (B) drops into the rotary encoder guide hole and install the change lever assembly. (Take care not to mistake a direction of the spring.) The point is to slightly lift the clutch gear1 and catch it from the both sides with the assembly. (See Fig.2-2-24.)

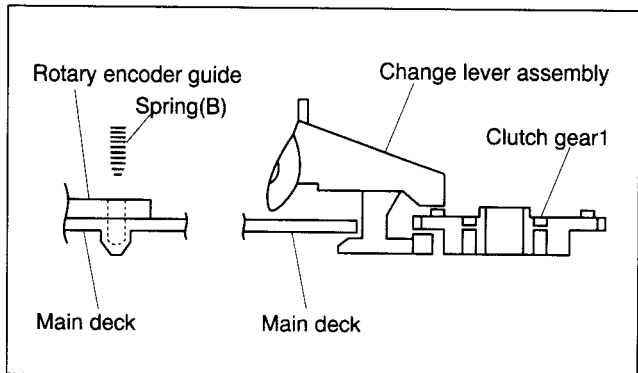


Fig. 2-2-24

2.2.13 Link Lever

1. How to remove

- (1) Remove the two slit washers.
- (2) Remove the link lever by lifting it from the shaft retained by the slit washers. Then swing the link lever counterclockwise and remove it from the locking section of the control plate.

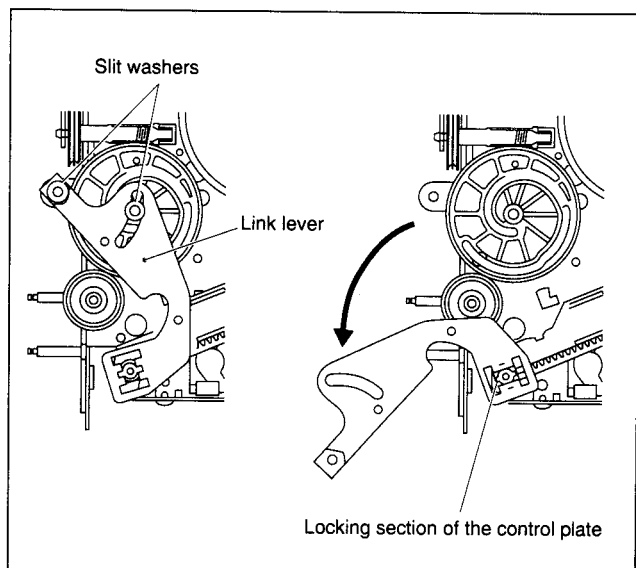


Fig. 2-2-25

2. How to install (Phase matching)

- (1) Slide the control plate so that its mark E is aligned with the mark ▼ on the loading arm gear shaft. (See Fig.2-2-26.)
- (2) Rotate the worm gear until the guide hole of the control cam is aligned exactly with the guide hole of the main deck. (See Fig.2-2-27.)
- (3) Insert the link lever into the locking section of the control plate. (See Fig.2-2-25.)
- (4) Rotate the link lever clockwise so that it is installed on the shafts in the centre and on the left of the control cam.
- (5) Fasten the slit washers at these two points.

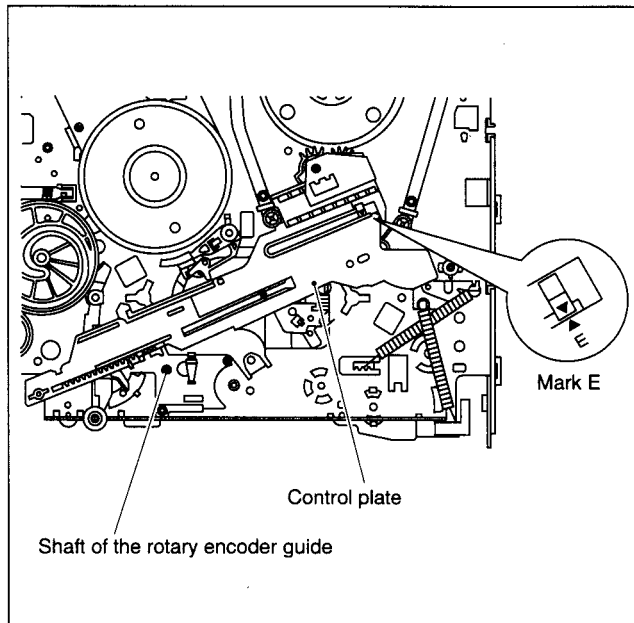


Fig. 2-2-26

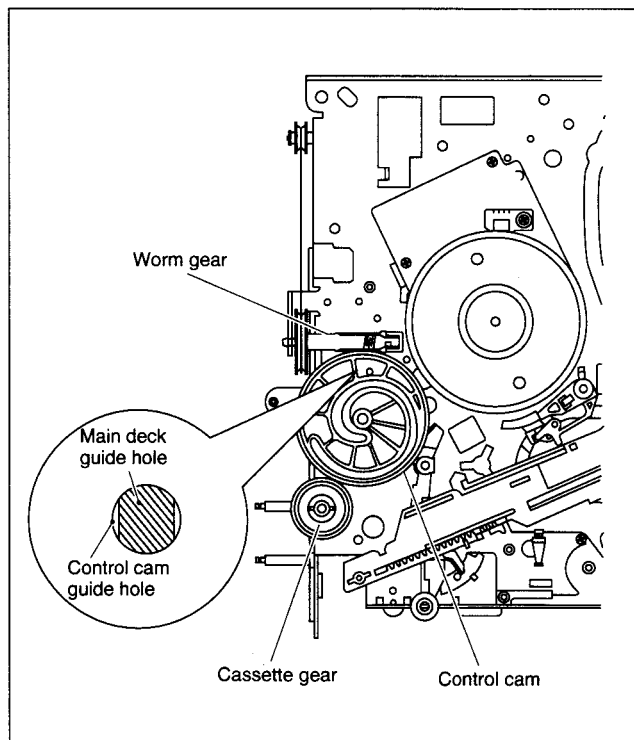


Fig. 2-2-27

2.2.14 Cassette Gear, Control Cam and Worm Gear

1. How to remove

- (1) Remove the control cam by lifting it.
- (2) Open the two lugs of the cassette gear outward and pull the latter off.
- (3) Remove the belt wound around the worm gear and the loading motor.
- (4) Open the lug of the lid guide outward and remove the worm gear.

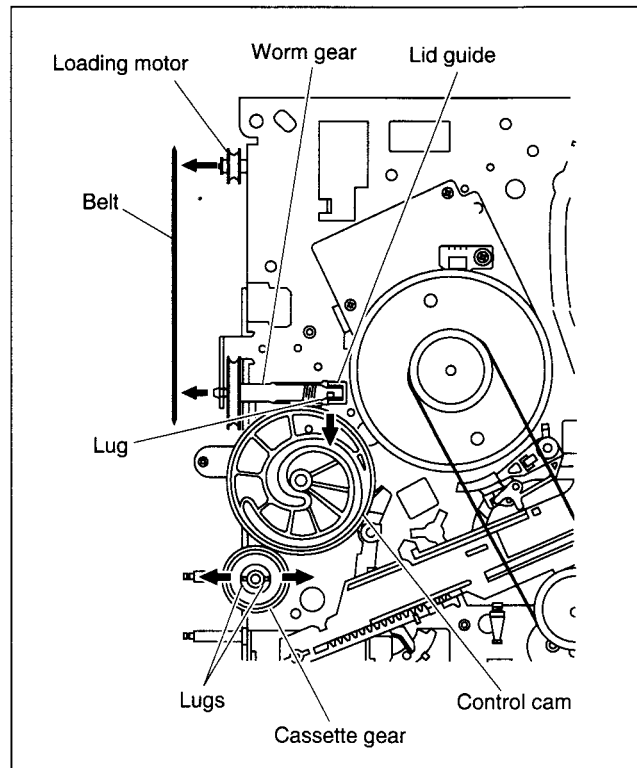


Fig. 2-2-28

2.2.15 Control Plate

1. How to remove

- (1) Remove the screw (A) retaining the control bracket 1 and remove the latter.
- (2) Slide the control plate as indicated by the arrow and remove the control plate. (See Fig.2-2-29.)

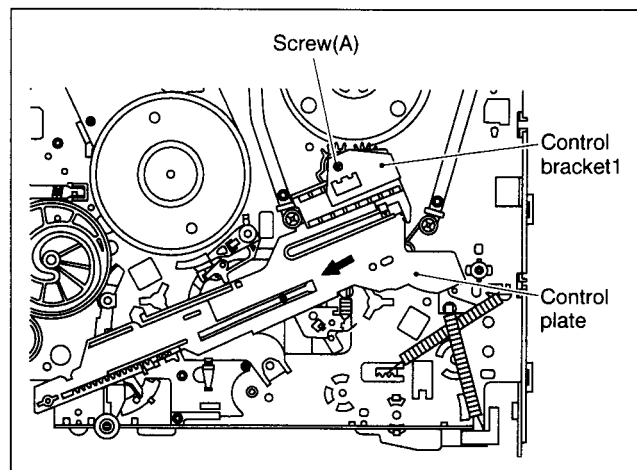


Fig. 2-2-29

2. How to install (Phase matching)

- (1) Adjust the position of the idler arm assembly pin as indicated in Fig.2-2-30 (to the left of centre of the R section).
- (2) Bring the guide hole of the take-up lever into alignment with the hole at the control plate guide and fix the position by inserting a 1.5 mm hexagonal wrench.
- (3) Install the control plate so that the section A of the loading arm gear shaft fits into the hole (A) of the control plate, the section B of the control plate guide into the hole (B), and the control plate comes under the section C of the rotary encoder guide and the section D of the loading arm gear shaft while press-fit the pole base assembly (supply side) as indicated by the arrow. It is important that the tension arm assembly shaft is positioned closer toward you than the control plate. (See Fig.2-2-31.)
- (4) Make sure that the mark E of the control plate is in alignment with the mark ▼ of the loading arm gear shaft. (See Fig.2-2-31.)
- (5) Pull off the hexagonal wrench for positioning.

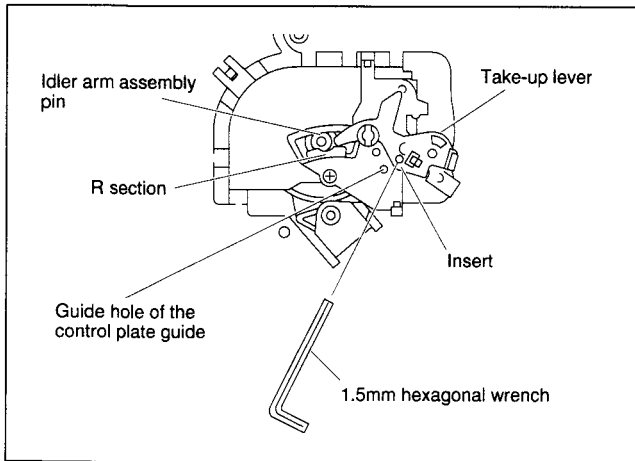


Fig. 2-2-30

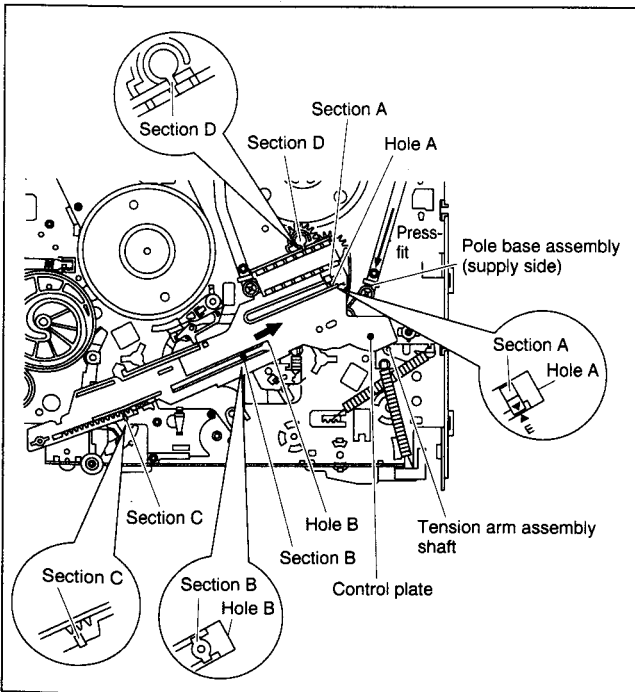


Fig. 2-2-31

2.2.16 Loading Arm Gear (supply or take-up side) and Loading Arm Gear Shaft

1. How to remove

- (1) Remove the loading arm gear (supply side) by loosening the screw (A). (See Fig. 2-2-32.)
 - (2) Remove the screw (B) and remove the torsion arm from the pole base assembly (take-up side). (See Fig.2-2-32.)
 - (3) Turn the loading arm gear (take-up side) clockwise so that the notch of the loading arm gear (take-up side) is in alignment with the projection of the loading arm gear shaft and lift it.
- Likewise, turn the loading arm counterclockwise so that the notch is in alignment with the projection and remove the loading arm gear (take-up side). (See Fig.2-2-32 and Fig. 2-2-33.)
- (4) When removing the loading arm gear shaft, be sure of first removing the screw retaining the drum assembly (on the back side of the loading arm gear shaft). Then remove the screw (C) and remove the loading arm gear shaft by sliding it.

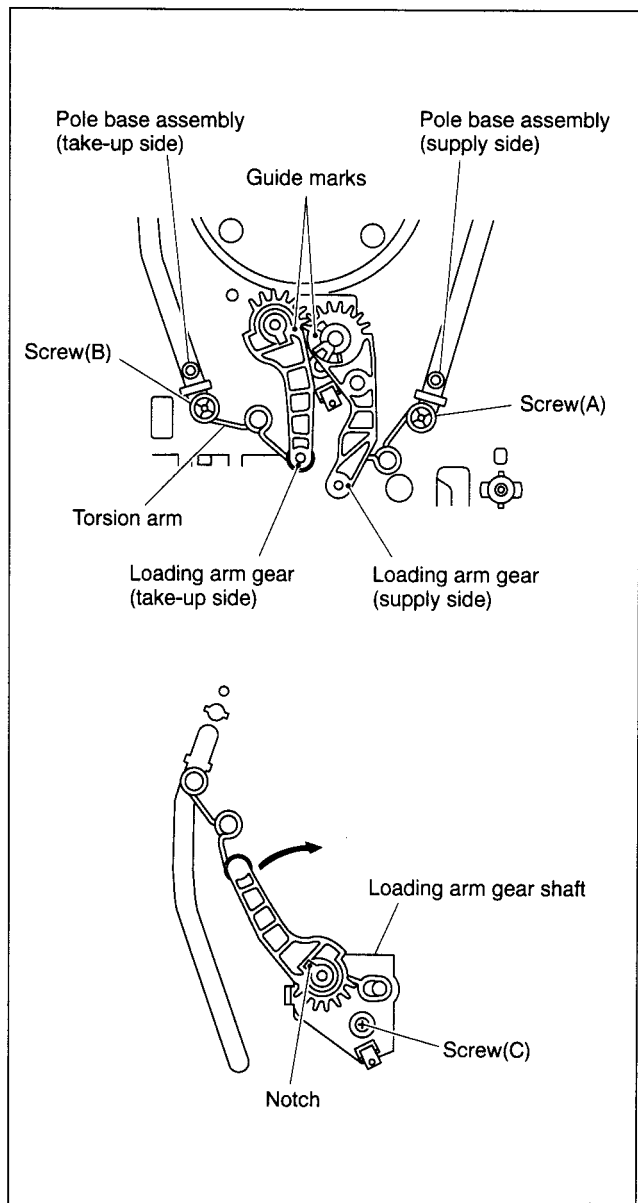


Fig. 2-2-32

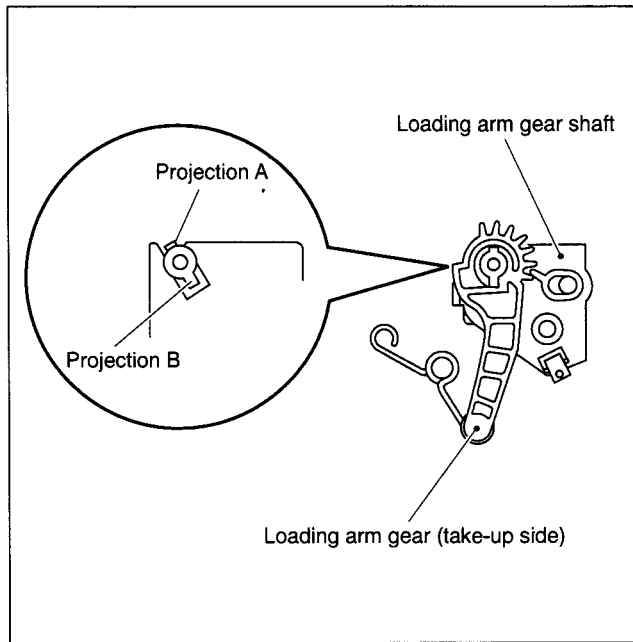


Fig. 2-2-33

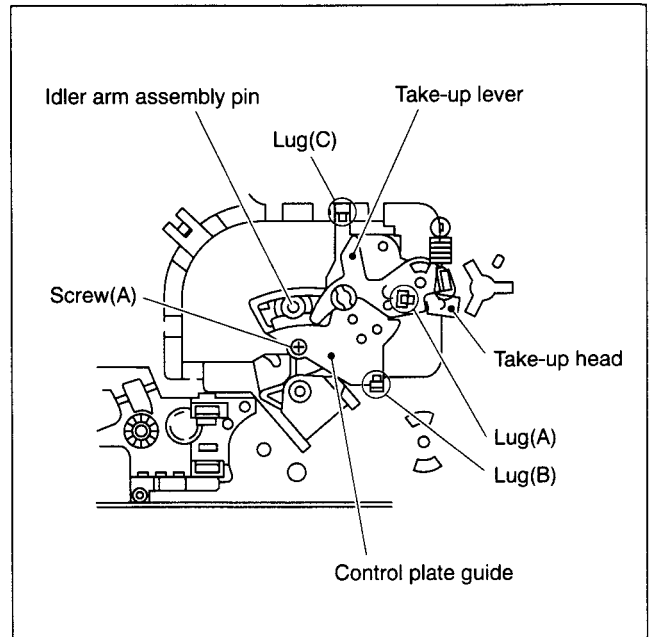


Fig. 2-2-34

2. How to install

- (1) Align the notch of the loading arm gear (take-up side) to the projection B of the loading arm gear shaft and slip it over. Then rotate it clockwise for alignment with the projection A and slip it down to the bottom. (See Fig.2-2-33.)
- (2) Then turn the loading arm gear (take-up side) counterclockwise. Hang the torsion arm on the pole base assembly (take-up side) and tighten the screw (B).
- (3) Install the loading arm gear (supply side) so that the guide mark of the loading arm gear (take-up side) is in alignment with the guide mark of the loading arm gear (supply side). Then hang the torsion arm on the pole base assembly (supply side) and tighten the screw (A). (See Fig.2-2-32.)

2.2.17 Take-up Lever, Take-up Head and Control Plate Guide

- (1) Remove the spring of the take-up lever from the main deck.
- (2) Remove the lug (A) of the take-up lever from the main deck and pull out the take-up lever and the take-up head together.
- (3) Remove the screw (A).
- (4) Align the idler arm assembly pin in the centre of the R section of the control plate guide, remove the control plate guide lugs (B) and (C) from the main deck, and remove the control plate guide.

2.2.18 Capstan Brake Assembly

1. How to remove

- (1) Move the lug (A) of the capstan brake assembly in the arrow-indicated direction so that it comes into alignment with the notch of the main deck. (See Fig. 2-2-35.)
- (2) Remove the lug (B) of the capstan brake assembly from the main deck and remove the capstan brake assembly.

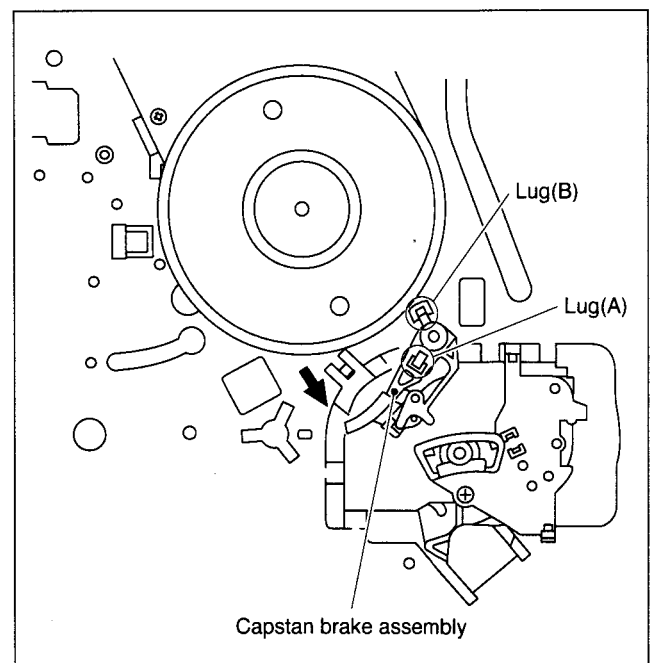


Fig. 2-2-35

2.2.19 Sub Brake Assembly (take-up side)

1. How to remove

- (1) Remove the spring attached to the lid guide and sub brake assembly (take-up side).
- (2) Bring the lug (A) of the sub brake assembly (take-up side) into alignment with the notch of the main deck.
- (3) Remove the lugs (B) and (C) of the sub brake assembly (take-up side) from the main deck and remove the sub brake assembly (take-up side).

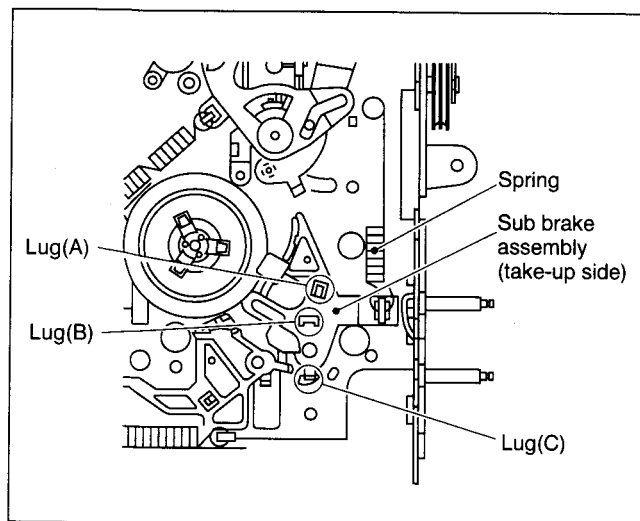


Fig. 2-2-36

2.2.20 Main Brake Assembly (take-up side), Reel Disk (take-up side) and Main Brake Assembly (supply side)

1. How to remove

- (1) Move the main brake assembly (take-up side) in the arrow-indicated direction and remove the reel disk (take-up side).
- (2) Remove the spring attached to the main brake assembly.
- (3) Remove the lug (A) of the main brake assembly (take-up side) and pull out the lug (B) after bringing it into alignment with the main deck notch.
- (4) Remove the lugs (C), (D) and (E) of the main brake assembly (supply side) from the main deck and pull them off. (See Fig. 2-2-37.)

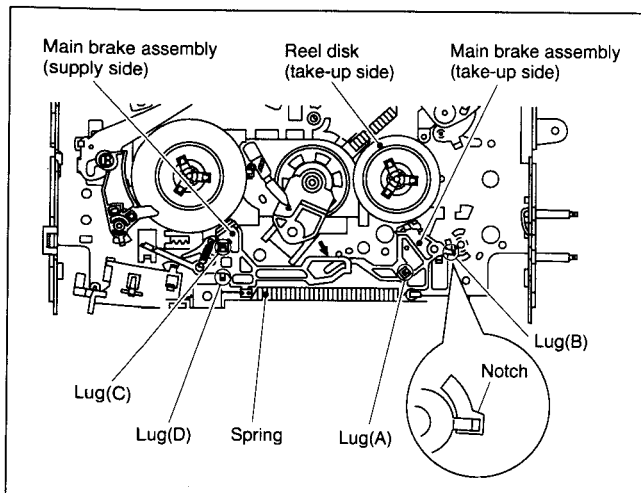


Fig. 2-2-37

- (5) When installing the main brake assembly (take-up side), slide the brake lever in the direction as indicated by the arrow to prevent it from hitting the projection of the main brake assembly (take-up side). (See Fig. 2-2-38.)

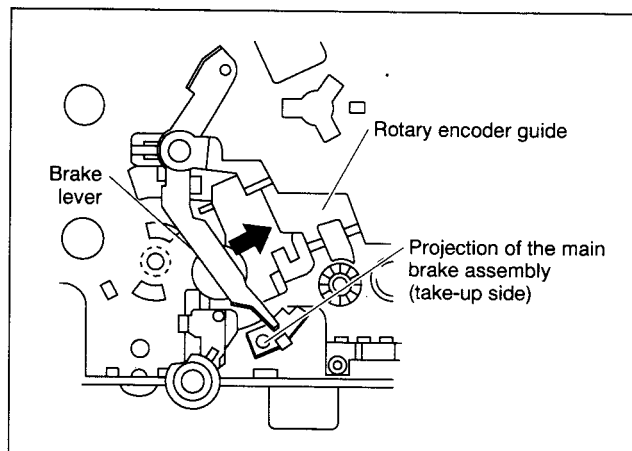


Fig. 2-2-38

2.2.21 Tension Brake Assembly, Reel Disk (supply side) and Tension Arm Assembly

1. How to remove

- (1) Remove the three lugs of the tension brake assembly from the main deck and pull them off.
- (2) Remove the reel disk (supply side) by loosening in the arrow-indicated direction the main brake assembly (supply side).
- (3) Remove the tension spring on the back of the main deck. Then release the lug of the tension arm bearing in the arrow-indicated direction and draw out the tension arm assembly. (See Fig. 2-2-39.)

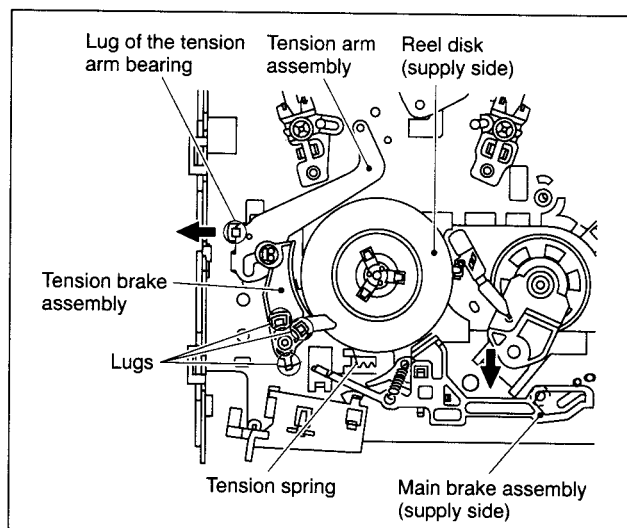


Fig. 2-2-39

2.2.22 Idler Lever, Idler Arm Assembly

1. How to remove

- (1) Remove the lug of the idler lever from the main deck and remove the hook fitted in the idler arm assembly hole by lifting it.
- (2) Remove the slit washer and pull out the idler arm assembly.

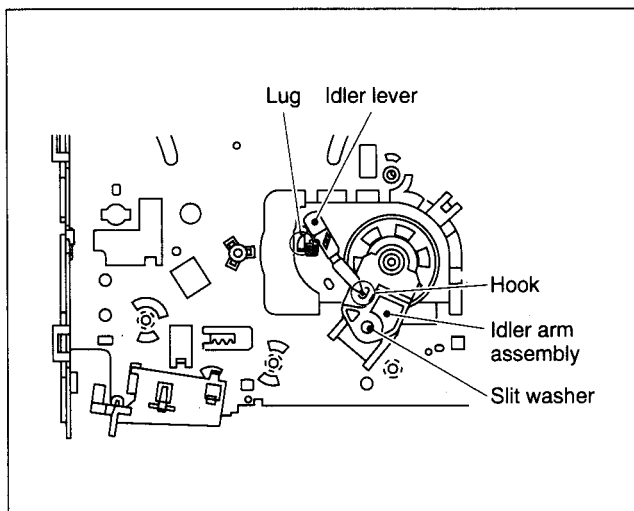


Fig. 2-2-40

2.2.23 Stator Assembly

- (1) Remove the flat cable.
- (2) Remove the two screws (A).
- (3) Remove the stator assembly by lifting in the arrow-indicated direction. (Take care that the brush spring does not jump out.)
- (4) After installation, be sure to perform the PB switching point adjustment according to the electrical adjustment procedure.

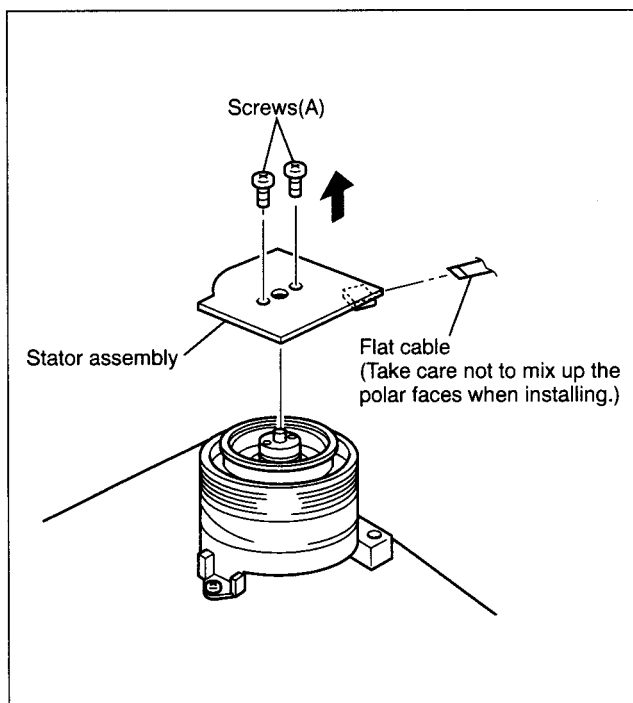


Fig. 2-2-41

2.2.24 Rotor Assembly

- (1) Remove the stator assembly.
- (2) Remove the two screws (B) and remove the rotor assembly.

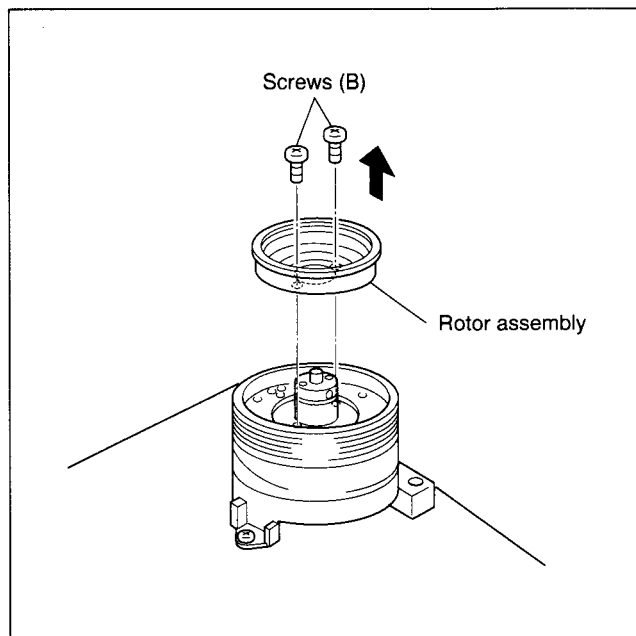


Fig. 2-2-42

Note: When installing the rotor assembly, note that a normal picture cannot be obtained without ensuring the phase matching as mentioned below.

- (3) Match the phases of the upper drum assembly and the rotor assembly as indicated in Fig.2-2-43.
- (4) Place the upper drum assembly hole (a) over the rotor assembly holes (b) (with three holes to be aligned) and tighten the two screws (B). (See Fig.2-2-43.)

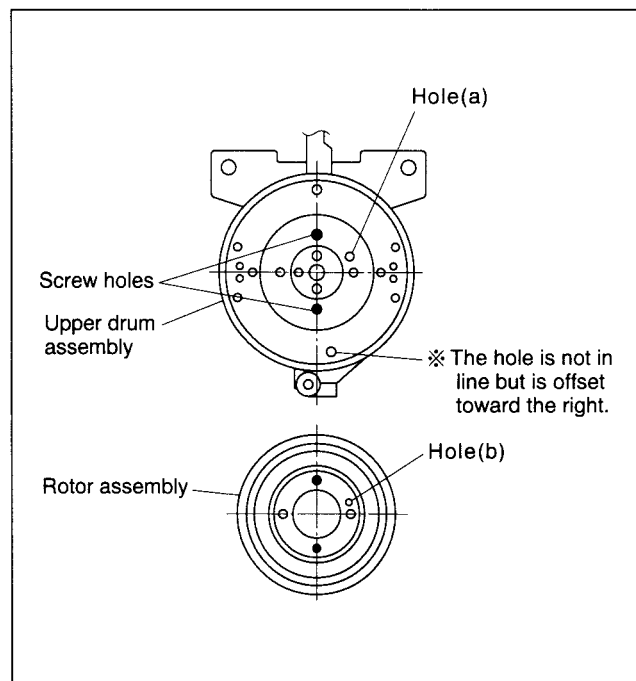


Fig. 2-2-43

2.2.25 Upper Drum Assembly

1. How to remove

- (1) Remove the stator assembly and rotor assembly.
- (2) Loosen the screw of the collar assembly using a 1.5 mm hexagonal wrench and remove the collar assembly. Also remove the brush, spring and cap at one time.
- (3) Remove the upper drum assembly and remove the washer using tweezers.

Note: When replacement is required, control the up-down movement of the brush. Never apply grease.

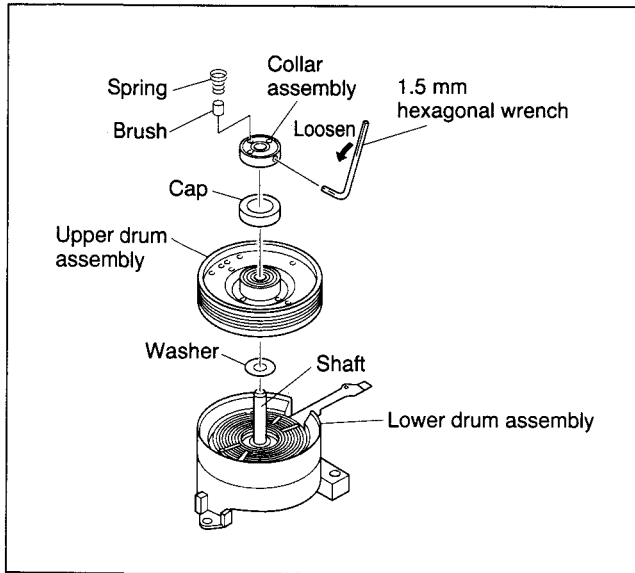


Fig. 2-2-44

2. How to install

- (1) Clean the coil parts of the lower drum assembly and the newly installed upper drum assembly with an air brush in advance. (See Fig.2-2-45.)
- (2) Install a new washer and upper drum assembly on the drum shaft. (See Fig.2-2-44.)

Note: When replacing the upper drum assembly, replace it together with the washer.

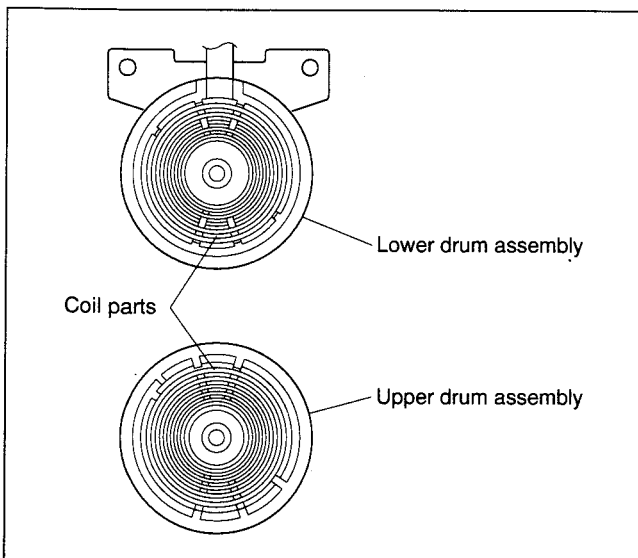


Fig. 2-2-45

- (3) Install the cap to the upper drum assembly.
- (4) Position the collar assembly as indicated in Fig.2-2-46 while controlling its up-down movement.

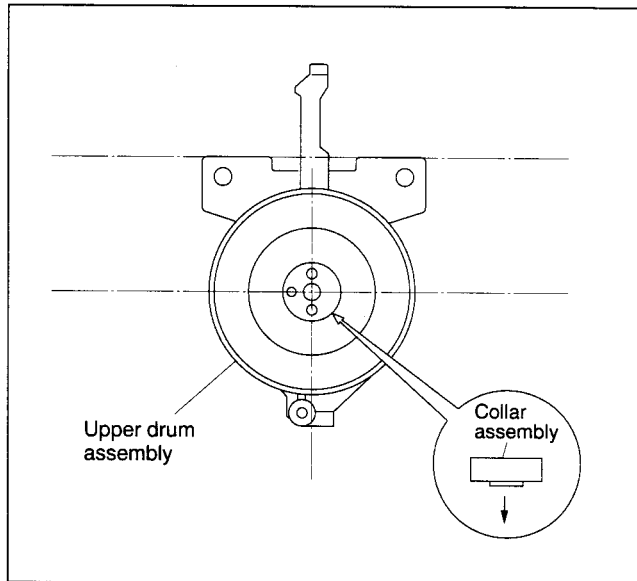


Fig. 2-2-46

- (5) Secure the collar assembly in position with a hexagonal wrench while pressing its top with the fingers.

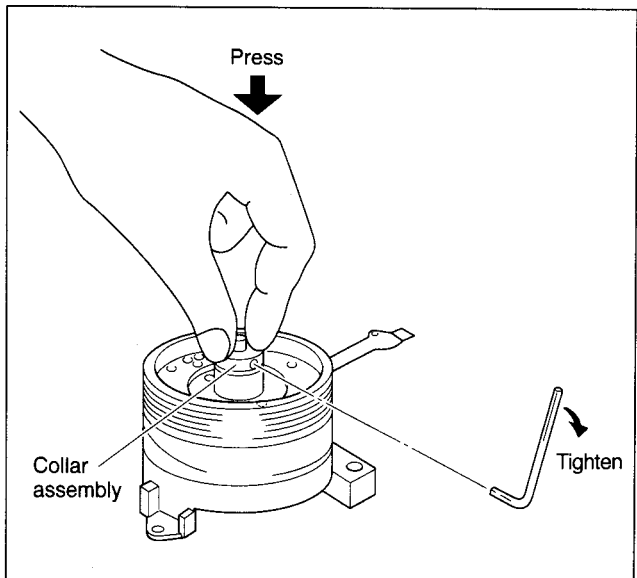


Fig. 2-2-47

- (6) After installation, gently turn the upper drum assembly with your hand to make sure that it turns normally. Then install the brush and the spring.
- (7) Install the rotor assembly and stator assembly according to Fig 2-2-41 and 2-2-42.
- (8) When installation is complete, clean the upper drum assembly and lower drum assembly and carry out the following adjustments.
 - PB switching point adjustment
 - Slow tracking adjustment
 - Compatibility adjustment (Be sure to check for compatibility for the EP (or LP) mode.)

2.3 COMPATIBILITY ADJUSTMENT

- Notes:**
- Although compatibility adjustment is very important, it is not necessary to perform this as part of the normal servicing work. It will be required when you have replaced the audio control head, drum assembly or any part of the tape transport system.
 - To avoid any damage to the alignment tape while performing the compatibility adjustment, get a separate cassette tape (for recording and play back) ready to be used for checking the initial tape running behavior.

2.3.1 Checking/Adjustment of FM Waveform Linearity

Signal	(A1)	• Alignment tape [MHPE]
	(A2)	• Alignment tape [MHPE-L]
Mode	(B)	• PB
Equipment	(C)	• Oscilloscope
Measuring point	(D)	• TP106 (PB. FM) [Main board]
External trigger	(E)	• TP111 (D.FF) [Main board]
Adjustment part	(F)	• Guide roller [Mechanism assembly]
Specified value	(G)	• Flat V.PB FM waveform
Adjustment tool	(H)	• Roller driver [PTU94002]

- (1) Play back the alignment tape (A1).
- (2) Apply the external trigger signal to D.FF (E), to observe the V.PB FM waveform at the measuring point (D).
- (3) Press the channel buttons (+, -) simultaneously to enter the manual tracking mode. (This also brings tracking to the centre.)
- (4) Make sure that there is no significant level drop of the V.PB FM waveform caused by the tracking operation, with its generally parallel and linear variation ensured. Perform the following adjustments when required. (See Fig. 2-3-1.)
- (5) Reduce the V.PB FM waveform while pressing the channel buttons (+, -) during playback. If a drop in level is found on the left side, turn the guide roller of the pole base assembly (supply side) with the roller driver to make the V.PB FM waveform linear.
If a drop in level is on the right side, likewise turn the guide roller of the pole base assembly (take-up side) with the guide roller to make it linear. (See Fig. 2-3-3.)
- (6) Then play back the alignment tape (A2) and make sure that the V.PB FM waveform varies in parallel and linearly with the tracking operation. When required, perform fine-adjustment of the guide roller of the pole base assembly (supply or take-up side).
- (7) Unload the cassette tape once, play back the alignment tape (A2) again and confirm the V.PB FM waveform.

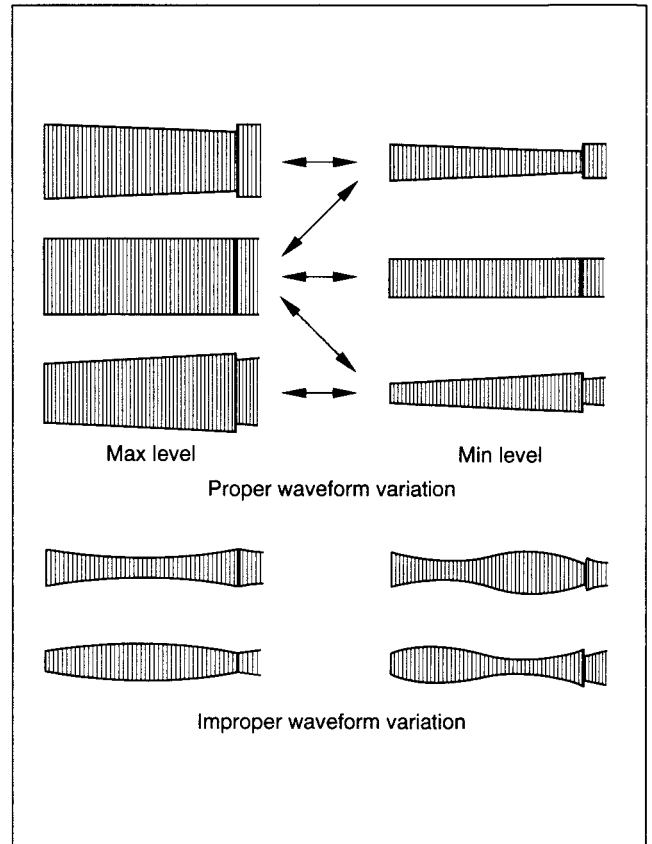


Fig. 2-3-1

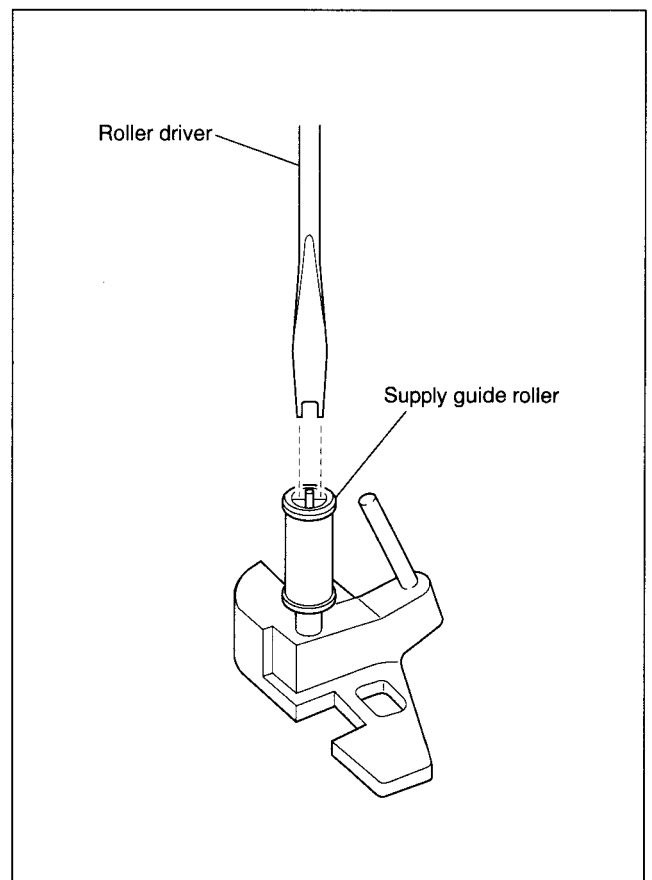


Fig. 2-3-2

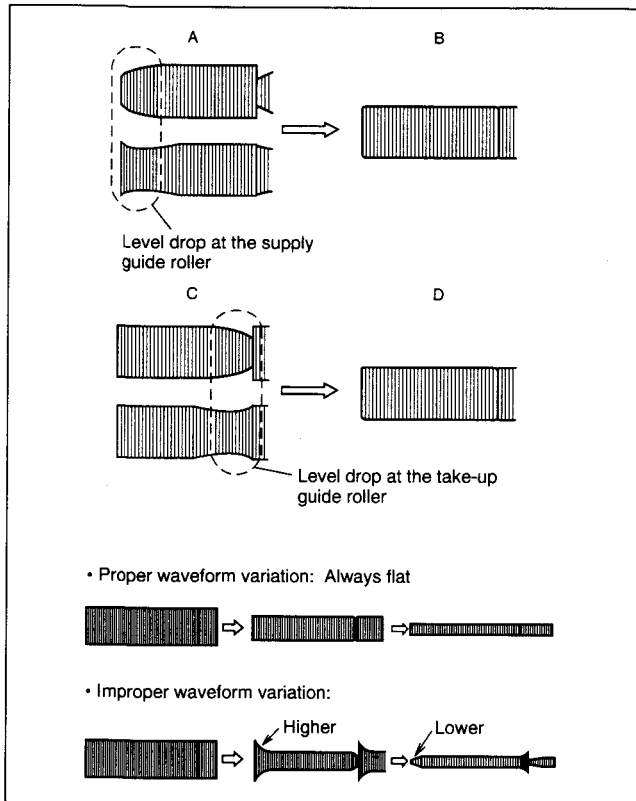


Fig. 2-3-3

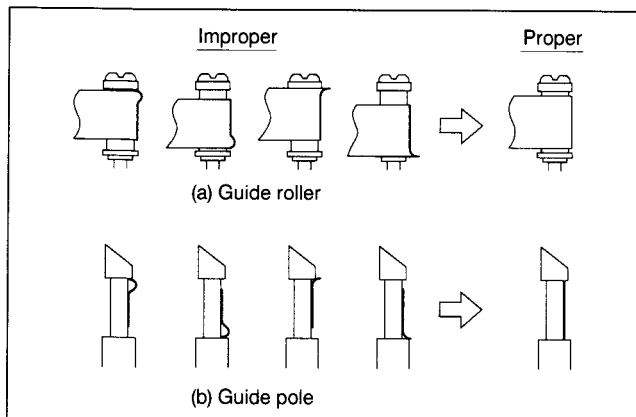


Fig. 2-3-4

2.3.2 Checking/Adjustment of the Height and Tilt of the Audio Control Head

Note: Set a temporary level of the height of the A/C head in advance to make the adjustment easier after the A/C head has been replaced. (See Fig.2-2-15.)

Signal	(A)	• Alignment tape [MHPE]
Mode	(B)	• PB
Equipment	(C)	• Oscilloscope
Measuring point (D1) (D2)		• AUDIO OUT terminal • TP4001 (CTL. P) [Main board]
External trigger	(E)	• TP111 (D.FF) [Main board]
Adjustment part (F)		• A/C head [Mechanism assembly]
Specified value	(G)	• Maximum waveform

- (1) Play back the alignment tape (A).
- (2) Apply the external trigger signal to D.FF (E), to observe the AUDIO OUT waveform and Control pulse waveform at the measuring points (D1) and (D2) in the ALT mode.
- (3) Press the channel buttons (+, -) simultaneously to enter the manual tracking mode. (This also brings tracking to the centre.)
- (4) Adjust the AUDIO OUT waveform and Control pulse waveform by turning the screws (1), (2) and (3) little by little until both waveforms reach maximum. The screw (1) and (3) are for adjustment of tilt and the screw (2) for azimuth.

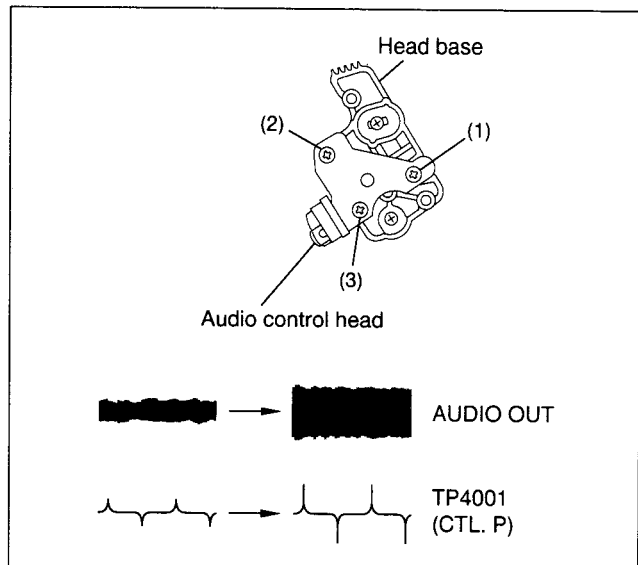


Fig. 2-3-5

2.3.3 Checking/Adjustment of the Audio Control Head Phase (X-Value)

Signal	(A1) (A2)	• Alignment tape [MHPE] • Alignment tape [MHPE-L]
Mode	(B)	• PB
Equipment	(C)	• Oscilloscope
Measuring point (D)		• TP106 (PB. FM) [Main board]
External trigger	(E)	• TP111 (D.FF) [Main board]
Adjustment part (F)		• A/C head base [Mechanism assembly]
Specified value	(G)	• Maximum V.PB FM waveform
Adjustment tool	(H)	• A/C head positioning tool [PTU94010]

- (1) Play back the alignment tape (A1).
- (2) Apply the external trigger signal to D.FF (E), to observe the V.PB FM waveform at the measuring point (D).
- (3) Press the channel buttons (+, -) simultaneously to enter the manual tracking mode. (This also brings tracking to the centre.)
- (4) Loosen the screws (4) and (5), then set the A/C head positioning tool to the innermost projected part of the A/C head. (See Fig. 2-3-6.)
- (5) Turn the A/C head positioning tool fully toward the capstan. Then turn it back gradually toward the drum and stop on the second peak point position of the V.PB FM waveform output level. Then tighten the screw (4) temporarily.

- (6) Then play back the alignment tape (A2).
- (7) Press the channel buttons (+, -) simultaneously to enter the manual tracking mode. (This also brings tracking to the centre.)
- (8) Perform the tracking operation and make sure that the V.PB FM waveform is at its maximum.
- (9) If it is not at maximum, loosen the temporarily tightened screw (4) and turn the A/C head positioning tool to bring the A/C head to a position, around where the waveform reaches its maximum for the first time. Then tighten the screws (4) and (5).

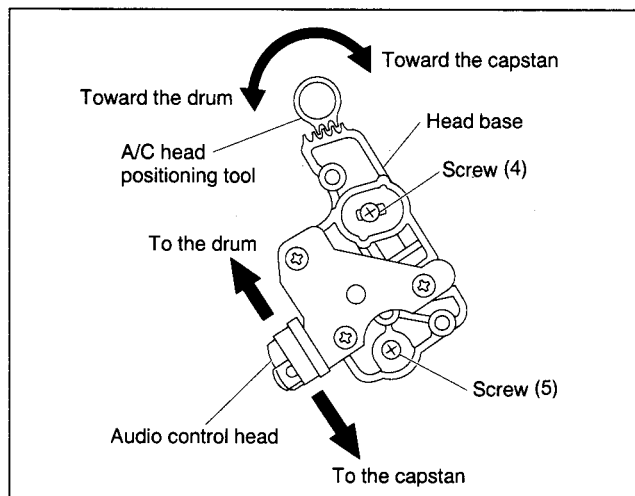


Fig. 2-3-6

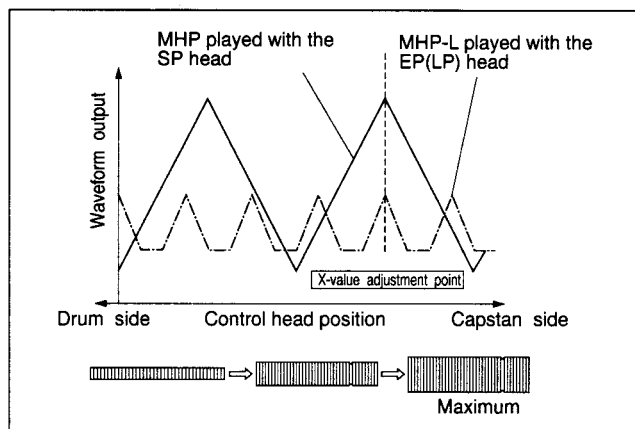


Fig. 2-3-7

2.3.4 Checking/Adjustment of the Standard Tracking Preset

NOTE : • When using the Jig RCU, set its custom code to match the custom code of the VCR.

Signal	(A)	• Alignment tape [MHPE-L]
Mode	(B)	• PB → Auto adjust
Equipment	(C)	• Oscilloscope
Measuring point	(D)	• TP106 (PB, FM) [Main board]
External trigger	(E)	• TP111 (D.FF) [Main board]
Adjustment part	(F)	• Jig RCU: Code "50"
Specified value	(G)	• STOP mode (Maximum V.PB FM waveform)
Adjustment tool	(H)	• Jig RCU [PTU94023B]

- (1) Play back the alignment tape (A).
- (2) Apply the external trigger signal to D.FF (E), to observe the V.PB FM waveform at the measuring point (D).
- (3) Confirm that the automatic tracking operation is completed.
- (4) Set the VCR to the Auto adjust mode by transmitting the code (F) twice from the Jig RCU. When the VCR enters the stop mode, the adjustment is completed.
- (5) If the VCR enters the eject mode, perform adjustment for the audio control head phase (X-value) again.

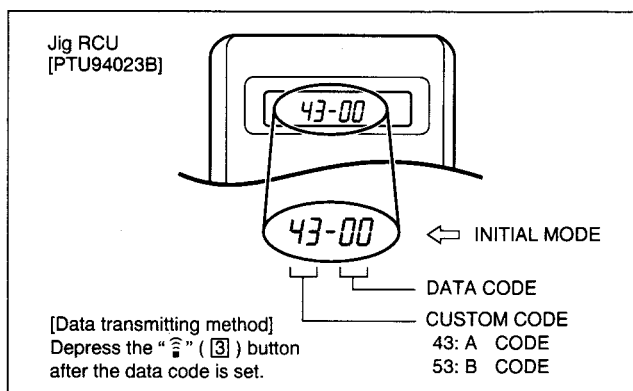


Fig. 2-3-8

2.3.5 Checking/Adjustment of the Tension Pole Position

Signal	(A)	• Back tension cassette gauge [PUJ48076-2]
Mode	(B)	• PB
Adjustment part	(F)	• Adjust pin [Mechanism assembly]
Specified value	(G)	• 25 - 51 gf·cm (2.45 - 5 × 10 ⁻³ Nm)

- (1) Play back the back tension cassette gauge (A).
- (2) Check that the indicated value on the left side gauge is within the specified value (G).
- (3) If the indicated value is not within the specified value (G), perform the adjustment in a following procedure.
 - 1) Set the VCR to the mechanism service mode. (See 1.5 MECHANISM SERVICE MODE.)
 - 2) Set the VCR to the play back mode and adjust by turning adjustment pin to align the tension arm assembly edge with the main deck hole (A) on the right edge marker. (See Fig. 2-3-9)


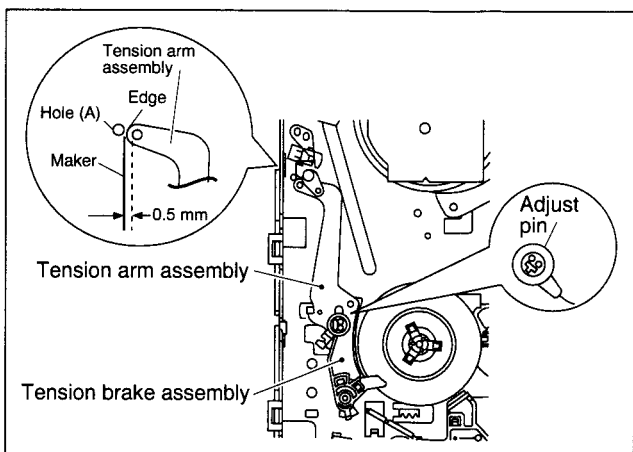


Fig. 2-3-9

Mechanism Timing Chart

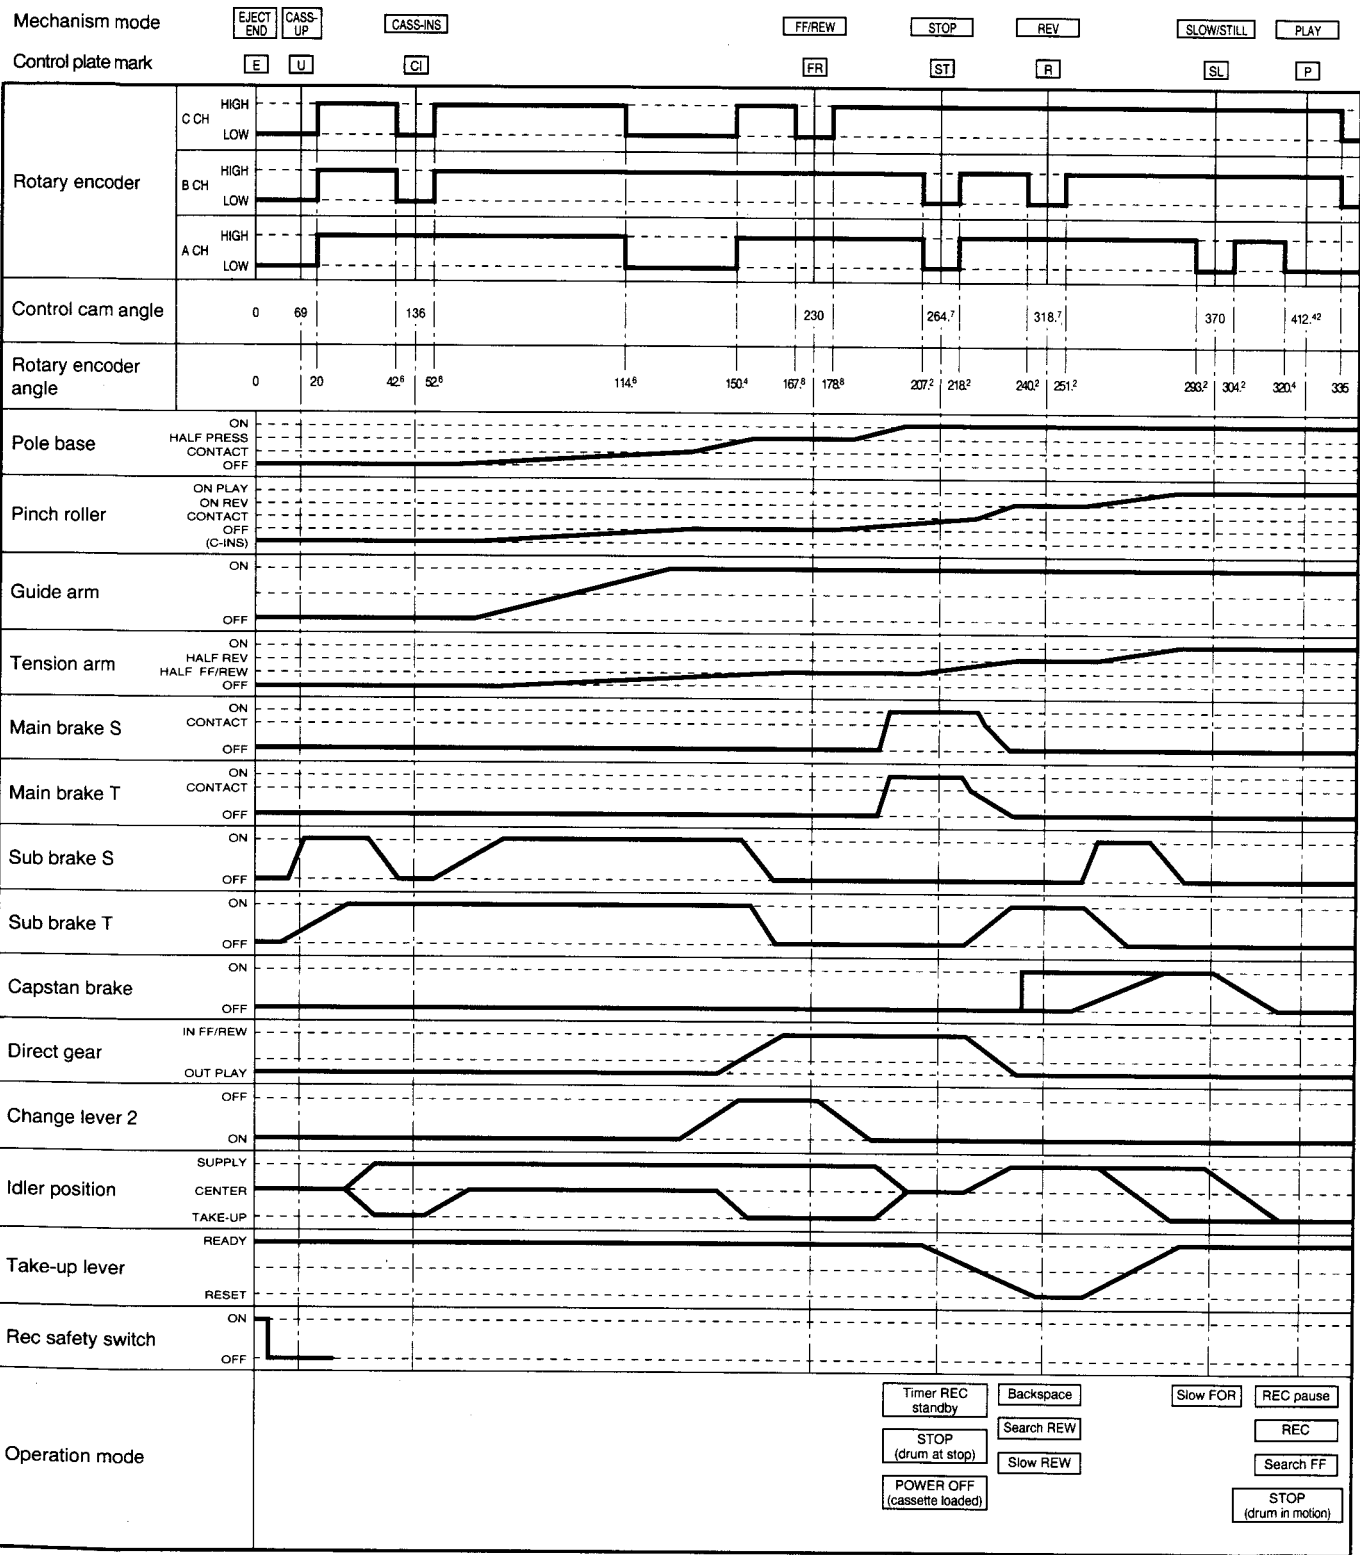

SECTION 3 ELECTRICAL ADJUSTMENT


3.1 PRECAUTION

The following adjustment procedures are not only necessary after replacement of consumable mechanical parts or board assemblies, but are also provided as references to be referred to when servicing the electrical circuitry. In case of trouble with the electrical circuitry, always begin a service by identifying the defective points by using the measuring instruments as described in the following electrical adjustment procedures. After this, proceed to the repair, replacement and/or adjustment. If the required measuring instruments are not available in the field, do not change the adjustment parts (variable resistor, etc.) carelessly.

3.1.1 Required test equipments

- ① Colour television or monitor
- ② Oscilloscope: wide-band, dual-trace, triggered delayed sweep
- ③ Frequency counter
- ④ Signal generator: RF/IF sweep/marker
- ⑤ Signal generator: PAL colour bar, staircase
- ⑥ Recording tape
- ⑦ Digit-key remote controller(provided)

3.1.2 Required adjustment tools

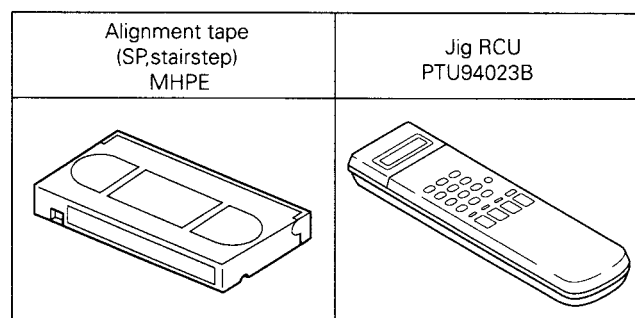

3.1.3 Colour bar signal, colour bar pattern

● PAL colour bar signal

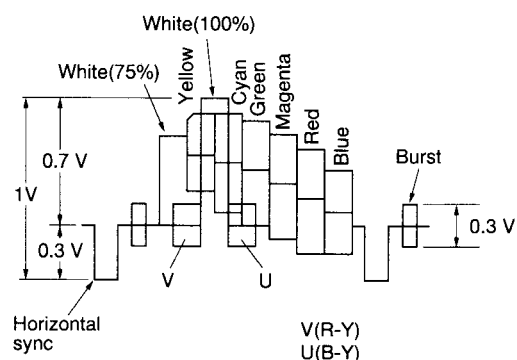


Fig.3-1-1 PAL colour bar signal waveform

● PAL colour bar pattern

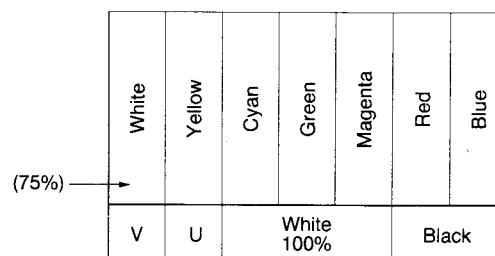


Fig.3-1-2 PAL colour bar pattern

3.1.4 Switch settings and standard precautions

The SW settings of the VCR and the standard precautions for the electrical adjustments are as follows.

- When using the Jig RCU, set its custom code to match the custom code of the VCR.

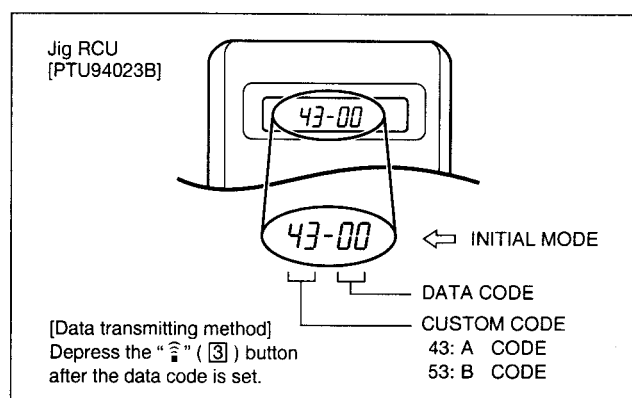


Fig. 3-1-3 Jig RCU

- Set the switches as shown below unless otherwise specified on the relevant adjustment chart. The switches that are not listed below can be set as desired.

B.E.S.T. (D.S.P.C.)	OFF
PICTURE CONTROL(SMART PICTURE)	NORMAL (NATURAL)

- Unless otherwise specified, all measuring points and adjustment parts are located on the Main board.

3.2 SERVO CIRCUIT

3.2.1 Switching point

Signal	(A)	• Alignment tape [MHPE]
Mode	(B)	• PB
Equipment	(C)	• Oscilloscope
Measuring point	(D1) (D2)	• VIDEO OUT terminal • TP106 (PB, FM)
External trigger	(E)	• TP111 (D.FF)/slope : -
Adjustment part	(F)	• Jig RCU: Code "5A"
Specified value	(G)	• $6.5 \pm 0.5H$ [MHP]
Adjustment tool	(H)	• Jig RCU [PTU94023B]

- (1) Play back the staircase signal of the alignment tape (A).
- (2) Apply the external trigger signal to D.FF (E) to observe the VIDEO OUT waveform and V.PB FM waveform at the measuring points (D1) and (D2).
- (3) Press the channel buttons (+, -) simultaneously to enter the manual tracking mode. (This also brings tracking to the centre.)
- (4) Adjust tracking by pressing the channel buttons (+, -) so that the V.PB FM waveform becomes maximum.
- (5) Set the VCR to the Auto adjust mode by transmitting the code (F) from the Jig RCU. When the VCR enters the stop mode, the adjustment is completed.
- (6) Play back the alignment tape (A) again, confirm that the switching point is the specified value (G).

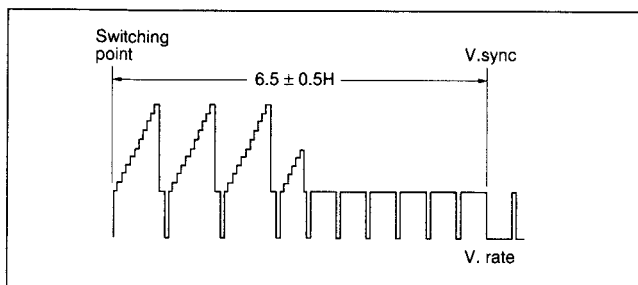


Fig. 3-2-1 Switching point

3.2.2 Slow tracking preset

Signal	(A)	• Ext. input • Colour bar signal
Mode	(B)	• REC (SP/LP) → Slow PB
Measuring point	(D)	• TV-Monitor
Adjustment part	(F)	• Jig RCU: Code "71" or "72"
Specified value	(G)	• Minimum noise
Adjustment tool	(H)	• Jig RCU [PTU94023B]

- (1) Record the colour bar signal in the SP mode, and play back the recorded signal.
- (2) Press the channel buttons (+, -) simultaneously to enter the manual tracking mode. (This also brings tracking to the centre.)
- (3) Set the VCR to the FWD slow mode.
- (4) Transmit the code (F) from the Jig RCU to adjust so that the noise bar becomes the specified value (G) on the TV monitor in the slow mode.
- (5) Set the VCR to the Stop mode.

- (6) Confirm that the noise bar is (G) on the TV monitor in the slow mode.
- (7) Repeat steps (3) to (6) in the REV slow mode.
- (8) Repeat steps (1) to (7) in the LP mode.

Note: • For FWD slow playback, transmit the "08" code from the Jig RCU to enter the slow playback mode, and transmit the "D0" code for REV slow mode.

3.3 VIDEO CIRCUIT

3.3.1 AUTO PICTURE initial setting

Signal	(A)	• Ext. input • Video: Optional
Mode	(B)	• EE → Auto adjust (SP/LP REC → PB)
Adjustment part	(F)	• Jig RCU : Code "58"
Specified value	(G)	• STOP mode
Adjustment tool	(H)	• Jig RCU [PTU94023B]

- (1) Insert the VHS cassette tape.
- (2) Set the VCR to the Auto adjust mode by transmitting the code (F) from the Jig RCU. When the VCR enters the stop mode, the adjustment is completed. When the VCR enters the eject mode, repeat steps (1) to (2) again.

3.4 SYSCON CIRCUIT [HR-J670EU/HR-J770EU]

Note: • When perform this adjustment, remove the Mechanism assembly.

3.4.1 Timer clock

Signal	(A)	• No signal
Mode	(B)	• EE
Equipment	(C)	• Frequency counter
Measuring point	(D1)	• IC3001 pin61
Short point	(D2) (D3)	• IC3001 pin24 • C3026 + and -
Adjustment part	(F)	• C3025 (TIMER CLOCK)
Specified value	(G)	• 1024.008 ± 0.001 Hz (976.5549 ± 0.0010 μ sec)

- (1) Connect the frequency counter to the measuring point (D1).
- (2) Connect the short wire between the short point (D2) and Vcc (5V).
- (3) Short the leads of capacitor (D3) once in order to reset the microprocessor of the SYSCON.
- (4) Disconnect the short wire between the short point (D2) and Vcc then connect it again.
- (5) Adjust the Adjustment part (F) so that the output frequency becomes the specified value (G).

SECTION 4 CHARTS AND DIAGRAMS

NOTES OF SCHEMATIC DIAGRAM

Safety precautions

The Components identified by the symbol  are critical for safety. For continued safety, replace safety critical components only with manufacturer's recommended parts.

1. Units of components on the schematic diagram

Unless otherwise specified.

- 1) All resistance values are in ohm, 1/6 W, 1/8 W (refer to parts list).
Chip resistors are 1/16 W.
K: K Ω (1000 Ω), M: M Ω (1000K Ω)
- 2) All capacitance values are in μ F, (P: PF).
- 3) All inductance values are in μ H, (m: mH).
- 4) All diodes are 1SS133, MA165 or 1N4148M (refer to parts list).

2. Indications of control voltage

AUX : Active at high

$\overline{\text{AUX}}$ or AUX(L) : Active at low

3. Interpreting Connector indications




Removable connector




Wire soldered directly on board



Non-removable Board connector



Board to Board




Connected pattern on board
The arrows indicate signal path

4. Voltage measurement

- 1) Video circuits
REC : Colour bar signal in SP mode, normal VHS mode
PB : Alignment tape, colour bar SP mode, normal VHS mode
— : Unmeasurable or unnecessary to measure
- 2) Audio circuits
REC : 1KHz, -8 dBs sine wave signal in SP mode, Normal VHS mode
PB : REC then playback it
- 3) Movie Camera circuits
Measured using a correctly illuminated gray scale or colour bar test charts in the E-E mode

4) Indication on schematic diagram


Voltage Indications for REC and PB mode on the schematic diagram are as shown below.

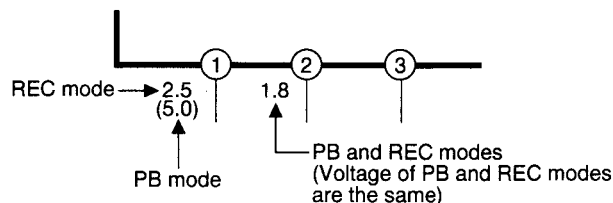


Note: If the voltages are not indicated on the schematic diagram, refer to the voltage charts.

5. Waveform measurement

- 1) Video circuits
REC : Colour bar signal in SP mode, normal VHS mode
PB : Alignment tape, colour bar SP mode, normal VHS mode
- 2) Audio circuits
REC : 1KHz, -8 dBs sine wave signal in SP mode, normal VHS mode
PB : REC then playback it
- 3) Movie Camera circuits
Measured using a correctly illuminated gray scale or colour bar test charts in the E-E mode
- 4) Indication on schematic diagram
Waveform indications on the schematic diagram are as shown below.

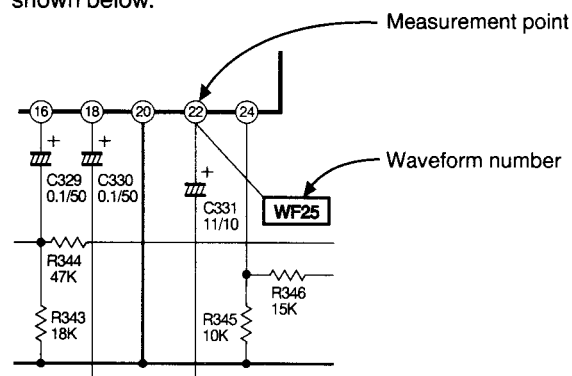


5) Waveform indications

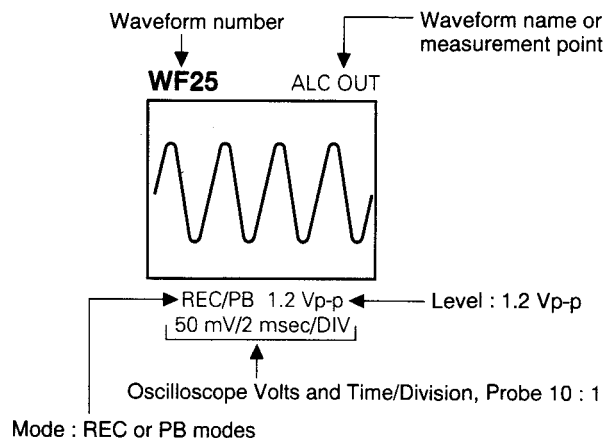


6. Signal path Symbols

The arrows indicate the signal path as follows.

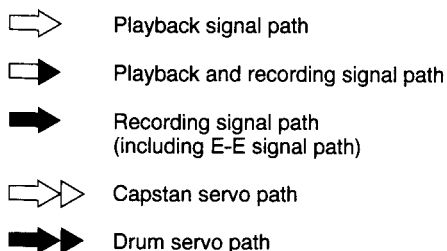


(Example)



7. Indication of the parts for adjustments

The parts for the adjustments are surrounded with the circle as shown below.



8. Indication of the parts not mounted on the circuit board

"OPEN" is indicated by the parts not mounted on the circuit board.




CIRCUIT BOARD NOTES

1. Foil and Component sides

- 1) Foil side (B side) :
Parts on the foil side seen from foil face (pattern face) are indicated.
- 2) Component side (A side) :
Parts on the component side seen from component face (parts face) indicated.

2. Parts location guides


Parts location are indicated by guide scale on the circuit board.

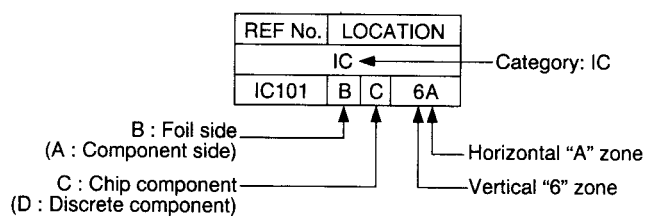

Note:

For general information in service manual, please refer to the Service Manual of GENERAL INFORMATION Edition 4 No. 82054D (January 1994).

4.1 BOARD INTERCONNECTIONS

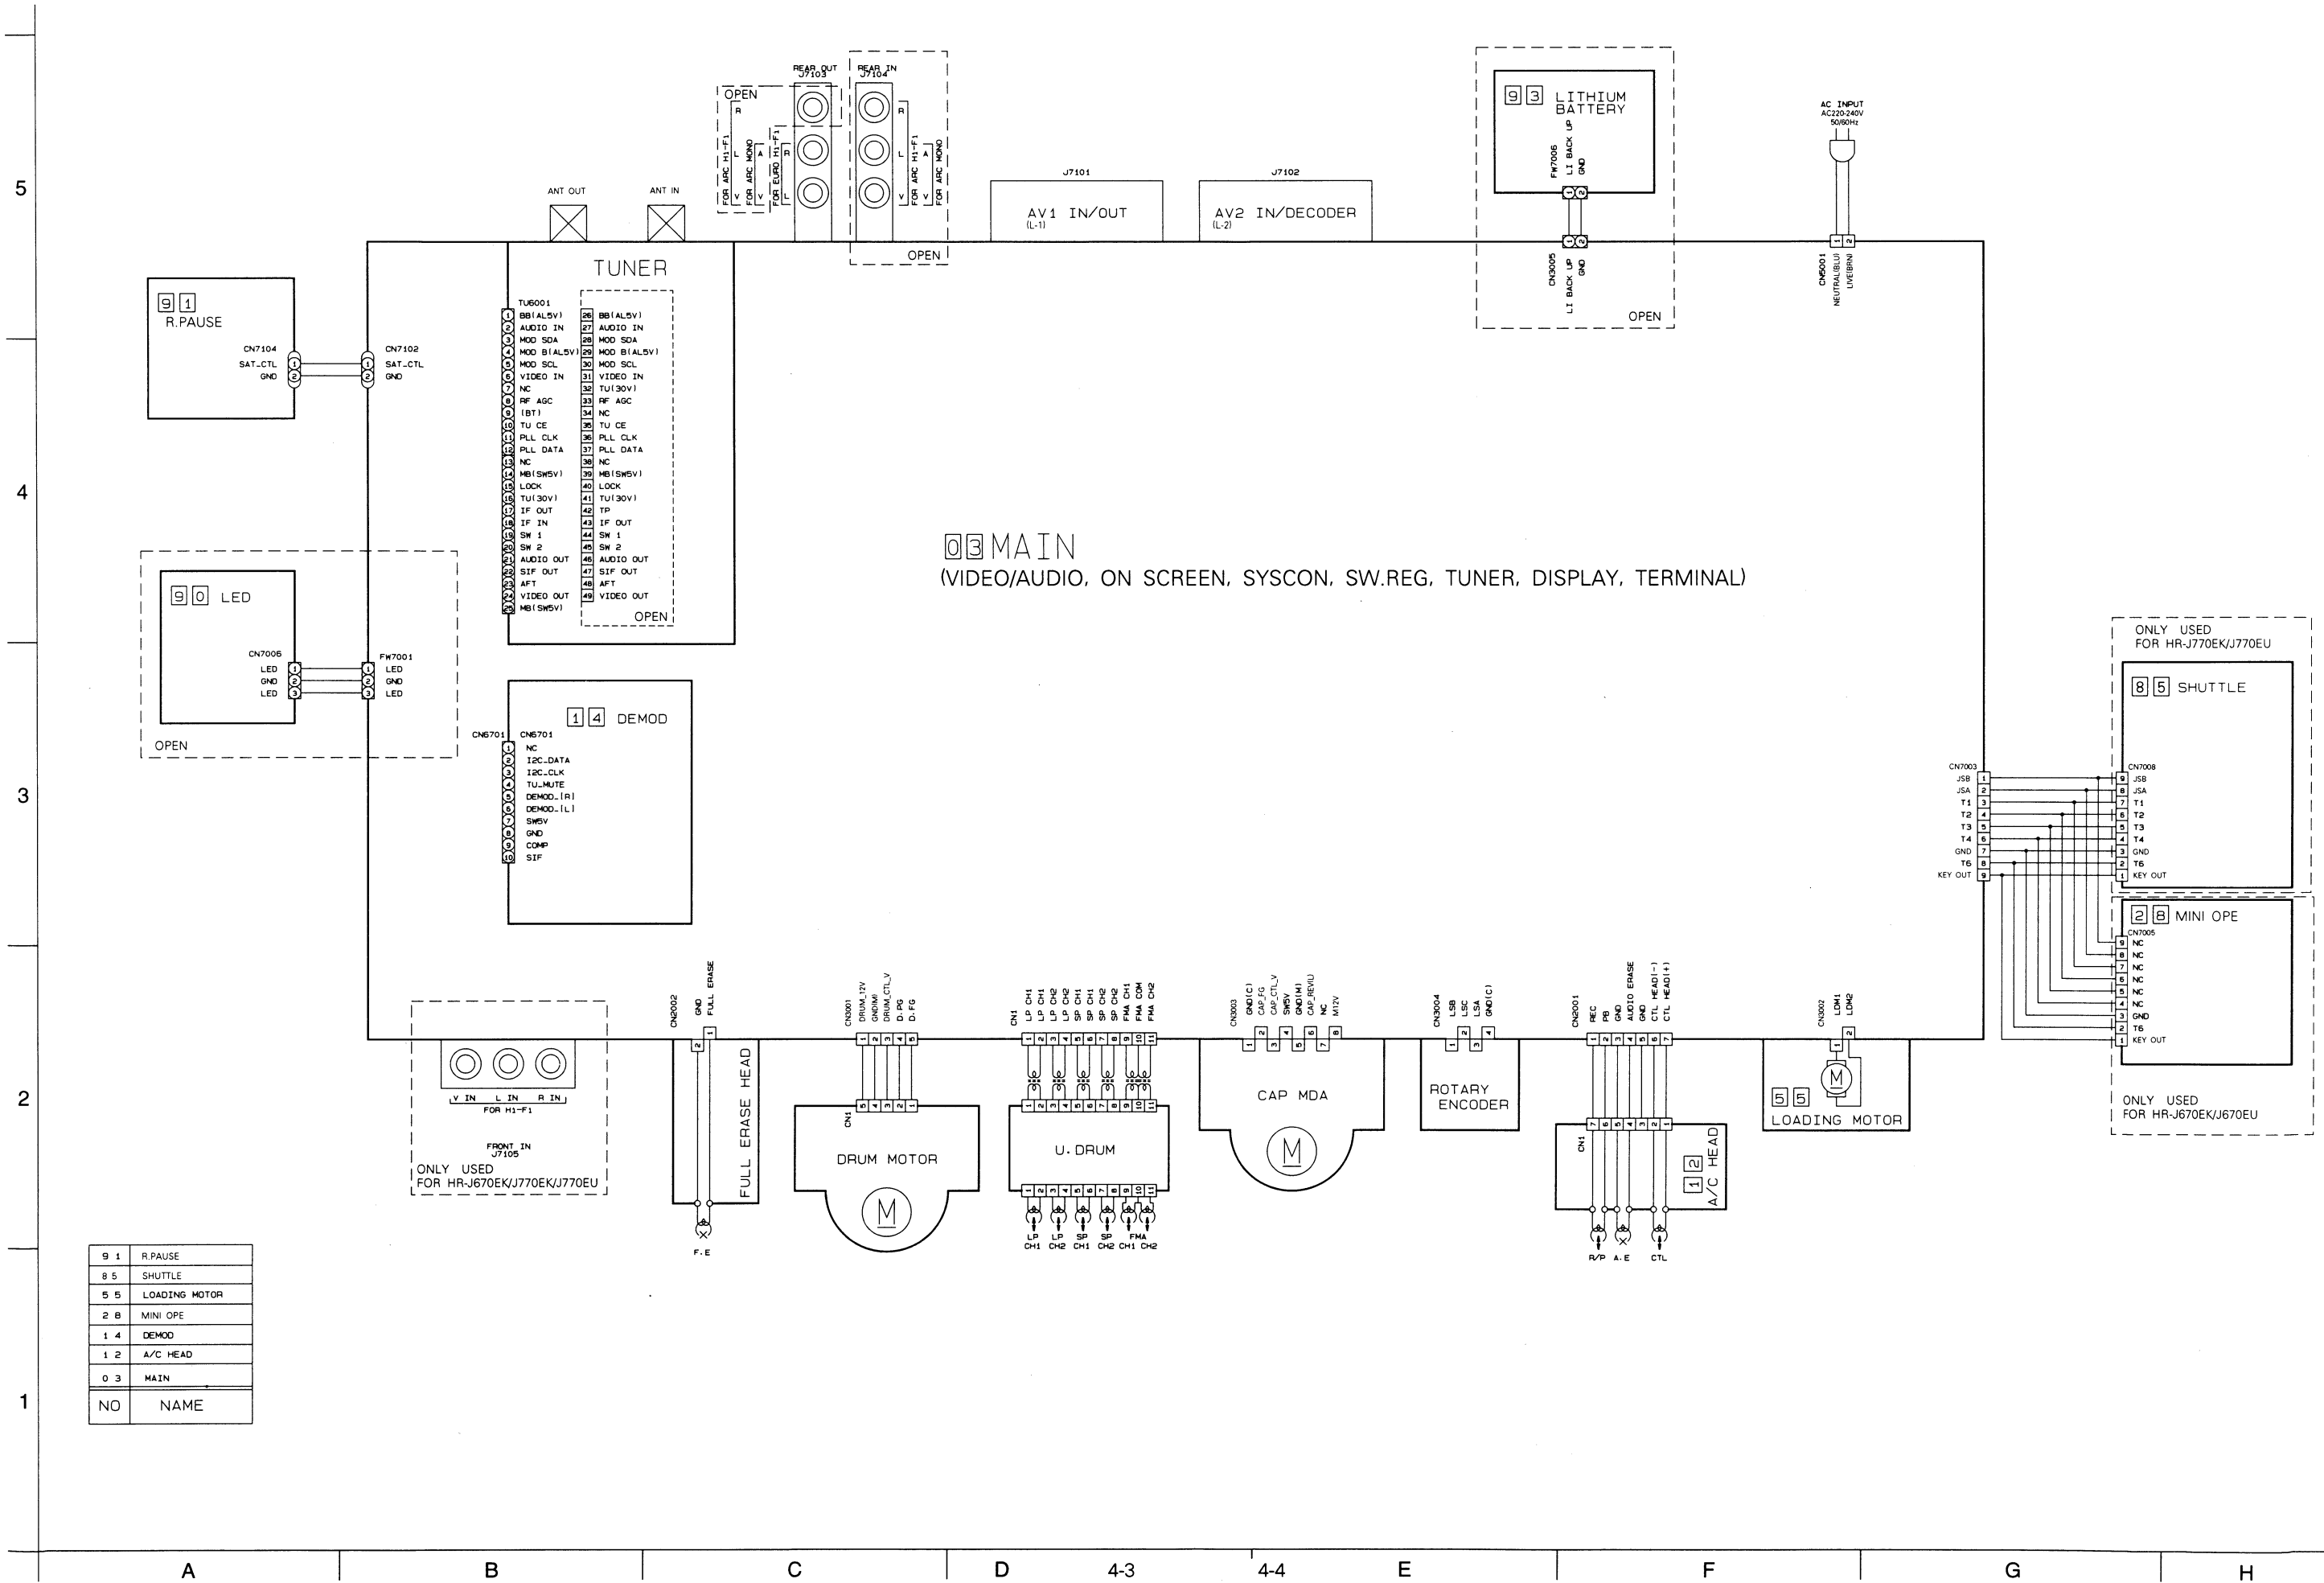

NOTE : When ordering parts, be sure to order according to the Part Number indicated in the Parts List.

TO SW REG
(Page 4-12)
SW 12V




	REF.NO	Q41	C51	C114
MODEL	HR-J670EU	USED	NOT USED	USED
	HR-J770EU	USED	USED	USED
	HR-J670EK/J770EK	NOT USED	USED	NOT USED

A	B	C	D 4-5	4-6	E	F	G	H
---	---	---	-------	-----	---	---	---	---

4.3 ON SCREEN SCHEMATIC DIAGRAM


NOTE : When ordering parts, be sure to order according to the Part Number indicated in the Parts List.

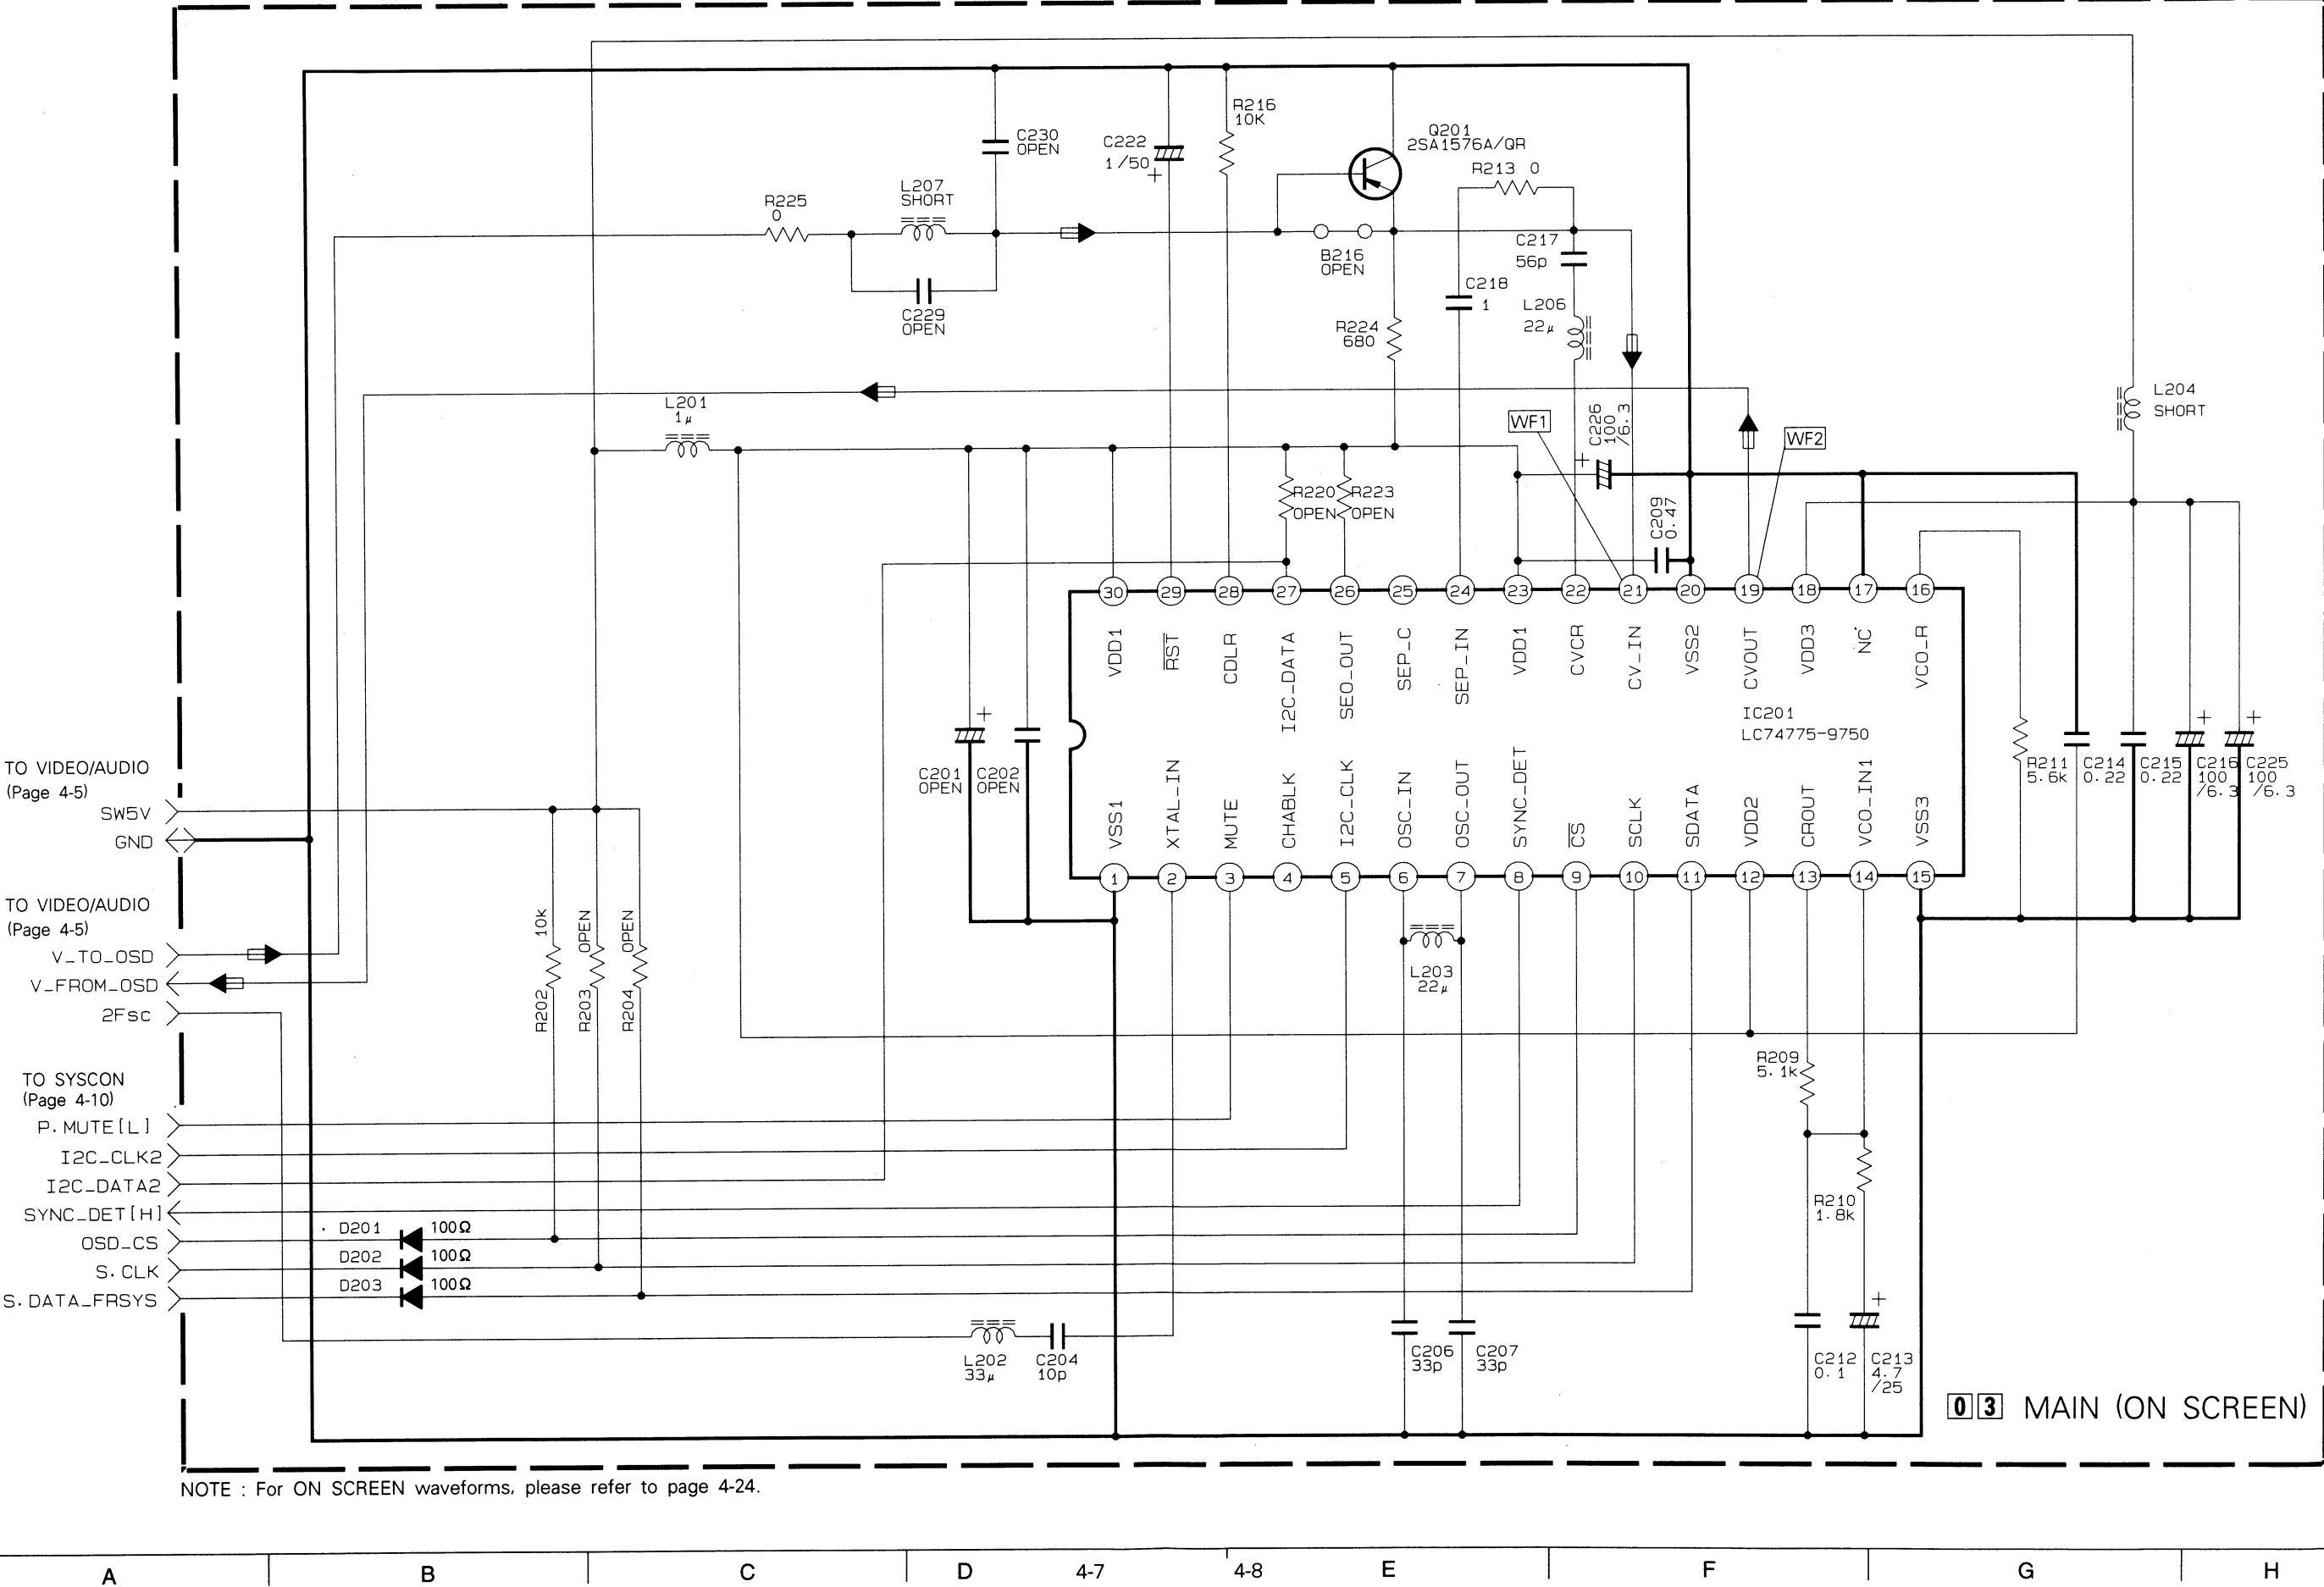

NOTE : For ON SCREEN waveforms, please refer to page 4-24.

03 MAIN (ON SCREEN)


NOTE : When ordering parts, be sure to order according to the Part Number indicated in the Parts List.



REF NO.	IC3001	R3046 R3047	R3074	R3244 R3245	C3025	C3041
HR-J670EK	HD6432194A78F	NOT USED	NOT USED	NOT USED	NOT USED	USED
HR-J670EU	HD6432194A24F	NOT USED	NOT USED	NOT USED	USED	NOT USED
HR-J770EK	HD6432194A78F	USED	USED	USED	NOT USED	USED
HR-J770EU	HD6432194A24F	USED	USED	USED	USED	NOT USED


4.5 SWITCHING REGULATOR SCHEMATIC DIAGRAM

NOTE : When ordering parts, be sure to order according to the Part Number indicated in the Parts List.

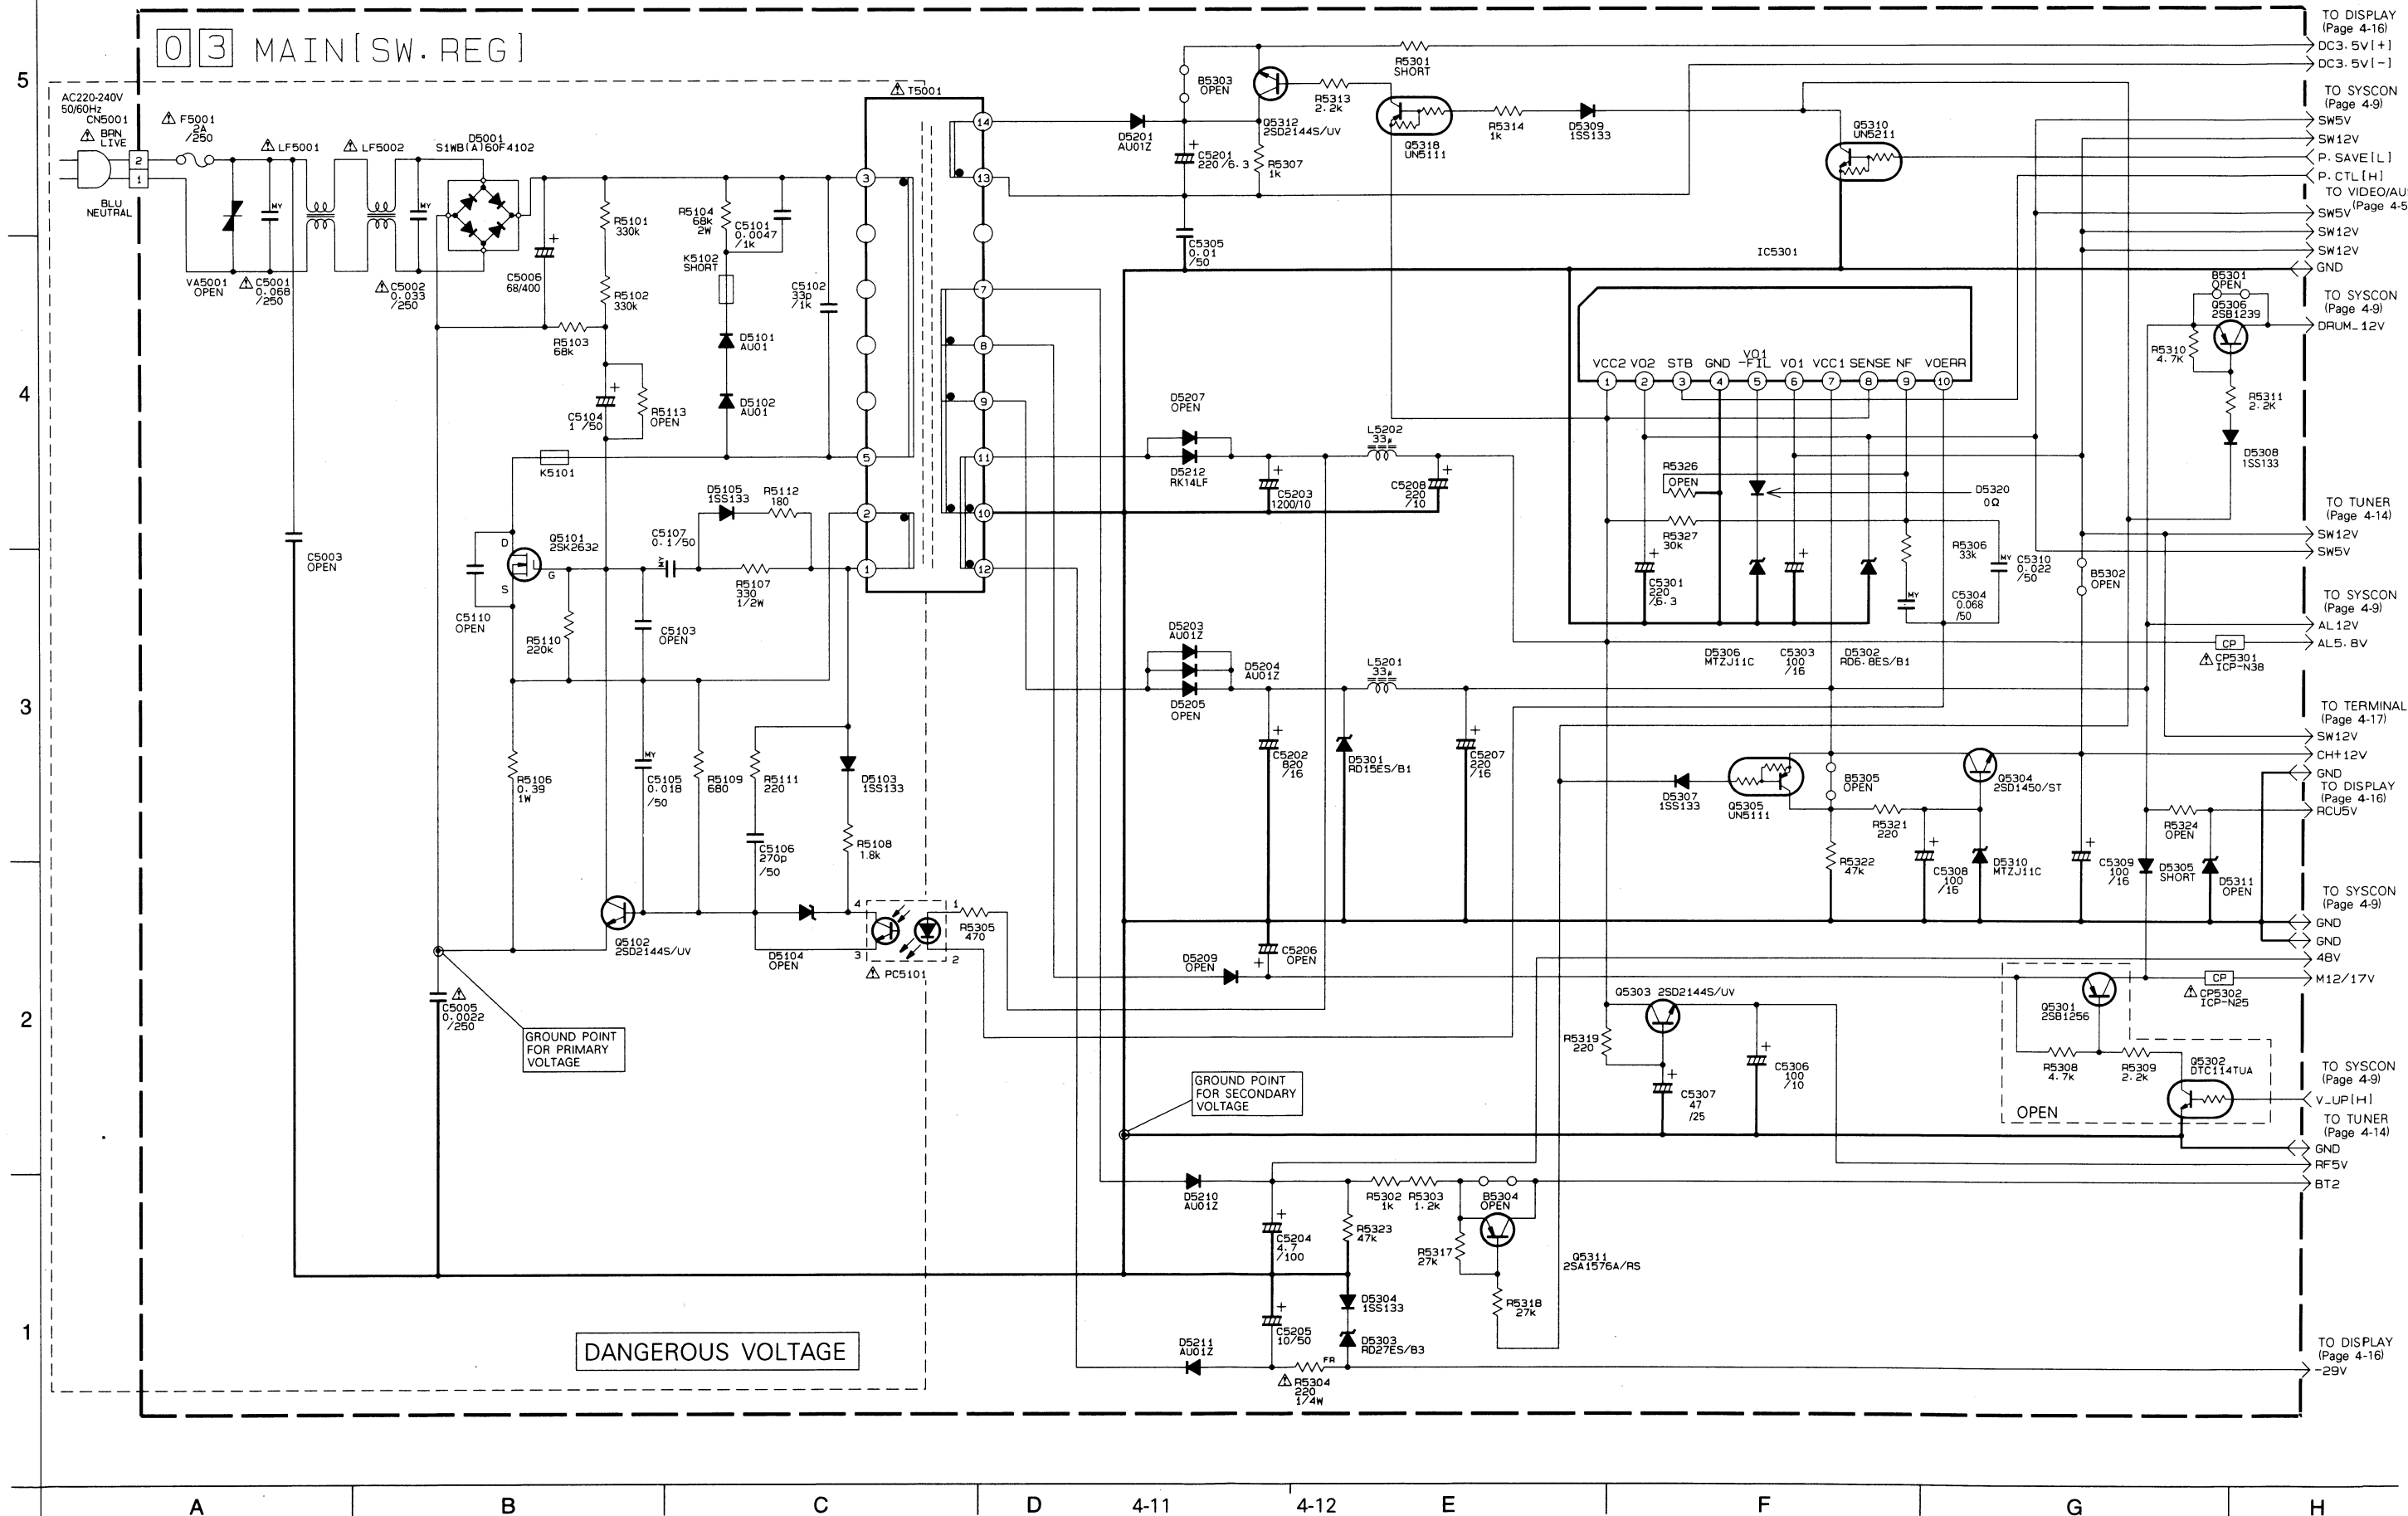


4.6 TUNER SCHEMATIC DIAGRAM

NOTE : When ordering parts, be sure to order according to the Part Number indicated in the Parts List.

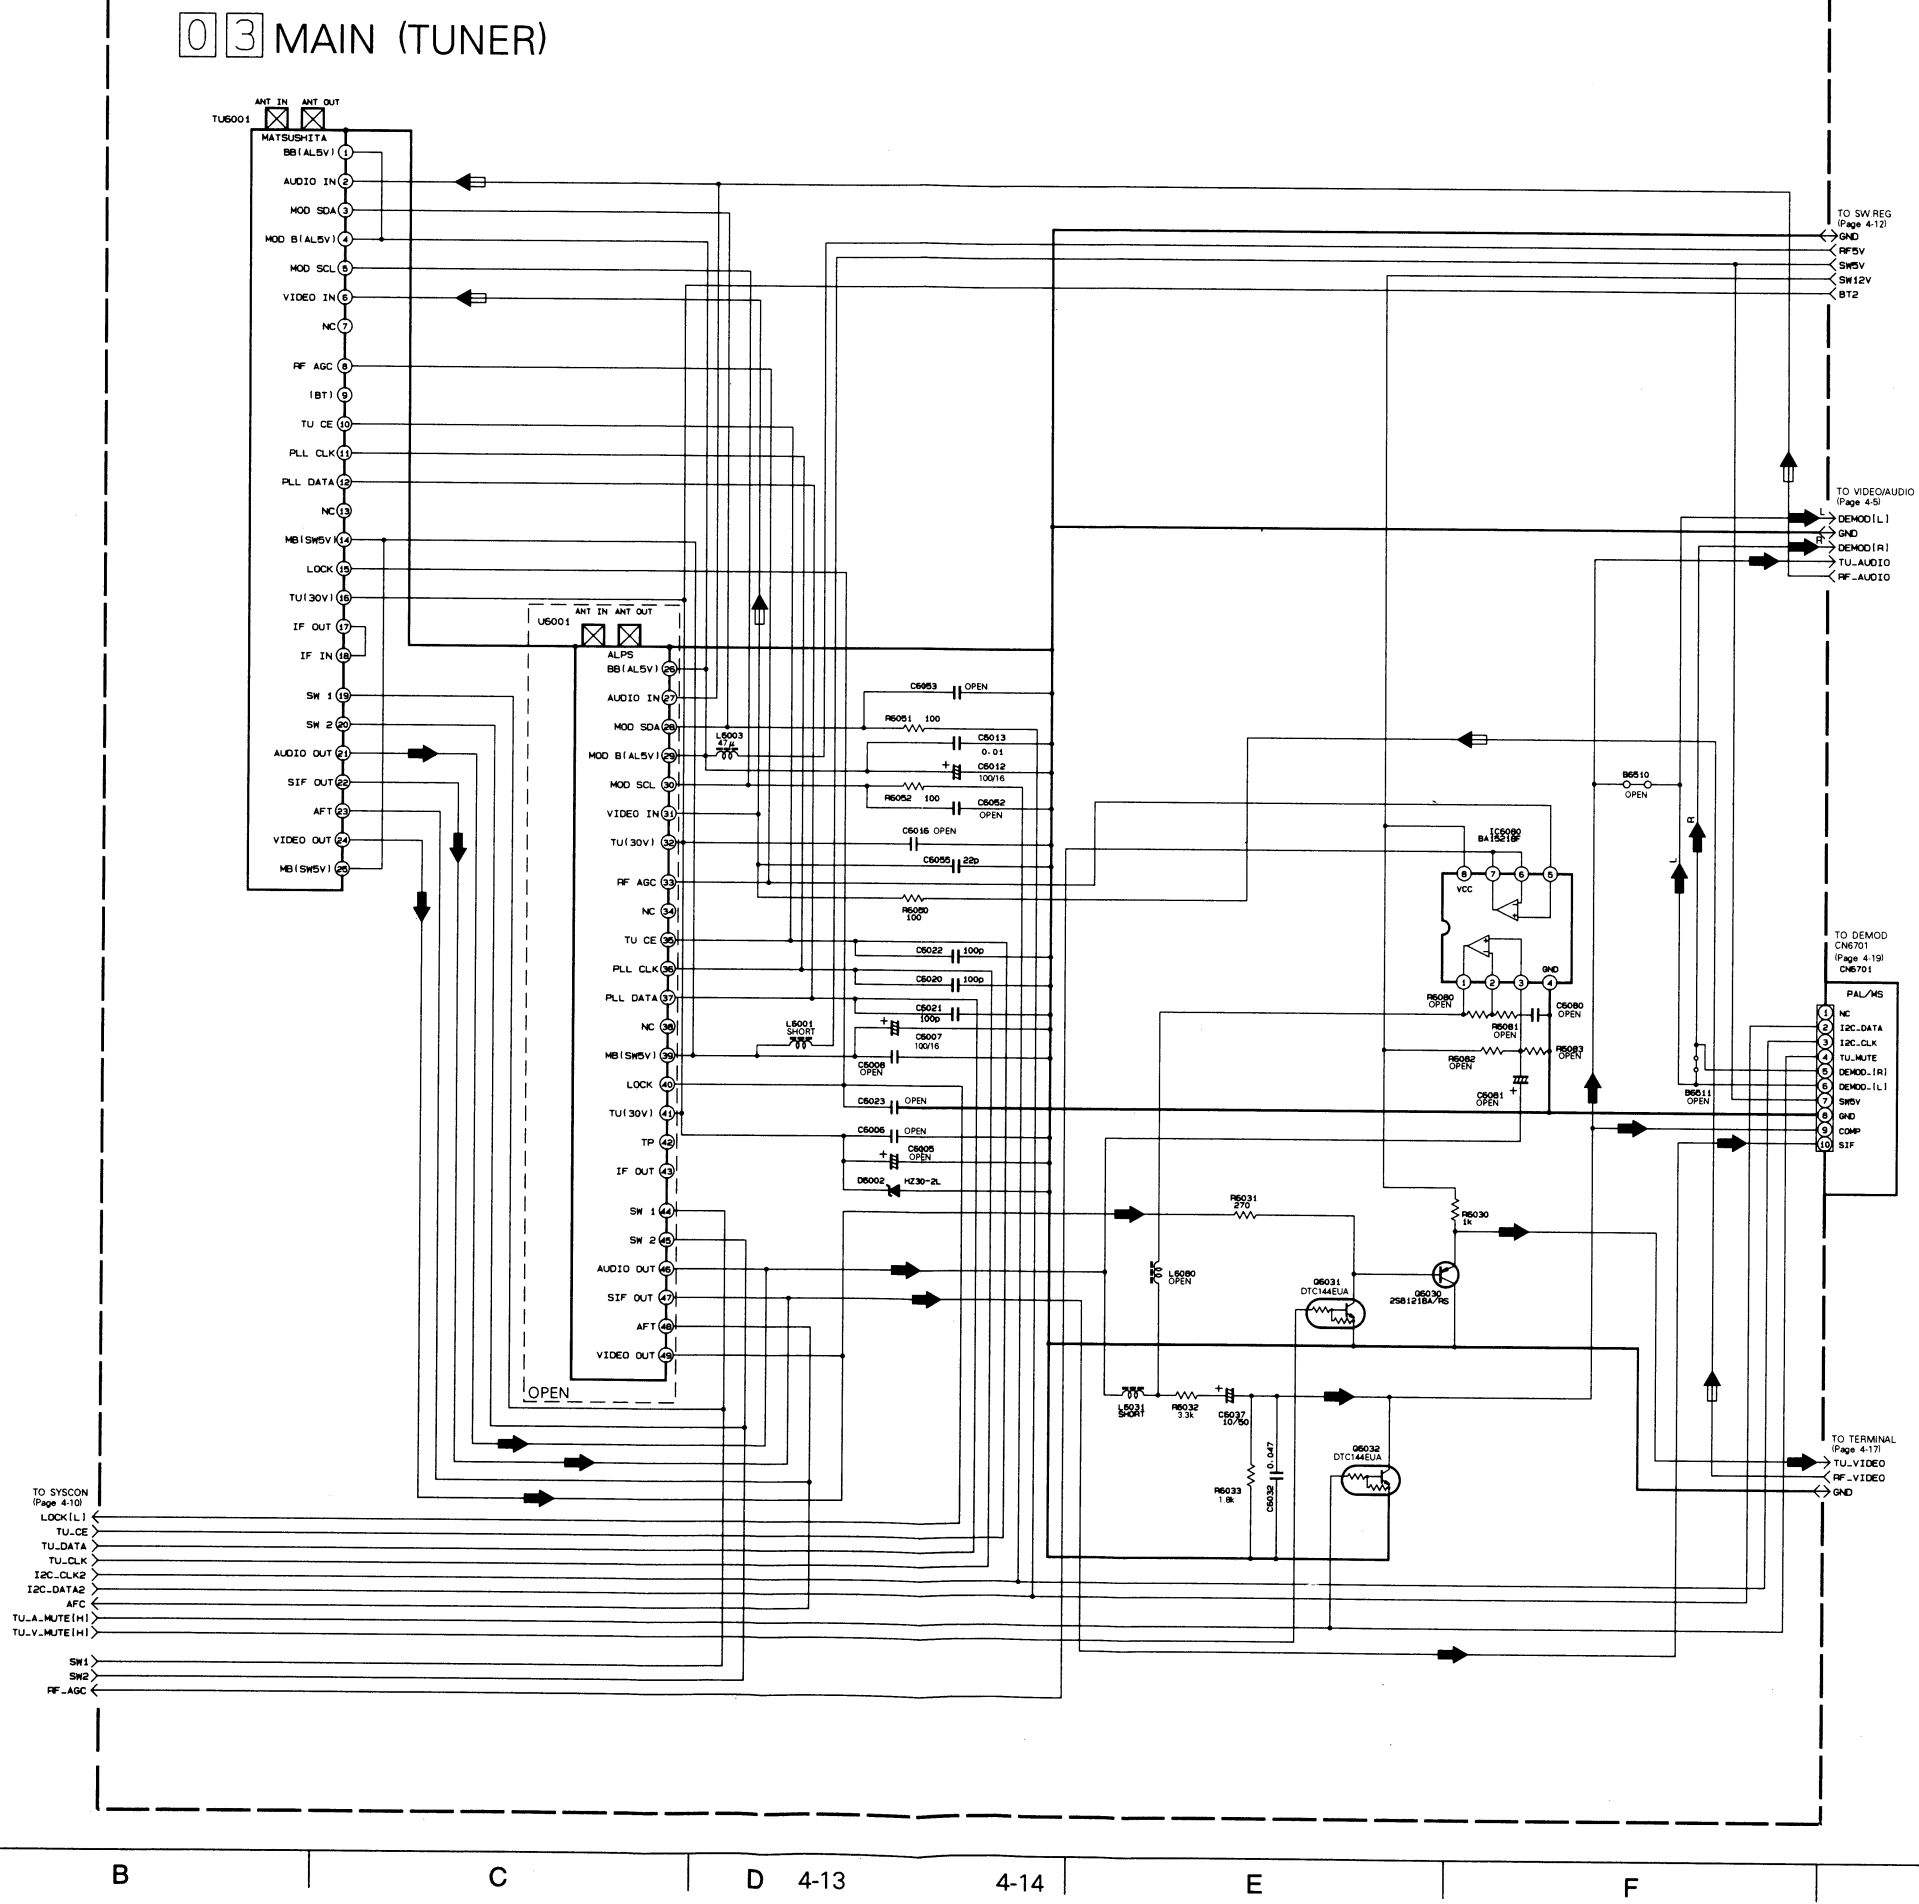


1

```
03 MAIN ( DISPLAY )
```

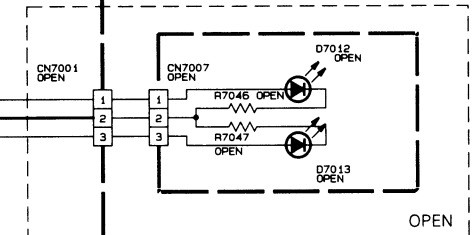


S. CLK
S. DATA_TOSYS
S. DATA_FRSYS
STB
GND
RC
AL5V
J1
J2

JSB
JSA
T1
T2
T3
T4
GND
T6
KEY OUT

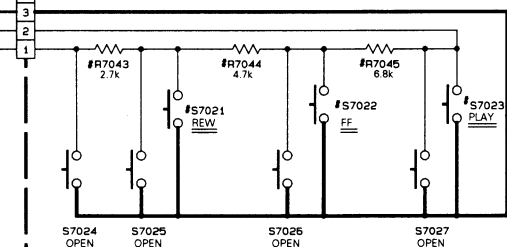


KEY OUT	
T6	
GND	
T4	
T3	
T2	
T1	
JSA	
JSB	

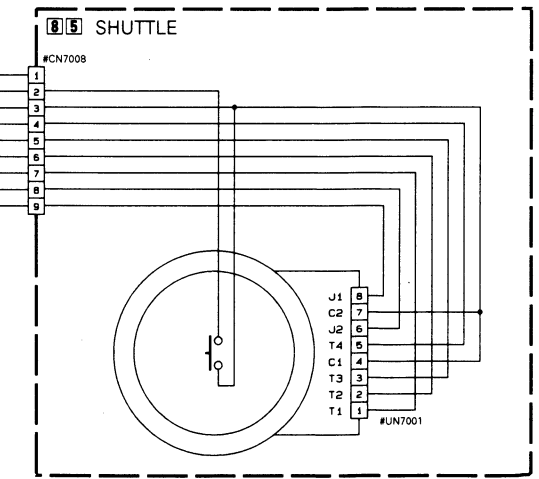

Model	REF.NO.	R7034	R7035 R7036	R7043~R7045	S7020~S7023	CN7005	CN7008	UN7001
	HR-J670EK/J670EU	0	NOT USED	USED	USED	USED	NOT USED	NOT USED
	HR-J770EK/J770EU	2.7k	USED	NOT USED	NOT USED	NOT USED	USED	USED

4.8 TERMINAL AND R.PAUSE SCHEMATIC DIAGRAMS

NOTE : When ordering parts, be sure to order according to the Part Number indicated in the Parts List.

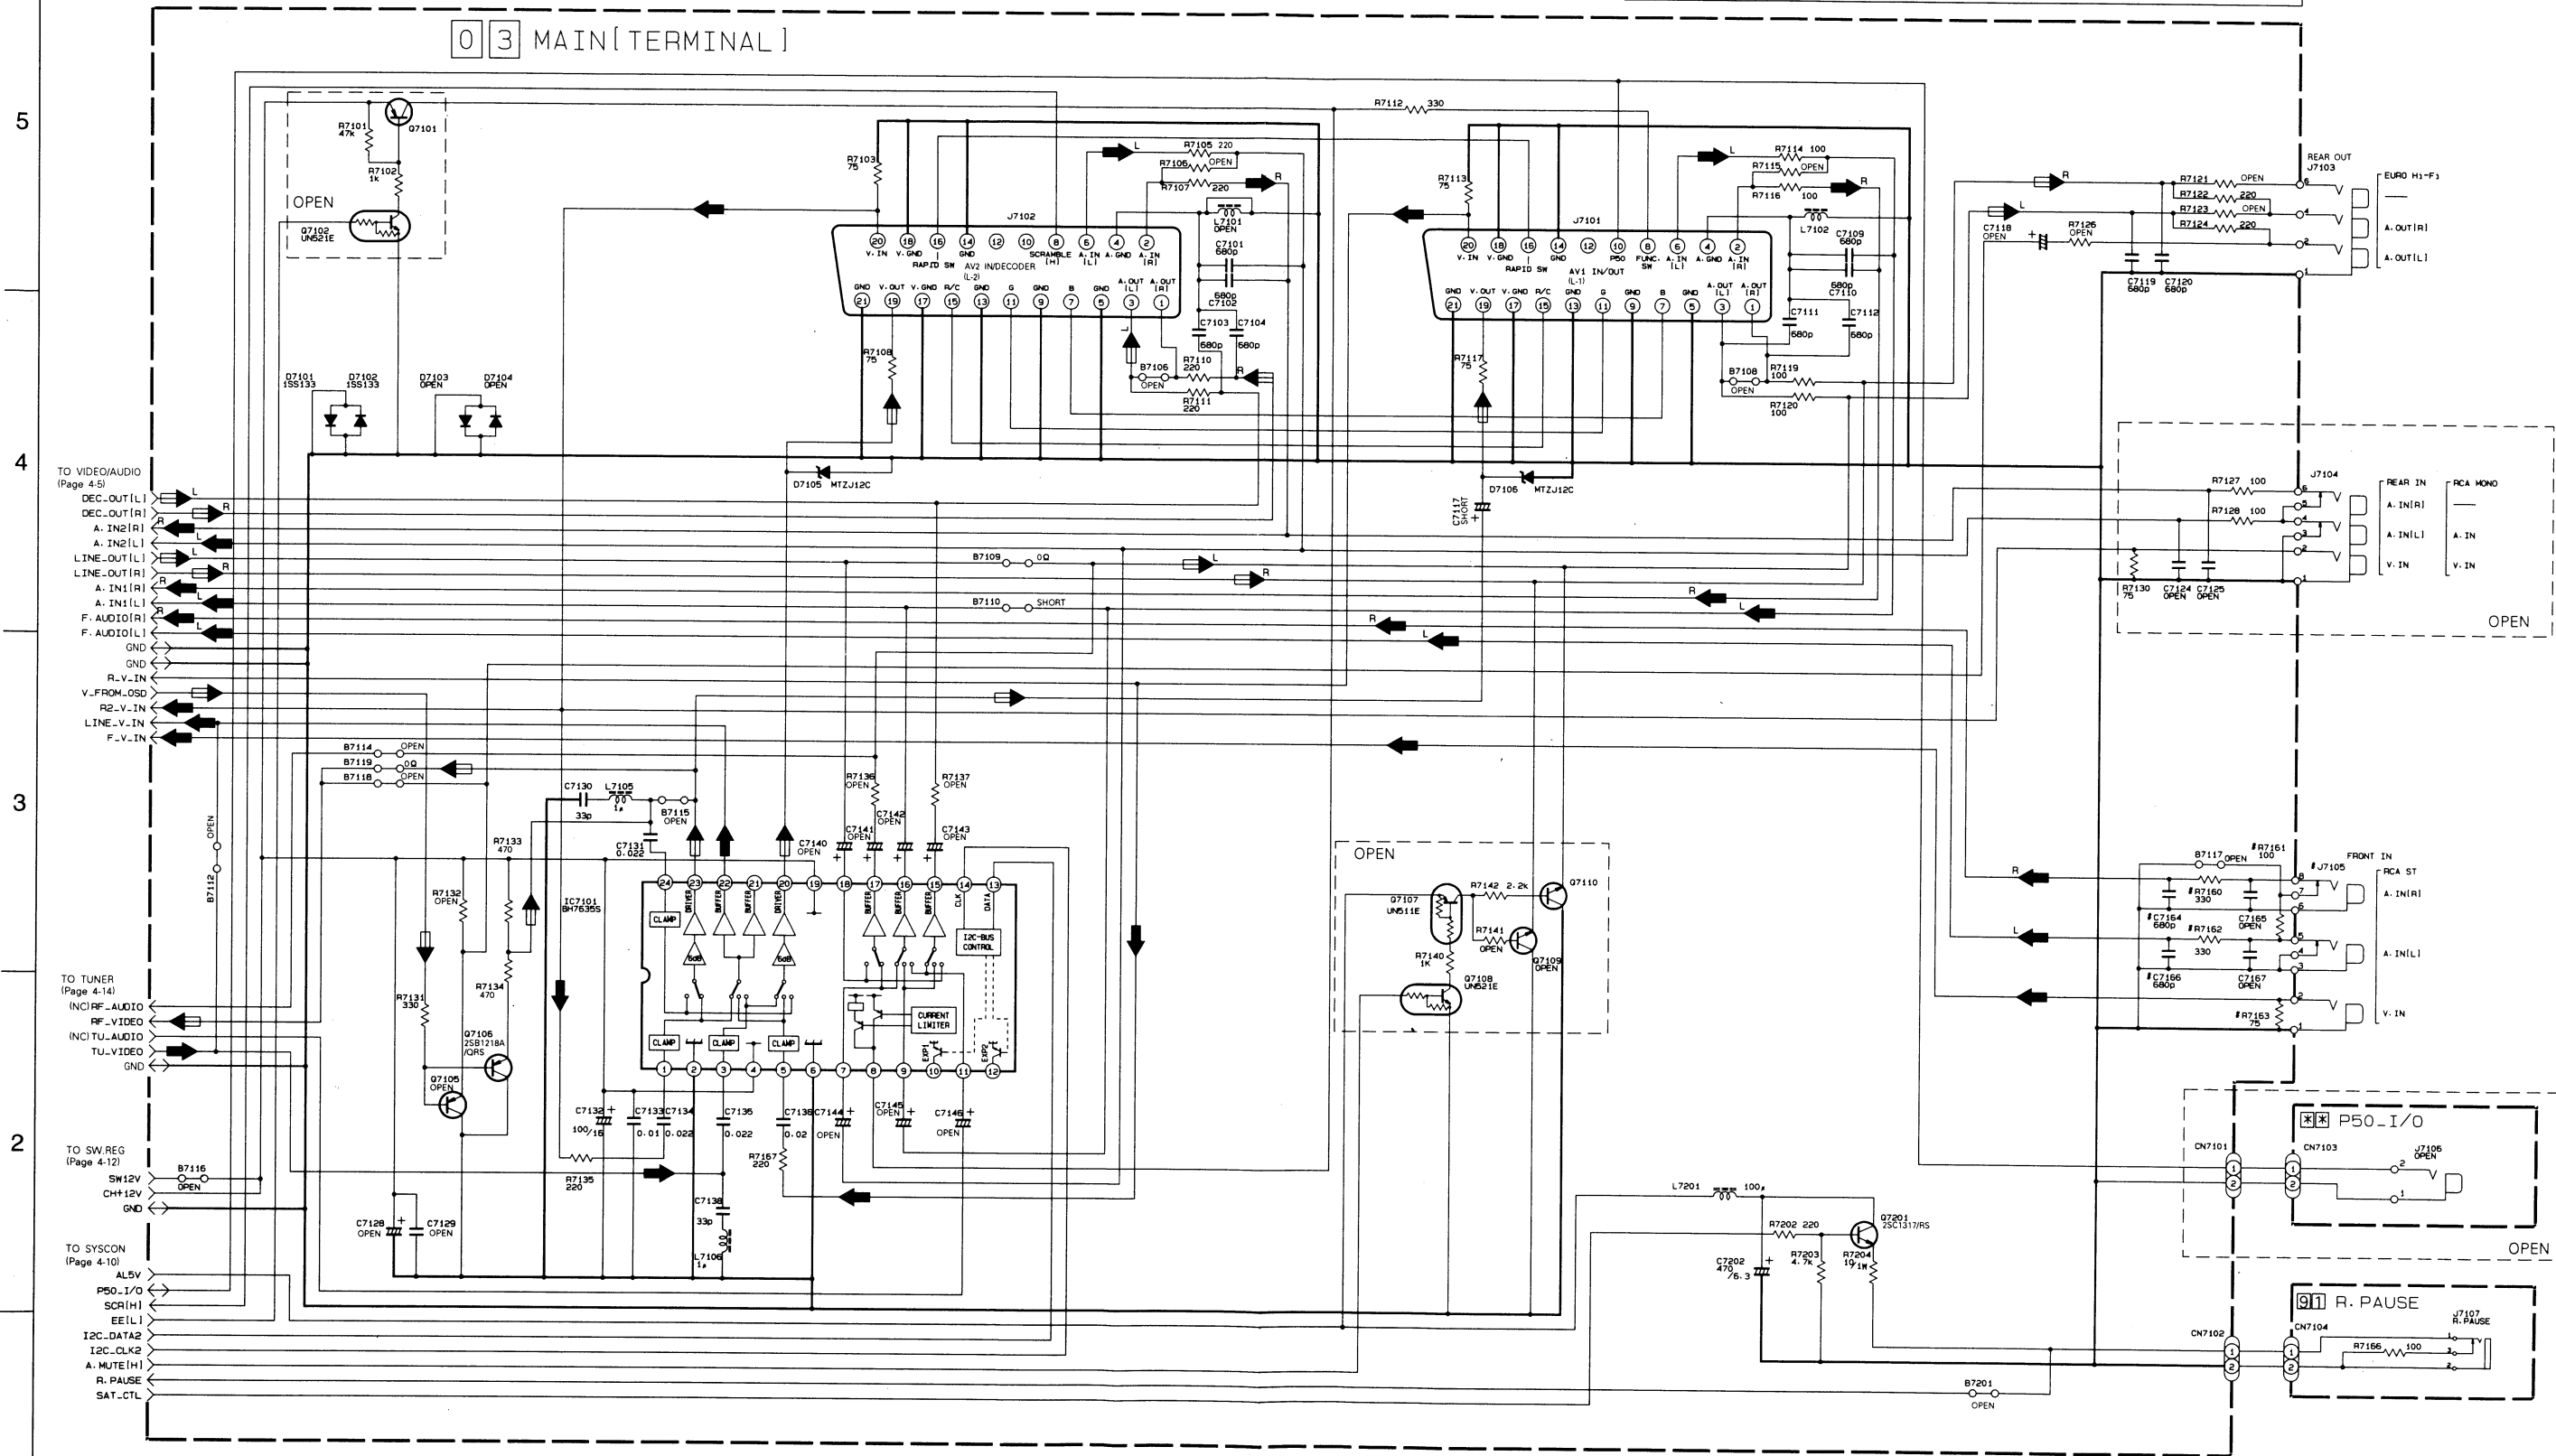

NOTE : Comparison chart of models & marks(#).

REF.NO.	R7160~R7163	C7164 C7166	J7105
HR-J670EU	NOT USED	NOT USED	NOT USED
HR-J670EK/J770EK/J770EU	USED	USED	USED

A

B

C

D 4-17

4-18

E


F

G


H

4.9 DEMODULATOR SCHEMATIC DIAGRAM


NOTE : When ordering parts, be sure to order according to the Part Number indicated in the Parts List.

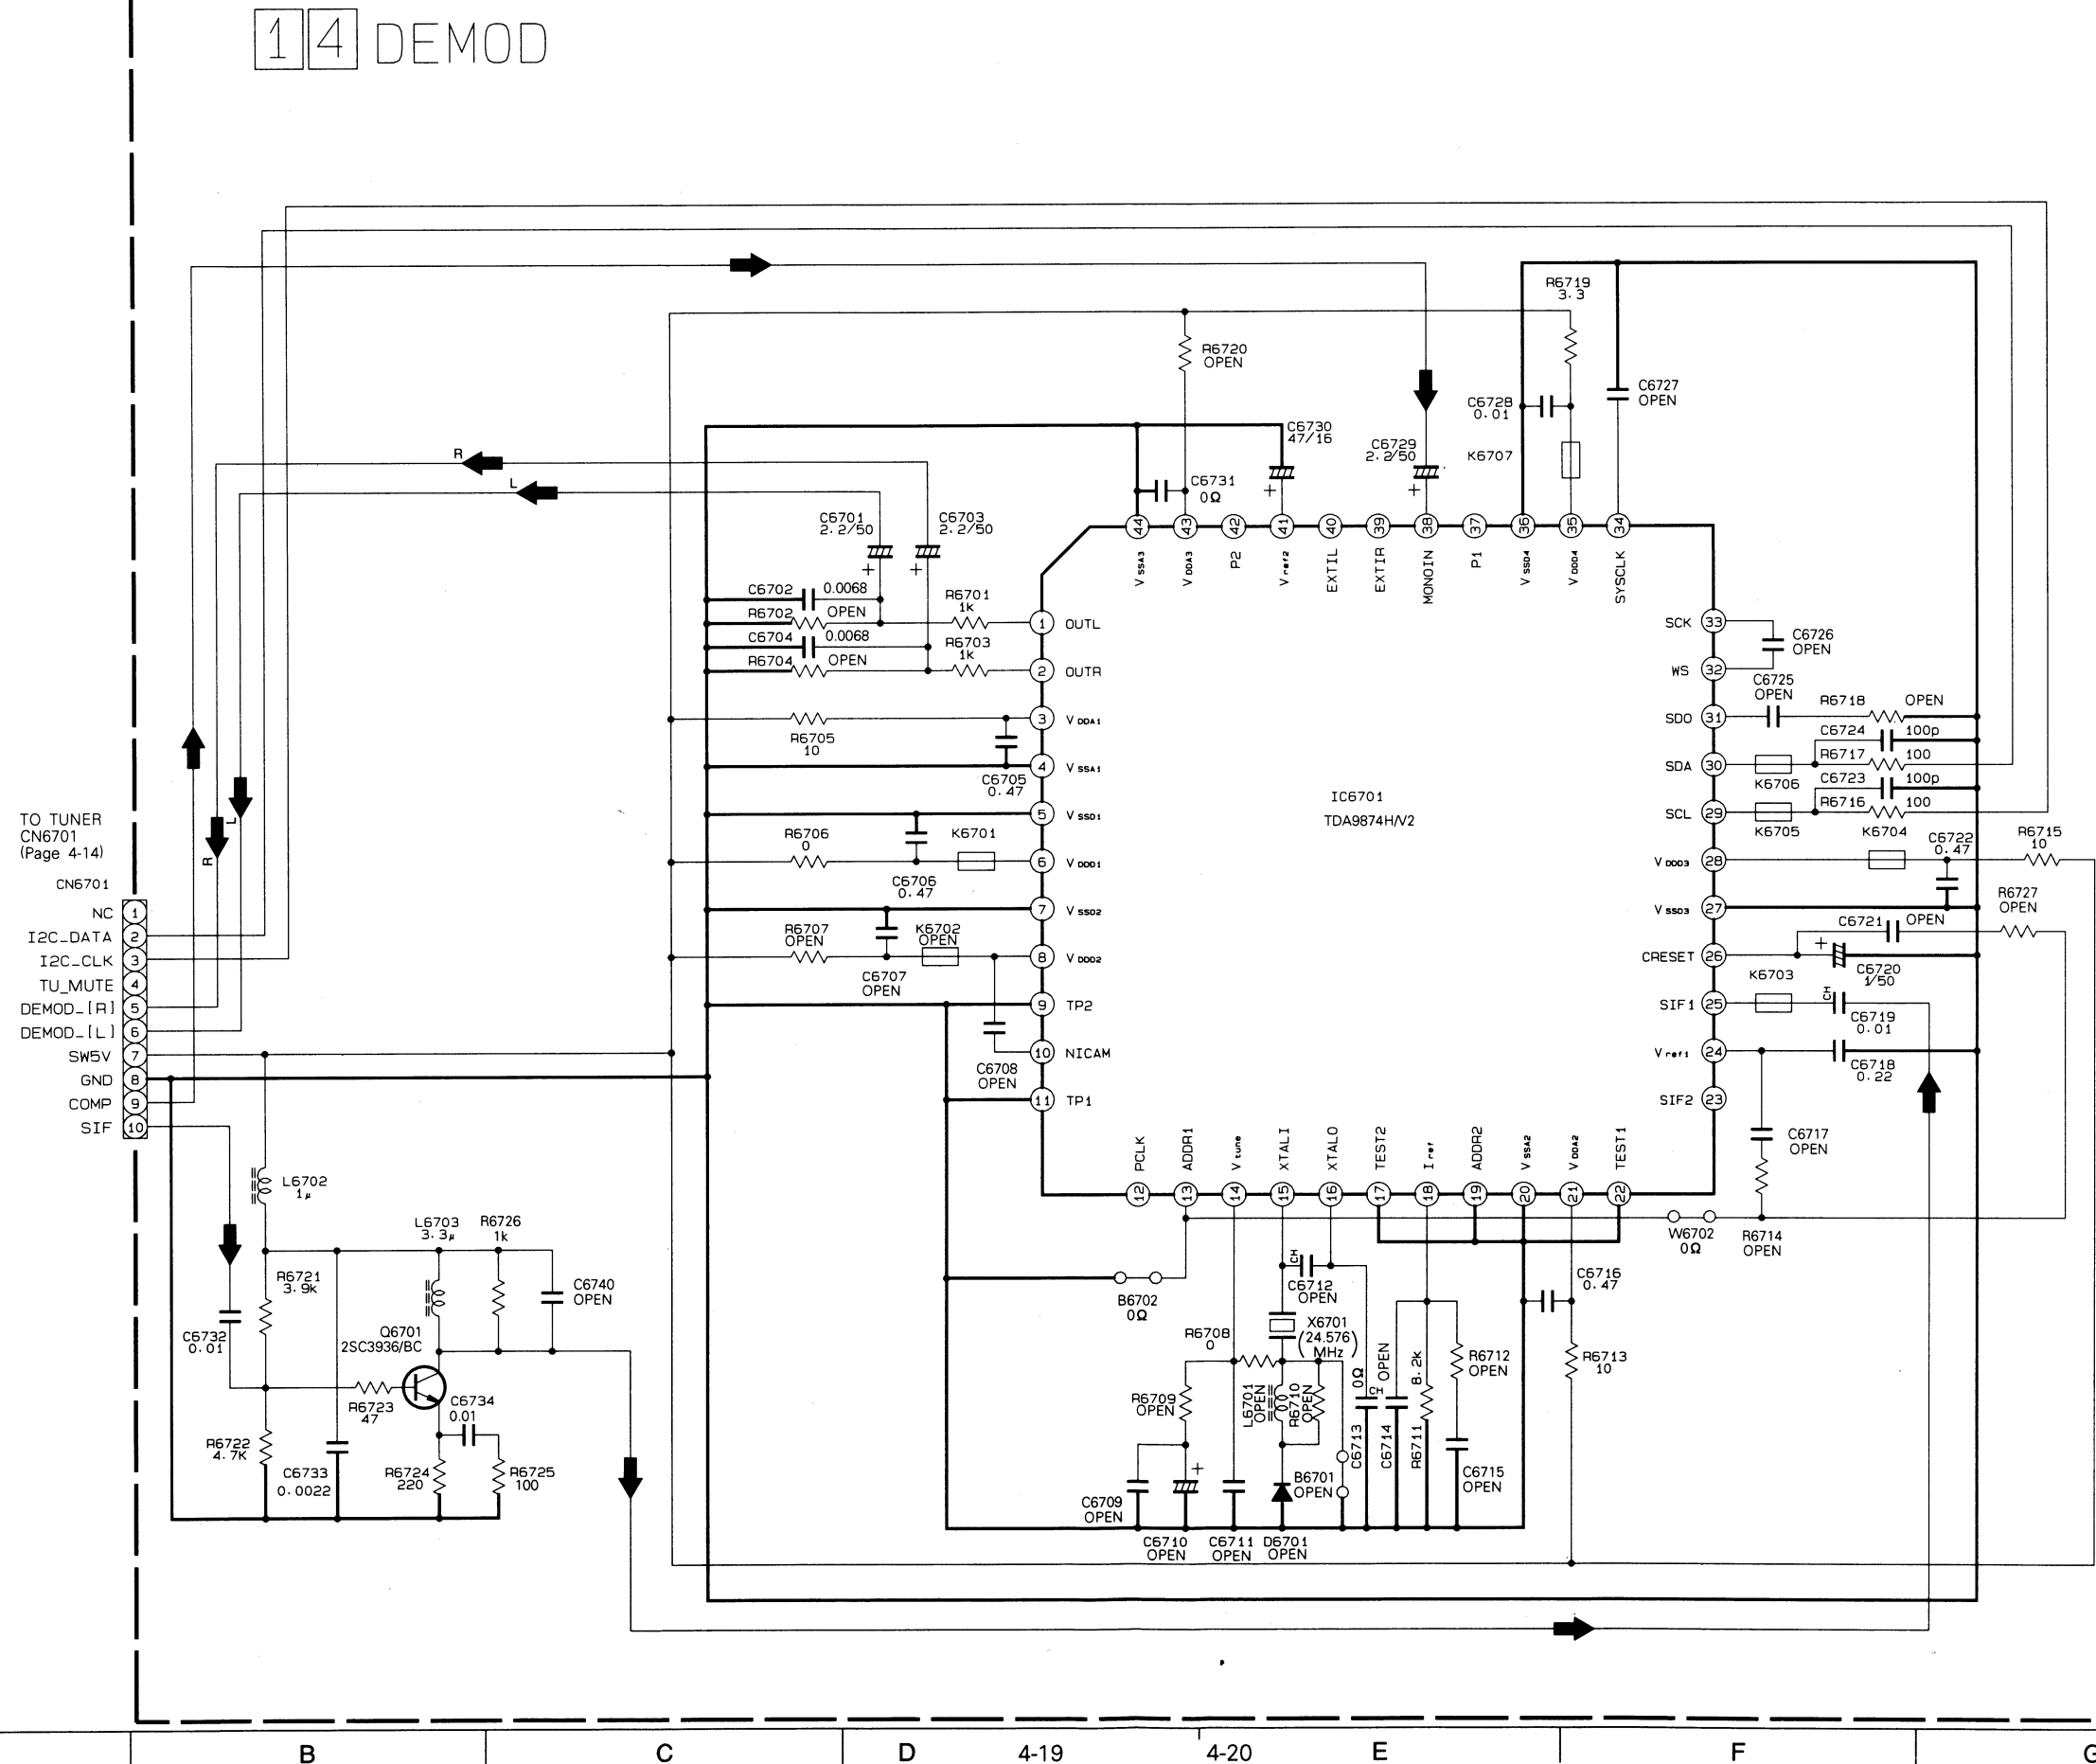


4.10 MAIN, A/C HEAD, R.PAUSE, SHUTTLE, MINI OPE AND LOADING MOTOR CIRCUIT BOARDS

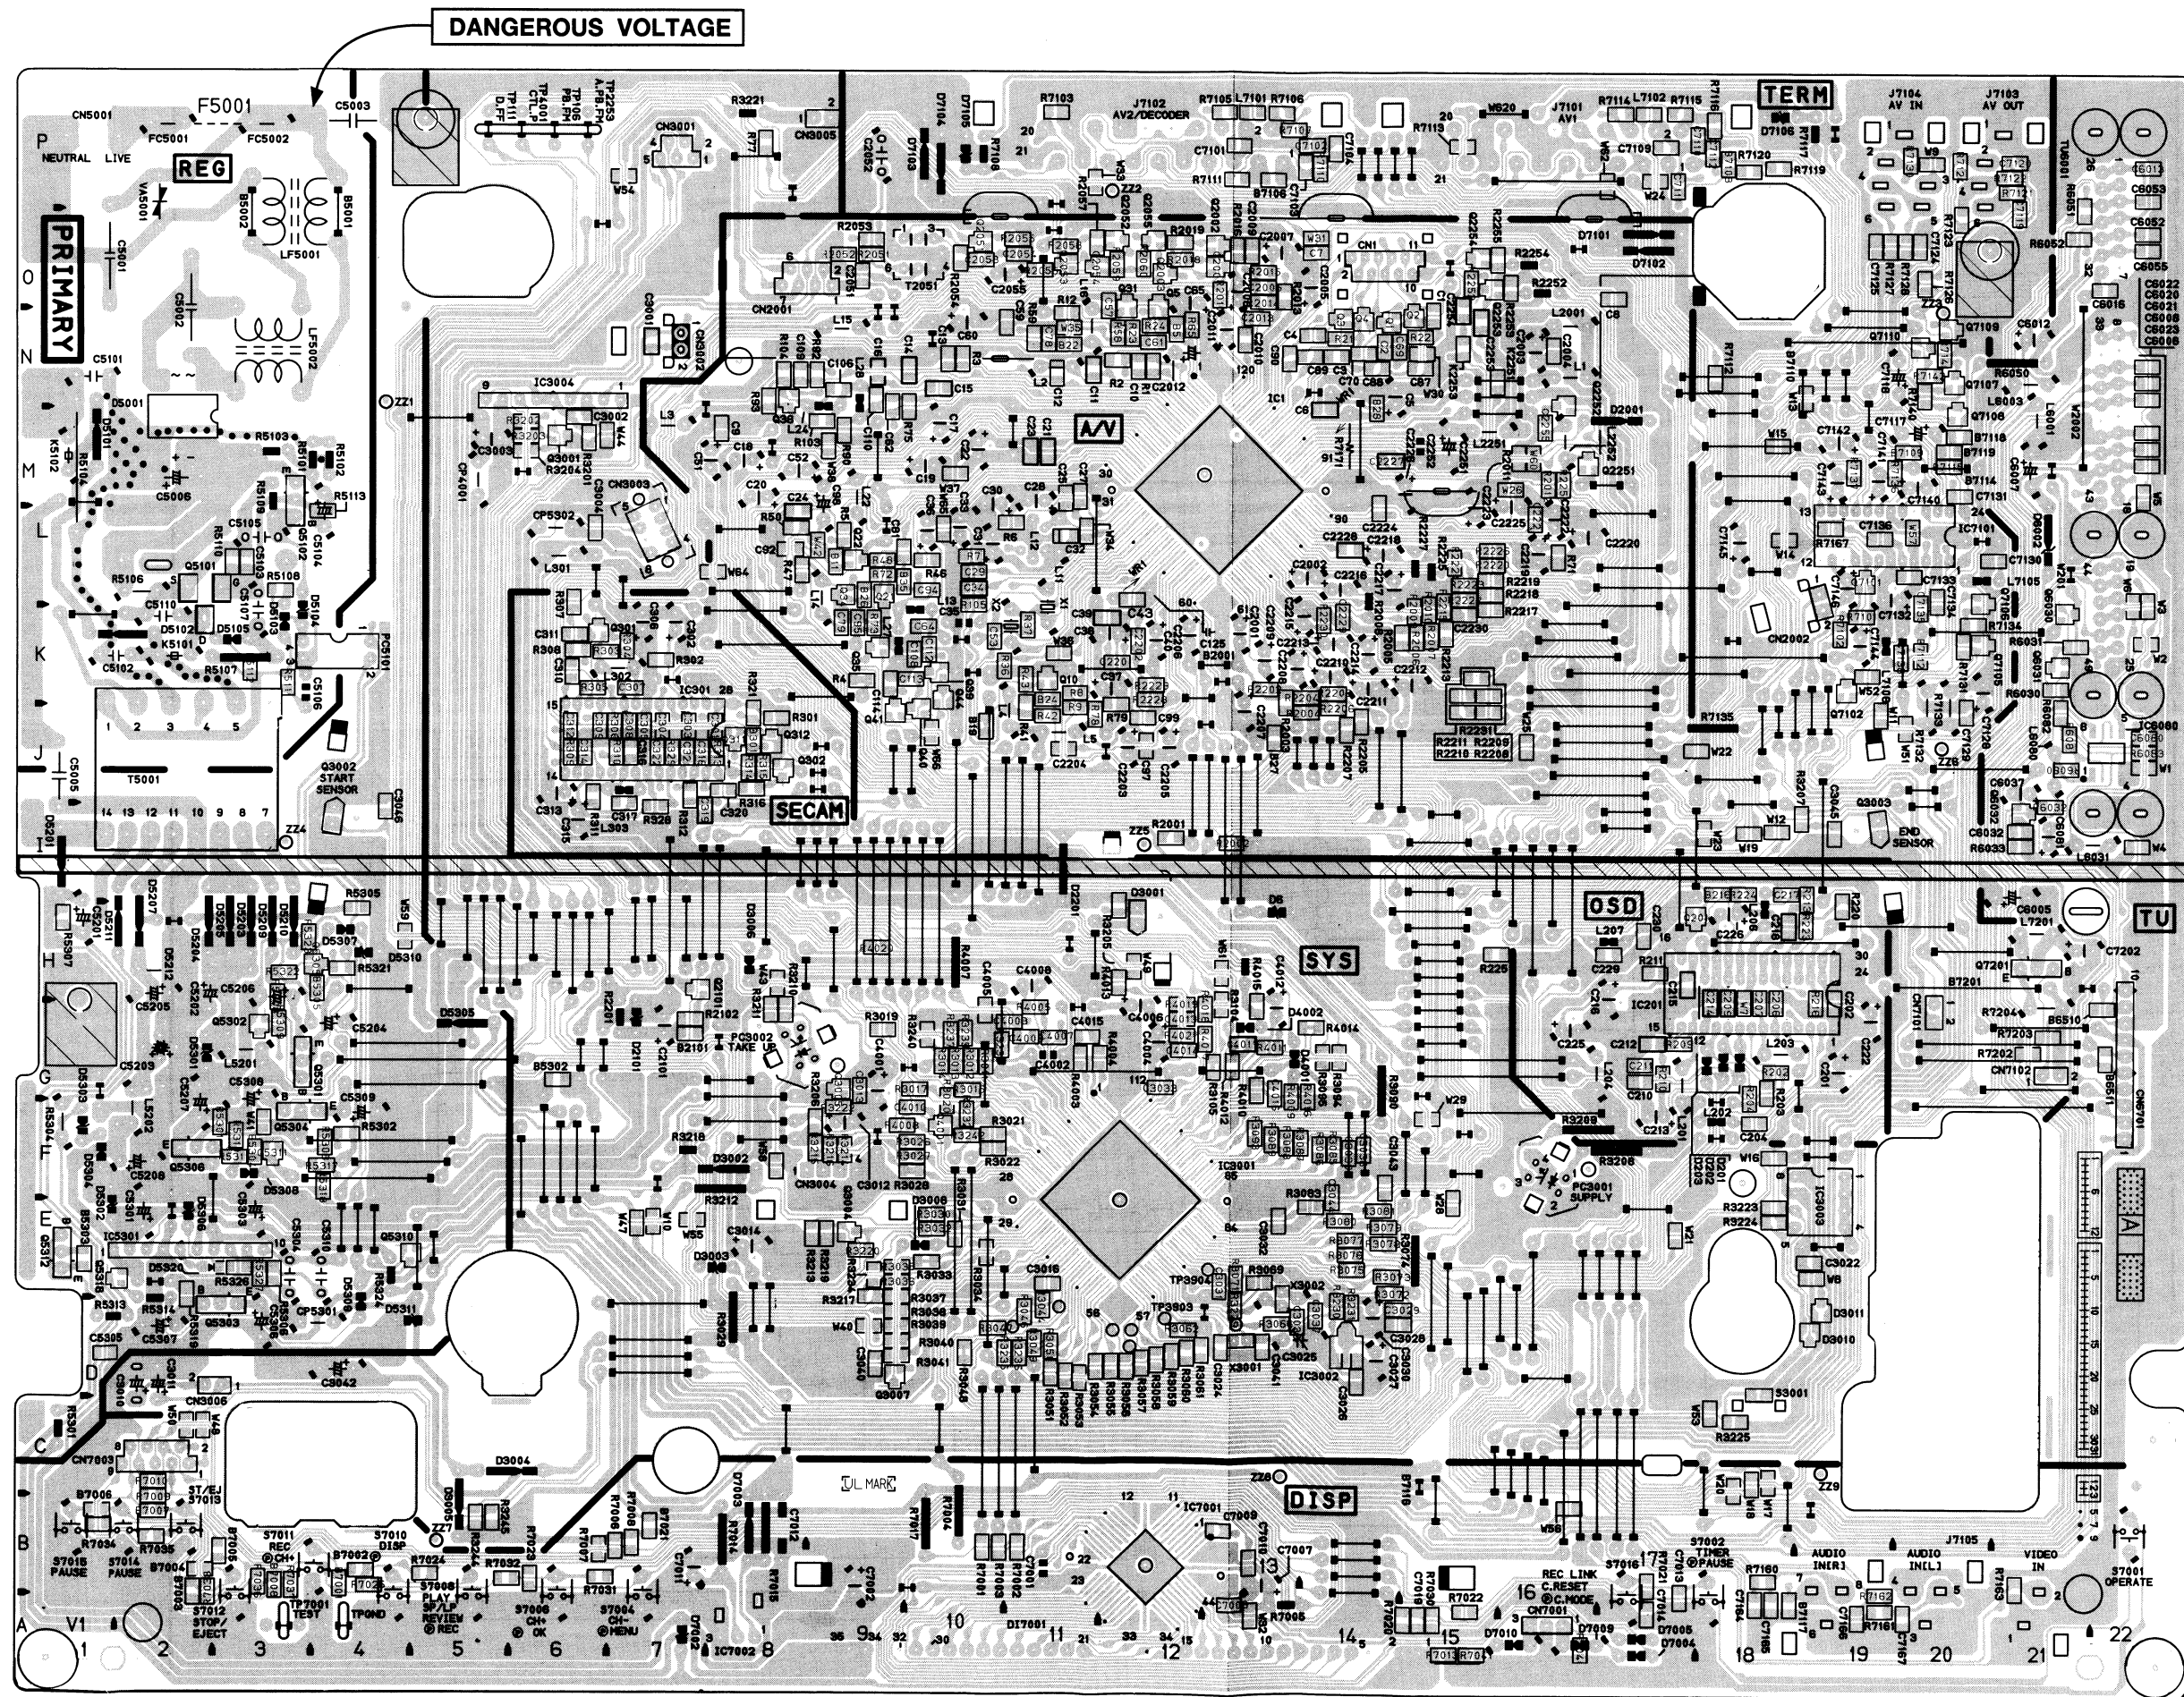


— MINI OPE —

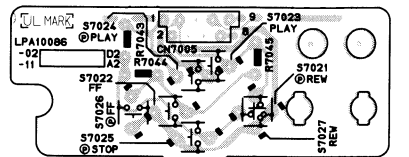


— R.PAUSE —

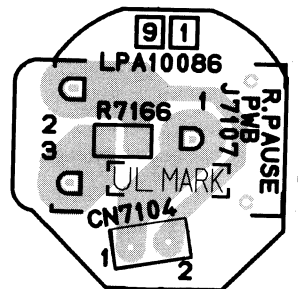


— A/C HEAD —

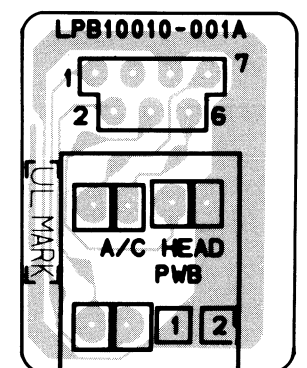

— SHUTTLE —

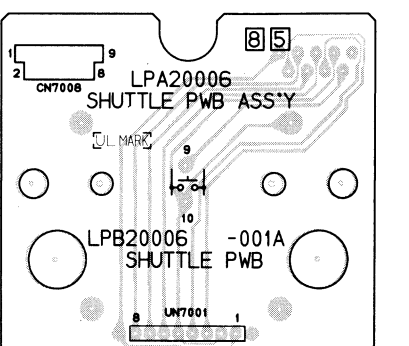

— LOADING MOTOR —

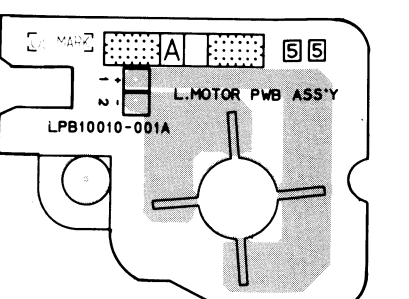


COMPONENT PARTS LOCATION GUIDE <MAIN>

REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION
CAPACITOR															
C1	B	C2005	A	C5304	A	D5210	A	Q2252	B	R2016	B	R3206	B	R7033	B
C2	B	C2006	B	C5305	B	D5211	B	Q2253	B	R2017	B	R3207	B	R7034	B
C3	B	C2007	B	C5306	B	D5212	B	Q2254	B	R2018	B	R3208	B	R7035	B
C4	B	C2008	B	C5307	B	D5301	B	Q3001	B	R2019	B	R3209	B	R7036	B
C5	B	C2009	B	C5308	B	D5302	B	Q3002	B	R2020	B	R3210	B	R7037	B
C6	B	C2010	B	C5309	B	D5303	B	Q3003	B	R2021	B	R3211	B	R7038	B
C7	B	C2011	B	C5310	B	D5304	B	Q3004	B	R2022	B	R3212	B	R7039	B
C8	B	C2012	B	C6005	B	D5305	B	Q3005	B	R2023	B	R3213	B	R7040	B
C9	B	C2013	B	C6006	B	D5306	B	Q3006	B	R2024	B	R3214	B	R7041	B
C10	B	C2014	B	C6007	B	D5307	B	Q3007	B	R2025	B	R3215	B	R7042	B
C11	B	C2015	B	C6008	B	D5308	B	Q3008	B	R2026	B	R3216	B	R7043	B
C12	B	C2016	B	C6009	B	D5309	B	Q3009	B	R2027	B	R3217	B	R7044	B
C13	B	C2017	B	C6010	B	D5310	B	Q3010	B	R2028	B	R3218	B	R7045	B
C14	B	C2018	B	C6011	B	D5311	B	Q3011	B	R2029	B	R3219	B	R7046	B
C15	B	C2019	B	C6012	B	D5312	B	Q3012	B	R2030	B	R3220	B	R7047	B
C16	B	C2020	B	C6013	B	D5313	B	Q3013	B	R2031	B	R3221	B	R7048	B
C17	B	C2021	B	C6014	B	D5314	B	Q3014	B	R2032	B	R3222	B	R7049	B
C18	B	C2022	B	C6015	B	D5315	B	Q3015	B	R2033	B	R3223	B	R7050	B
C19	B	C2023	B	C6016	B	D5316	B	Q3016	B	R2034	B	R3224	B	R7051	B
C20	B	C2024	B	C6017	B	D5317	B	Q3017	B	R2035	B	R3225	B	R7052	B
C21	B	C2025	B	C6018	B	D5318	B	Q3018	B	R2036	B	R3226	B	R7053	B
C22	B	C2026	B	C6019	B	D5319	B	Q3019	B	R2037	B	R3227	B	R7054	B
C23	B	C2027	B	C6020	B	D5320	B	Q3020	B	R2038	B	R3228	B	R7055	B
C24	B	C2028	B	C6021	B	D5321	B	Q3021	B	R2039	B	R3229	B	R7056	B
C25	B	C2029	B	C6022	B	D5322	B	Q3022	B	R2040	B	R3230	B	R7057	B
C26	B	C2030	B	C6023	B	D5323	B	Q3023	B	R2041	B	R3231	B	R7058	B
C27	B	C2031	B	C6024	B	D5324	B	Q3024	B	R2042	B	R3232	B	R7059	B
C28	B	C2032	B	C6025	B	D5325	B	Q3025	B	R2043	B	R3233	B	R7060	B
C29	B	C2033	B	C6026	B	D5326	B	Q3026	B	R2044	B	R3234	B	R7061	B
C30	B	C2034	B	C6027	B	D5327	B	Q3027	B	R2045	B	R3235	B	R7062	B
C31	B	C2035	B	C6028	B	D5328	B	Q3028	B	R2046	B	R3236	B	R7063	B
C32	B	C2036	B	C6029	B	D5329	B	Q3029	B	R2047	B	R3237	B	R7064	B
C33	B	C2037	B	C6030	B	D5330	B	Q3030	B	R2048	B	R3238	B	R7065	B
C34	B	C2038	B	C6031	B	D5331	B	Q3031	B	R2049	B	R3239	B	R7066	B
C35	B	C2039	B	C6032	B	D5332	B	Q3032	B	R2050	B	R3240	B	R7067	B
C36	B	C2040	B	C6033	B	D5333	B	Q3033	B	R2051	B	R3241	B	R7068	B
C37	B	C2041	B	C6034	B	D5334	B	Q3034	B	R2052	B	R3242	B	R7069	B
C38	B	C2042	B	C6035	B	D5335	B	Q3035	B	R2053	B	R3243	B	R7070	B
C39	B	C2043	B	C6036	B	D5336	B	Q3036	B	R2054	B	R3244	B	R7071	B
C40	B	C2044	B	C6037	B	D5337	B	Q3037	B	R2055	B	R3245	B	R7072	B
C41	B	C2045	B	C6038	B	D5338	B	Q3038	B	R2056	B	R3246	B	R7073	B
C42	B	C2046	B	C6039	B	D5339	B	Q3039	B	R2057	B	R3247	B	R7074	B
C43	B	C2047	B	C6040	B	D5340	B	Q3040	B	R2058	B	R3248	B	R7075	B
C44	B	C2048	B	C6041	B	D5341	B	Q3041	B	R2059	B	R3249	B	R7076	B
C45	B	C2049	B	C6042	B	D5342	B	Q3042	B	R2060	B	R3250	B	R7077	B
C46	B	C2050	B	C6043	B	D5343	B	Q3043	B	R2061	B	R3251	B	R7078	B
C47	B	C2051	B	C6044	B	D5344	B	Q3044	B	R2062	B	R3252	B	R7079	B
C48	B	C2052	B	C6045	B	D5345	B	Q3045	B	R2063	B	R3253	B	R7080	B
C49	B	C2053	B	C6046	B	D5346	B	Q3046	B	R2064	B	R3254	B	R7081	B
C50	B	C2054	B	C6047	B	D5347	B	Q3047	B	R2065	B	R3255	B	R7082	B
C51	B	C2055	B	C6048	B	D5348	B	Q3048	B	R2066	B	R3256	B	R7083	B
C52	B	C2056	B	C6049	B	D5349	B	Q3049	B	R2067	B	R3257	B	R7084	B
C53	B	C2057	B	C6050	B	D5350	B	Q3050	B	R2068	B	R3258	B	R7085	B
C54	B	C2058	B	C6051	B	D5351	B	Q3051	B	R2069	B	R3259	B	R7086	B
C55	B	C2059	B	C6052	B	D5352	B	Q3052	B	R2070	B	R3260	B	R7087	B
C56	B	C2060	B	C6053	B	D5353	B	Q3053	B	R2071	B	R3261	B	R7088	B
C57	B	C2061	B	C6054	B	D5354	B	Q3054	B	R2072	B	R3262	B	R7089	B
C58	B	C2062	B	C6055	B	D5355	B	Q3055	B	R2073	B	R3263	B	R7090	B
C59	B	C2063	B	C6056	B	D5356	B	Q3056	B	R2074	B	R3264	B	R7091	B
C60	B	C2064	B	C6057	B	D5357	B	Q3057	B	R2075	B	R3265	B	R7092	B
C61	B	C2065	B	C6058	B	D5358	B	Q3058	B	R2076	B	R3266	B	R7093	B
C62	B	C2066	B	C6059	B	D5359	B	Q3059	B	R2077	B	R3267	B	R7094	B
C63	B	C2067	B	C6060	B	D5360	B	Q3060	B	R2078	B	R3268	B	R7095	B
C64	B	C2068	B	C6061	B	D5361	B	Q3061	B	R2079	B	R3269	B	R7096	B
C65	B	C2069	B	C6062	B	D5362	B	Q3062	B	R2080	B	R3270	B	R7097	B
C66	B	C2070	B	C6063	B	D5363	B	Q3063	B	R2081	B	R3271	B	R7098	B
C67	B	C2071	B	C6064	B	D5364	B	Q3064	B	R2082	B	R3272	B	R7099	B
C68	B	C2072	B	C6065	B	D5365	B	Q3065	B	R2083	B	R3273	B	R7100	B
C69	B	C2073	B	C6066	B	D5366	B	Q3066	B	R2084	B	R3274	B	R7101	B
C70	B	C2074	B	C6067	B	D5367	B	Q3067	B	R2085	B	R3275	B	R7102	B
C71	B	C2075	B	C6068	B	D5368	B	Q3068	B	R2086	B	R3276	B	R7103	B
C72	B	C2076	B	C6069	B	D5369	B	Q3069	B	R2087	B	R3277	B	R7104	B
C73	B	C2077	B	C6070	B	D5370	B	Q3070	B	R2088	B	R3278	B	R7105	B
C74	B	C2078	B	C6071	B	D5371	B	Q3071	B	R2089	B	R3279	B	R7106	B
C75	B	C2079	B	C6072	B	D5372	B	Q3072	B	R2090	B	R3280	B	R7107	B
C76	B	C2080	B	C6073	B	D5373	B	Q3073	B	R2091	B	R3281	B	R7108	B
C77	B	C2081	B	C6074	B	D5374	B	Q3074	B	R2092	B	R3282	B	R7109	B
C78	B	C2082	B	C6075	B	D5375	B	Q3075	B	R2093	B	R3283	B	R7110	B
C79	B	C2083	B	C6076	B	D5376	B	Q3076	B	R2094	B	R3284	B	R7111	B
C80	B	C2084	B	C6077	B	D5377	B	Q3077	B	R2095	B	R3285	B	R7112	B
C81	B	C2085	B	C6078	B	D5378	B	Q3078	B	R2096	B	R3286	B	R7113	B
C82	B	C2086	B	C6079	B	D5379	B	Q3079	B	R2097	B	R3287	B	R7114	B
C83	B	C2087	B	C6080	B	D5380	B	Q3080	B	R2098	B	R3288	B	R7115	B
C84	B	C2088	B	C6081	B	D5381	B	Q3081	B	R2099	B	R3289	B	R7116	B
C85	B	C2089	B	C6082	B	D5382	B	Q3082	B	R2100	B	R3290	B	R7117	B
C86	B	C2090	B	C6083	B	D5383	B	Q3083	B	R2101	B	R3291	B	R7118	B
C87	B	C2091	B	C6084	B	D5384	B	Q3084	B	R2102	B	R3292	B	R7119	B
C88	B	C2092	B	C6085	B	D5385	B	Q3085	B	R2103	B	R3293	B	R7120	B
C89	B	C2093	B	C6086	B	D5386	B	Q3086	B	R2104	B	R3294	B	R7121	B
C90	B	C2094	B	C6087	B	D5387	B	Q3087	B	R2105	B	R3295	B	R7122	B
C91	B	C2095	B	C6088	B	D5388	B	Q3088	B	R2106	B	R3296	B	R7123	B
C92	B	C2096	B	C6089	B	D5389	B	Q3089	B	R2107	B	R3297	B	R7124	B
C93	B	C2097	B	C6090	B	D5390	B	Q3090	B	R2108	B	R3298	B	R7125	B
C94	B	C2098	B	C6091	B	D5391	B	Q3091	B	R2109	B	R3299	B	R7126	B
C95	B	C2099	B	C6092	B	D5392	B	Q3092	B	R2110	B	R3300	B	R7127	B
C96	B	C2100	B	C6093	B	D5393	B	Q3093	B	R2111	B	R3301	B	R7128	B
C97	B	C2101	B	C6094	B	D5394	B	Q3094	B	R2112	B	R3302	B	R7129	B
C98	B	C2102	B	C6095	B	D5395	B	Q3095	B	R2113	B	R3303	B	R7130	B
C99	B	C2103	B	C6096	B	D5396	B	Q3096	B	R2114	B	R3304	B	R7131	B
C100	B	C2104	B	C6097	B	D5397	B	Q3097	B	R2115	B	R3305	B	R7132	B
C101	B	C2105	B	C6098	B	D5398	B	Q3098	B	R2116	B	R3306	B	R7133	B
C102	B	C2106	B	C6099	B	D5399	B	Q3099	B	R2117	B	R3307	B	R7134	B
C103	B	C2107	B	C6100	B	D5400	B	Q3100	B	R2118	B	R3308	B	R7135	B

REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION		
CAPACITOR			C6719	B C 1D	CONNECTOR			RESISTOR			
C6701	A D 3A	C6720	B C 2D	CN6701	A D 3A	R6701	B C 3A	R6719	B C 1B		
C6702	B C 2A	C6721	B C 3D			R6702	B C 3A	R6720	A D 2A		
C6703	A D 4A	C6722	B C 2D	DIODE			R6703	B C 3A	R6721	B C 1A	
C6704	B C 3B	C6723	B C 1D	D6701	B C 4D	R6704	B C 3A	R6722	B C 2A		
C6705	B C 3B	C6724	B C 1D				R6705	B C 4A	R6723	B C 1A	
C6706	B C 4B	C6725	B C 2C	IC			R6706	B C 4A	R6724	B C 2B	
C6707	B C 4B	C6726	B C 1C	IC6701	B C 3C	R6707	B C 4B	R6706	B C 4A	R6725	B C 2B
C6708	B C 3B	C6727	B C 1B				R6708	B C 4C	R6726	B C 1B	
C6709	B C 4C	C6728	B C 1B				R6709	B C 4C	R6727	B C 3D	
C6710	A D 4C	C6729	A D 2A	COIL			R6710	B C 4C	OTHER		
C6711	B C 4C	C6730	A D 2B	L6701	A D 4D	R6711	B C 3C	K6701	B C 3B		
C6712	B C 4C	C6731	B C 2B	L6702	A D 1A	R6712	B C 3D	K6702	B C 4B		
C6713	B C 3C	C6732	B C 1A	L6703	A D 1C	R6713	B C 3D	K6703	B C 2D		
C6714	B C 3D	C6733	B C 2A				R6714	B C 3D	K6704	B C 2C	
C6715	B C 3D	C6734	B C 2B	TRANSISTOR			R6715	B C 2D	K6705	B C 2C	
C6716	B C 3C			Q6701	B C 1B	R6716	B C 2D	K6706	B C 1C		
C6717	B C 3D					R6717	B C 2D	K6707	B C 2B		
C6718	B C 3D					R6718	B C 1C	X6701	A D 4D		

4.12 FDP GRID ASSIGNMENT AND ANODE CONNECTION

GRID ASSIGNMENT

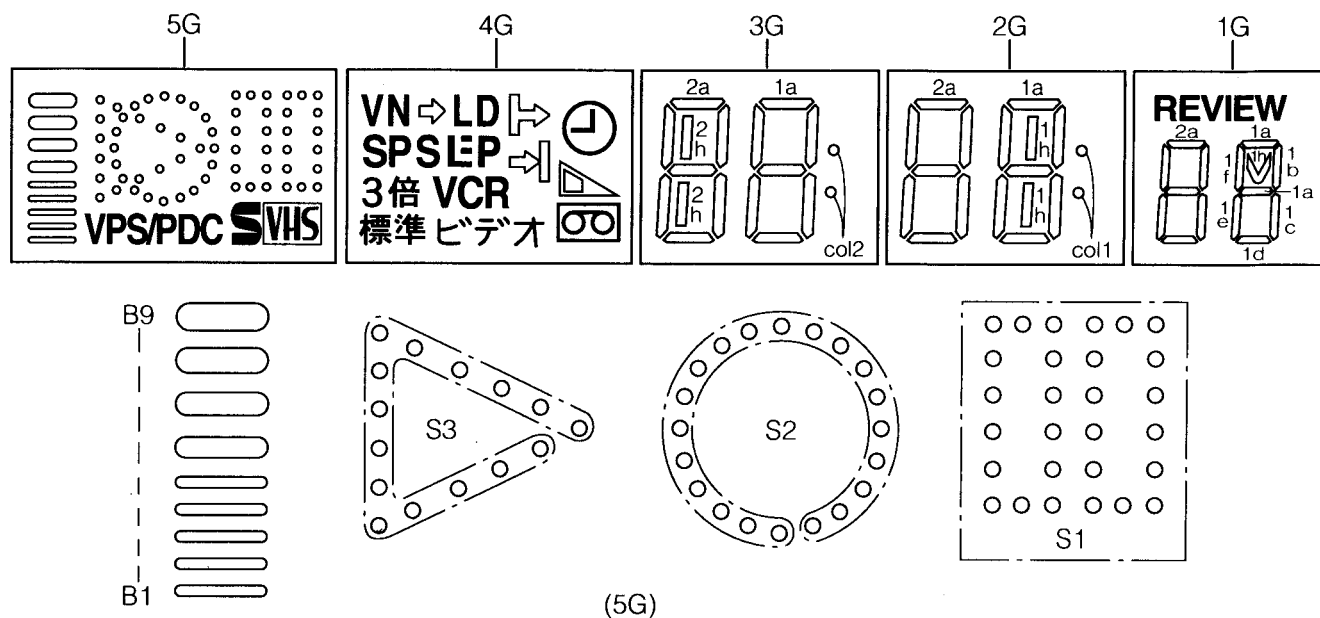


ANODE CONNECTION

	5G	4G	3G	2G	1G
P 1	S2	→	1a	1a	1a
P 2	S1	⇨	1b	1b	1b
P 3	S3	3倍	1f	1f	1f
P 4	VPS/PDC	標準	1g	1g	1g
P 5	SVHS	⌚	1c	1c	1c
P 6	—	△	1e	1e	1e
P 7	—	⊞	1d	1d	1d
P 8	B9	VCR	col2	1h	1h
P 9	B8	ビデオ	2a	2a	2a
P10	B7	⇨	2b	2b	2b
P11	B6	VN	2f	2f	2f
P12	B5	LD	2g	2g	2g
P13	B4	SP	2c	2c	2c
P14	B3	S _(SEP)	2e	2e	2e
P15	B2	= _(SEP)	2d	2d	2d
P16	B1	LP _(SEP)	2h	col1	REVIEW

4.13 REMOTE CONTROL SCHEMATIC DIAGRAM

- NOTES:
- 1. All parts shown in this schematic are critical for safety.
 - 2. This schematic is only for reference.
 - Avoid replacing individual parts.
 - Replace the entire unit only.

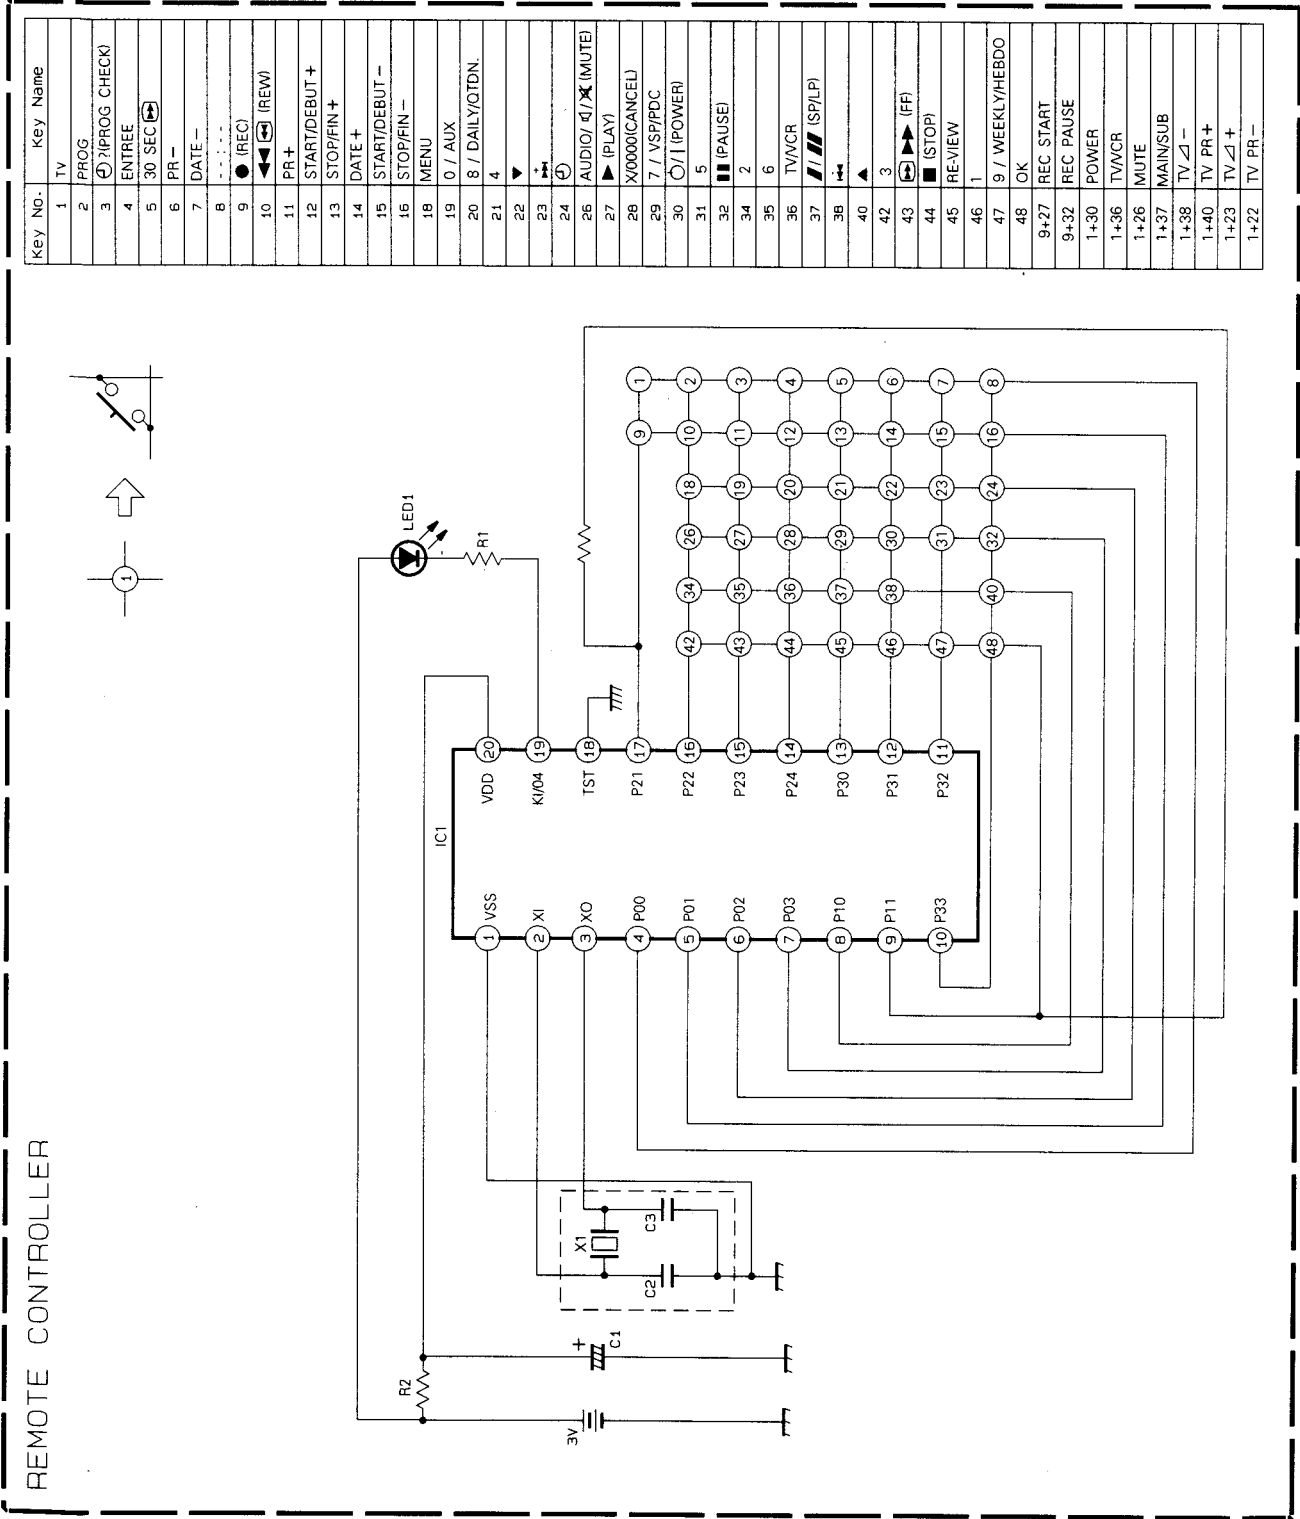

4.14 VOLTAGE CHARTS

<VIDEO/AUDIO>

MODE PIN NO.	REC	PLAY
IC1		
1	1.4	2.1
2	2.9	2.9
3	2.5	2.5
4	1.9	1.4
5	1.9	1.5
6	2.4	2.1
7	1.5	0.8
8	0	0
9	2.6	3.0
10	2.5	2.5
11	3.0	3.0
12	2.8	2.5
13	3.0	3.0
14	2.3	2.3
15	0	0
16	2.8	2.8
17	1.5	1.5
18	2.8	2.8
19	0	2.6
20	2.8	2.8
21	2.0	2.0
22	2.8	2.8
23	2.8	2.8
24	5.0	5.0
25	0.4	0.4
26	0	0
27	2.3	2.3
28	2.3	2.3
29	1.9	1.9
30	2.1	2.1
31	0	0
32	2.7	2.7
33	5.0	5.0
34	2.7	2.2
35	5.0	5.0
36	2.7	2.7
37	2.3	2.3
38	-	-
39	1.2	1.2
40	-	-
41	2.5	2.5
42	2.2	2.2
43	0	0
44	2.2	2.2
45	4.8	4.8
46	4.2	4.2
47	2.7	2.7
48	2.5	2.5
49	5.0	5.0
50	2.5	2.5
51	2.8	2.8
52	2.3	2.3
53	2.3	2.3
54	2.4	2.4
55	2.1	2.1
56	0.5	0.5
57	2.3	2.3
58	8.2	8.2
59	4.8	4.8
60	4.2	4.2
61	4.1	4.1
62	4.1	4.1
63	2.3	2.3
64	2.3	2.3
65	1.5	1.5
66	3.0	3.0
67	4.2	4.2
68	4.2	4.2
69	2.3	2.3
70	0	0
71	0.3	0.3
72	0.2	0.2
73	0.2	0.2
74	2.3	2.3
75	2.5	2.5
76	0	0
77	2.5	2.5

MODE PIN NO.	REC	PLAY
78	0.3	0.3
79	0.2	0.2
80	0.2	0.2
81	2.3	2.3
82	0.7	0.7
83	0	0
84	2.3	2.3
85	2.3	2.3
86	2.2	2.2
87	1.6	1.8
88	2.3	2.3
89	2.3	2.3
90	2.3	2.3
91	0	0
92	0	0
93	0	2.4
94	0	1.5
95	0	0
96	2.4	2.4
97	2.7	2.3
98	2.5	2.3
99	4.9	4.9
100	5.0	5.0
101	0	0
102	0	0
103	0	0
104	2.3	2.3
105	2.3	2.3
106	2.3	2.3
107	4.9	4.9
108	0	0
109	0	0
110	0	0
111	0	1.6
112	2.5	2.5
113	0.5	1.0
114	0	0
115	2.5	2.5
116	2.5	2.5
117	2.5	2.5
118	0	0
119	2.5	2.5
120	4.6	4.6
Q1		
E	2.4	2.4
C	2.4	2.4
B	0	0
Q2		
E	2.4	2.4
C	2.4	2.4
B	0	0
Q3		
E	0	0
C	0	0
B	0.7	0.7
Q4		
E	0	0
C	0	0
B	0.7	0.7
Q22		
E	1.7	1.7
C	5.0	5.0
B	2.3	2.3
Q38		
E	2.3	2.3
C	5.0	5.0
B	3.0	3.0
Q41		
E	-	-
C	-	-
B	-	-
Q2001		
E	-10.8	0
C	0	0
B	-17.3	0.7
Q2002		
E	-10.8	0
C	0	0

MODE PIN NO.	REC	PLAY
B	-17.0	0.7
Q2003		
E	5.0	5.0
C	-17.0	4.9
B	4.9	0
Q2051		
E	0	0
C	7.0	0.3
B	0.5	0.3
Q2052		
E	10.5	10.6
C	10.3	0.4
B	9.8	10.6
Q2053		
E	0	0
C	0	10.6
B	4.9	0
Q2054		
E	10.4	0.4
C	10.2	0.2
B	9.6	0.4
Q2055		
E	0	0
C	0	0.5
B	4.9	0
Q2251		
E	4.9	4.9
C	1.6	1.8
B	4.9	4.9
Q2252		
E	0	0
C	0	0
B	4.8	4.8
CN1		
1	0	0
2	0	0
3	0	0
4	0	0
5	2.4	2.3
6	2.4	2.3
7	2.4	2.3
8	2.4	2.3
9	2.7	2.3
10	2.7	2.3
11	2.7	2.3
CN2001		
1	0	0
2	0	0
3	0	0
4	0	0
5	0	0
6	2.2	2.4
7	2.4	2.4
CN2002		
1	0	0
2	0	0

<ON SCREEN>

MODE PIN NO.	REC	PLAY
IC201		
1	0	0
2	2.6	2.6
3	4.8	4.8
4	0	0
5	4.4	4.4
6	2.4	2.4
7	2.4	2.4
8	5.0	5.0
9	3.0	3.0
10	4.3	4.3

MODE PIN NO.	REC	PLAY
11	-	1.0
12	5.0	5.0
13	2.8	2.8
14	2.8	2.8
15	0	0
16	1.2	1.2
17	0	0
18	5.0	5.0
19	2.3	2.3
20	0	0
21	2.3	2.3
22	0.5	0.5
23	5.0	5.0
24	2.8	2.8
25	2.5	2.5
26	5.0	5.0
27	4.5	4.5
28	3.6	3.6
29	5.0	5.0
30	5.0	5.0
Q201		
E	2.3	2.3
C	0	0
B	1.6	1.6

<SYSCON>

MODE PIN NO.	REC	PLAY
IC3001		
1	2.7	2.4
2	0	0
3	1.8	2.4
4	2.4	2.4
5	2.4	2.4
6	2.5	2.5
7	2.4	2.4
8	2.4	2.4
9	4.8	4.8
10	4.9	4.9
11	0.4	0.4
12	0.4	0.4
13	0	0
14	0	1.4
15	4.9	4.9
16	0	0
17	4.3	4.1
18	0	0
19	0	0
20	0	1.7
21	4.1	4.1
22	4.4	4.4
23	0	0
24	4.8	4.8
25	4.9	4.9
26	4.9	4.9
27	4.9	4.9
28	0	0
29	4.9	4.9
30	4.3	4.3
31	4.9	4.9
32	0	0
33	0	0
34	4.3	4.3
35	0	0
36	0	0
37	0	0
38	4.8	4.8
39	4.8	4.8
40	0	0
41	2.7	2.7
42	0	0
43	0	0
44	0	0

MODE PIN NO.	REC	PLAY
45	4.9	4.9
46	0.5	0.5
47	0.5	0.5
48	4.9	4.9
49	4.2	4.2
50	4.8	4.8
51	4.9	4.9
52	-	1.0
53	4.3	4.3
54	-	-
55	3.1	3.1
56	0	0
57	0	0
58	3.1	3.1
59	-	-
60	0	0
61	0	0
62	0	0
63	0	0
64	-	-
65	-	-
66	-	-
67	-	-
68	0	0
69	-	-
70	4.8	4.8
71	4.8	4.8
72	4.8	4.8
73	4.8	4.8
74	0	0
75	4.5	4.5
76	4.5	4.5
77	5.0	5.0
78	3.1	3.1
79	0	4.8
80	0	0
81	0	0
82	4.9	4.9
83	0	0
84	0	0
85	0	0
86	4.3	4.3
87	4.9	4.9
88	0	0
89	4.8	4.8
90	0	0
91	0	0
92	0	0
93	4.9	4.9
94	0	0
95	0	0
96	0	0
97	0	0
98	0.3	0.3
99	0	-
100	-	-
101	2.5	2.5
102	1.2	1.2
103	0	0
104	4.8	0
105	4.9	0
106	0	0
107	0	0
108	1.5	1.5
109	4.9	4.9
110	0	0
111	0	0
112	2.4	2.4
IC3002		
1	4.9	4.9
2	4.9	4.9
3	0	0
IC3003		
1	0	0
2	0	0
3	0	0
4	0	0
5	4.5	4.5


MODE PIN NO.	REC	PLAY
6	4.5	4.5
7	0	0
8	4.9	4.9
IC3004		
1	11.9	11.9
2	0.4	0.4
3	0	0
4	0.3	0.3
5	11.9	11.9
6	11.9	11.9
7	0	0
8	0	0
9	0	0
Q3001		
E	0	0
C	11.9	11.9
B	0	0
Q3002		
E	0	0
C	4.1	4.1
Q3003		
E	0	0
C	4.7	4.7
Q3004		
E	0	0
C	0	0
B	0.7	0.7
Q3005		
E	4.8	4.8
C	5.6	5.6
B	5.4	5.4
Q3007		
E	0	0
C	4.7	4.7
B	0	0
Q4001		
E	0	0
C	0	0
B	4.8	4.8
CN3001		
1	11.2	11.2
2	0	0
3	1.4	1.4
4	0	0
5	1.5	1.5
CN3002		
1	0.4	0.4
2	0.4	0.4
CN3003		
1	0	0
2	2.5	2.5
3	2.5	2.5
4	5.0	5.0
5	0	0
6	4.9	4.9
7	-	-
8	11.9	11.9
CN3004		
1	4.9	4.9
2	4.9	4.9
3	0	0
4	0	0

<SW.REG>


MODE PIN NO.	REC	PLAY
IC5301		
1	5.7	5.7
2	5.1	5.1
3	4.8	4.8
4	0	0
5	11.2	11.2

MODE PIN NO.	REC	PLAY
6	10.6	10.6
7	11.9	11.9
8	5.7	5.7
9	1.3	1.3
10	4.2	4.2
Q5101		
D	133.5	131.4
S	-	-
G	-	-
Q5102		
E	0	0
C	-	-
B	-	-
Q5303		
E	4.9	4.9
C	5.6	5.6
B	5.5	5.5
Q5304		
E	-	-
C	-	-
B	-	-
Q5305		
E	-	-
C	-	-
B	-	-
Q5306		
E	11.9	11.9
C	11.3	11.3
B	10.5	10.5
Q5310		
E	0	0
C	0	0
B	4.8	4.8
Q5311		
E	31.1	31.1
C	31.1	31.1
B	30.4	30.4
Q5312		
E	-13.7	-13.7
C	-13.7	-13.7
B	-12.9	-12.9
Q5318		
E	5.6	5.6
C	5.5	5.5
B	1.0	1.0

4.16 VIDEO BLOCK DIAGRAM

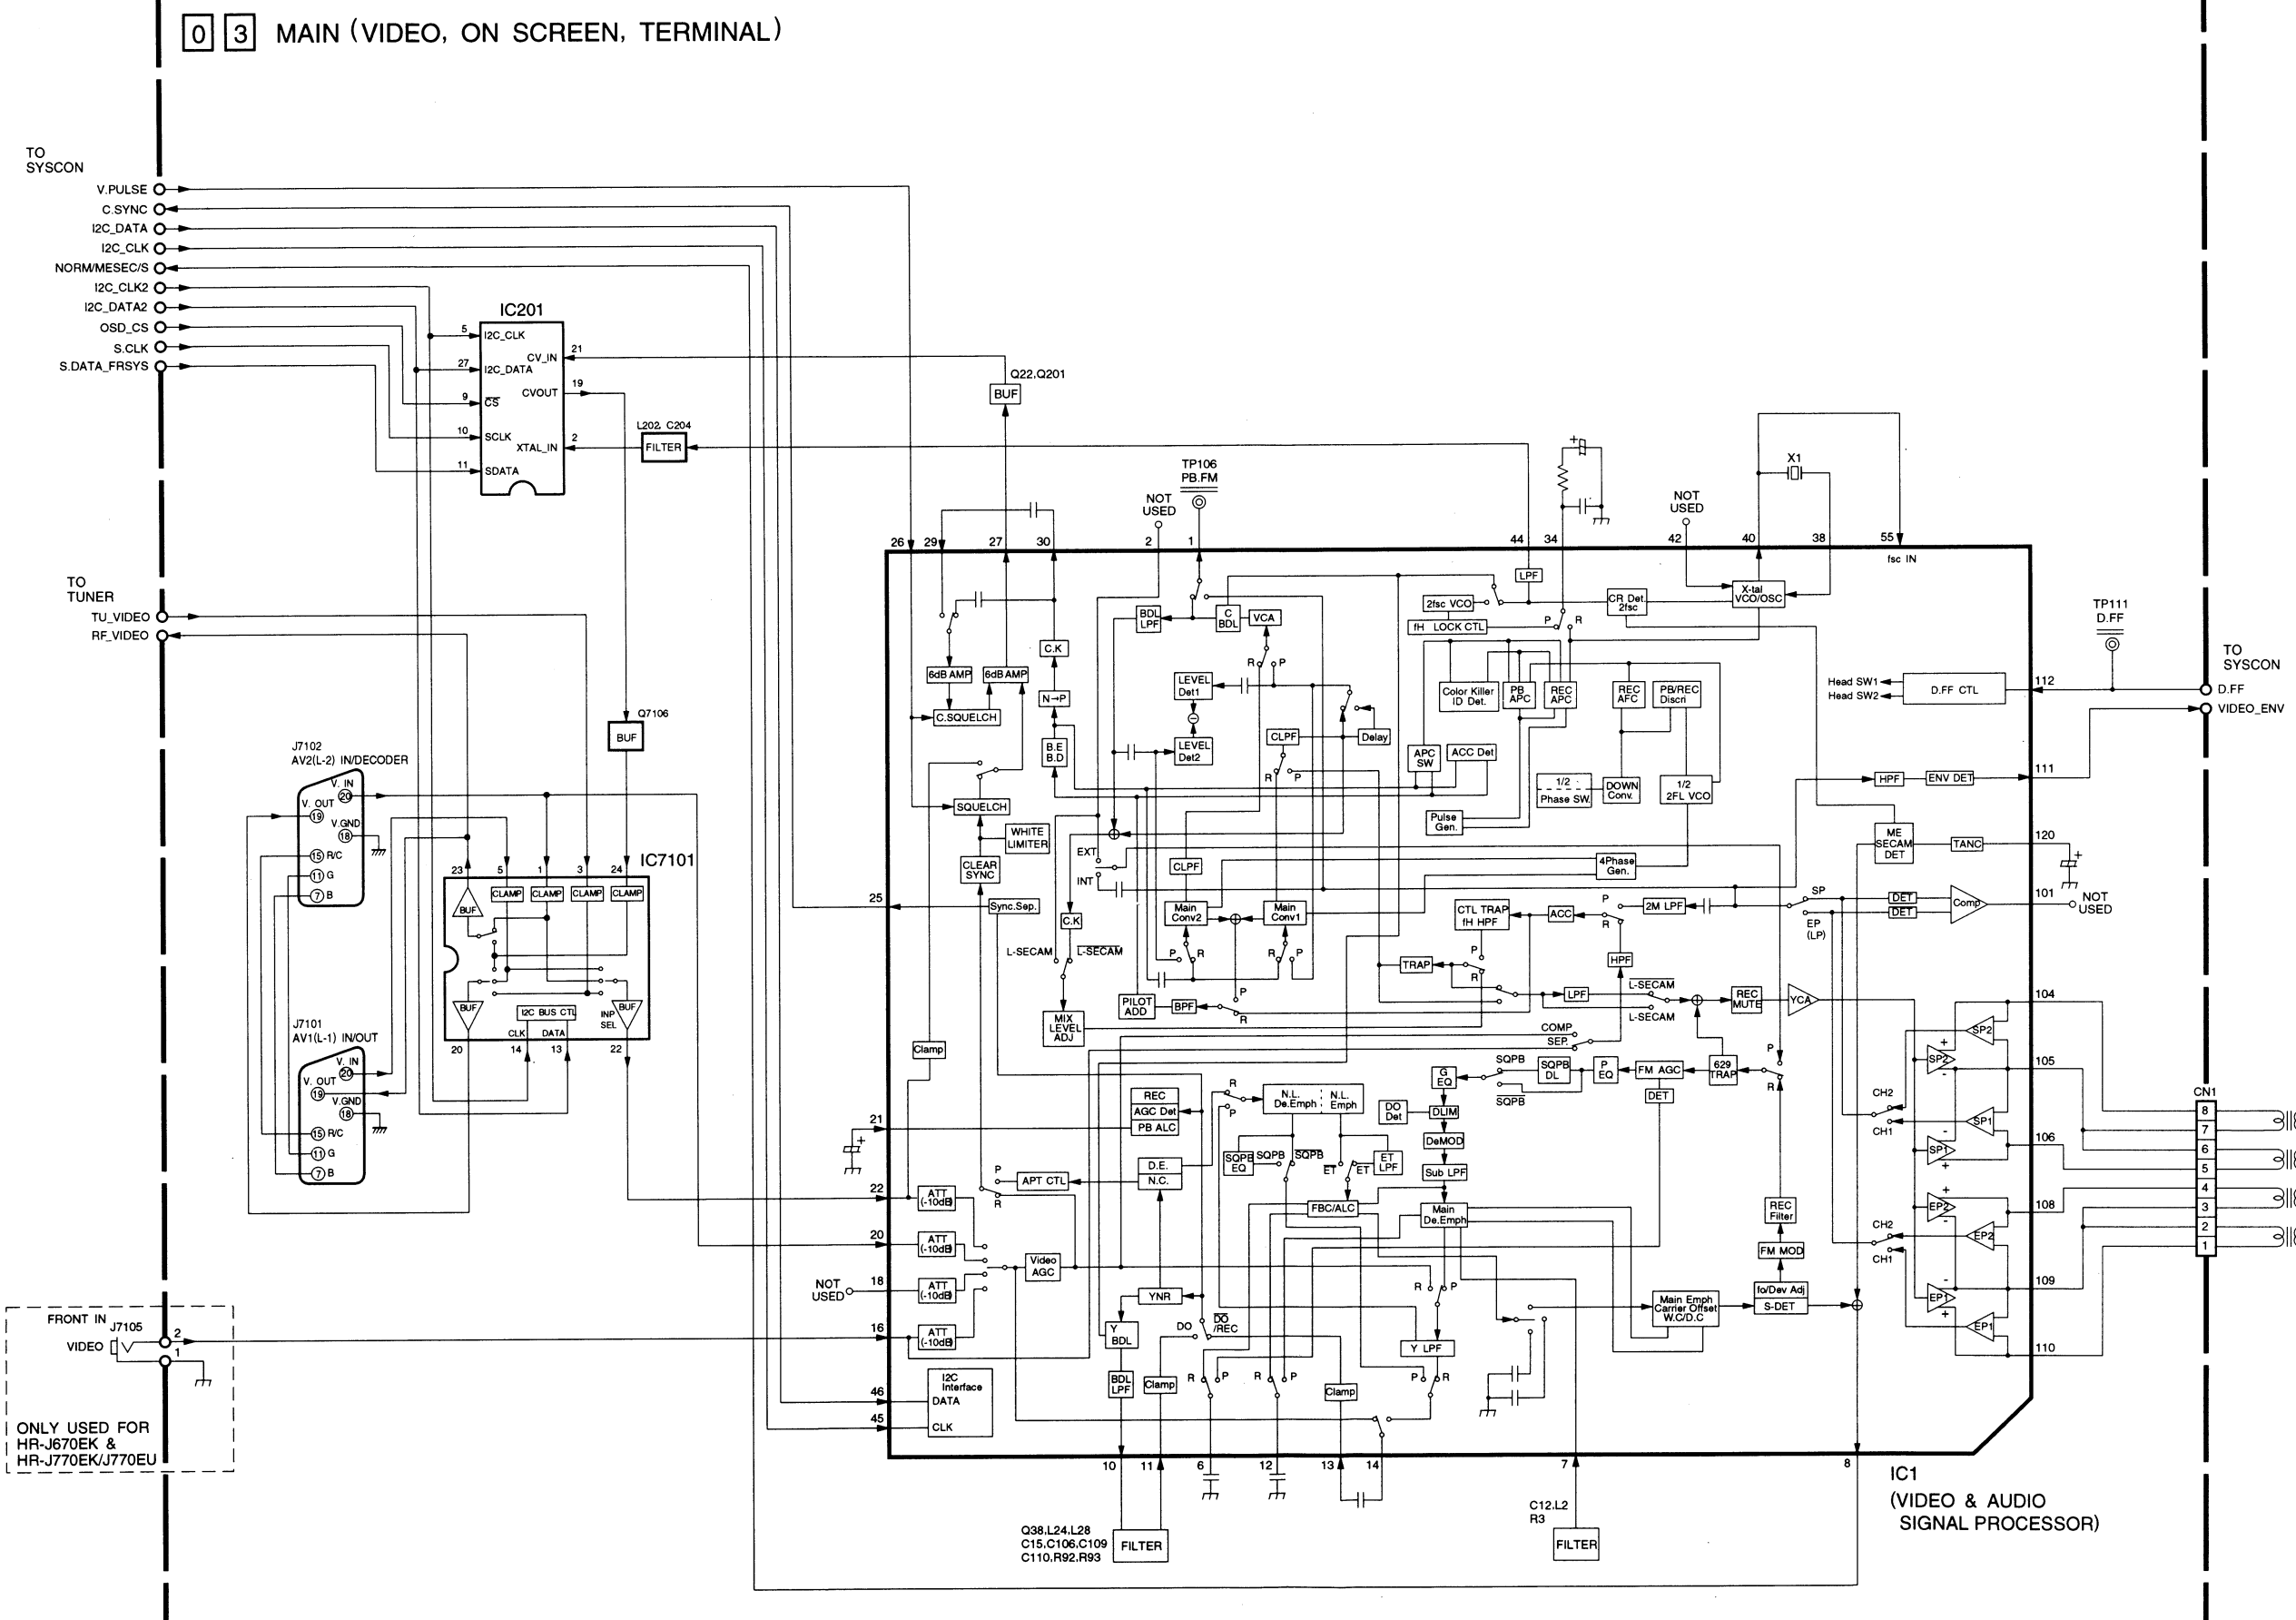

4.17 AUDIO BLOCK DIAGRAM

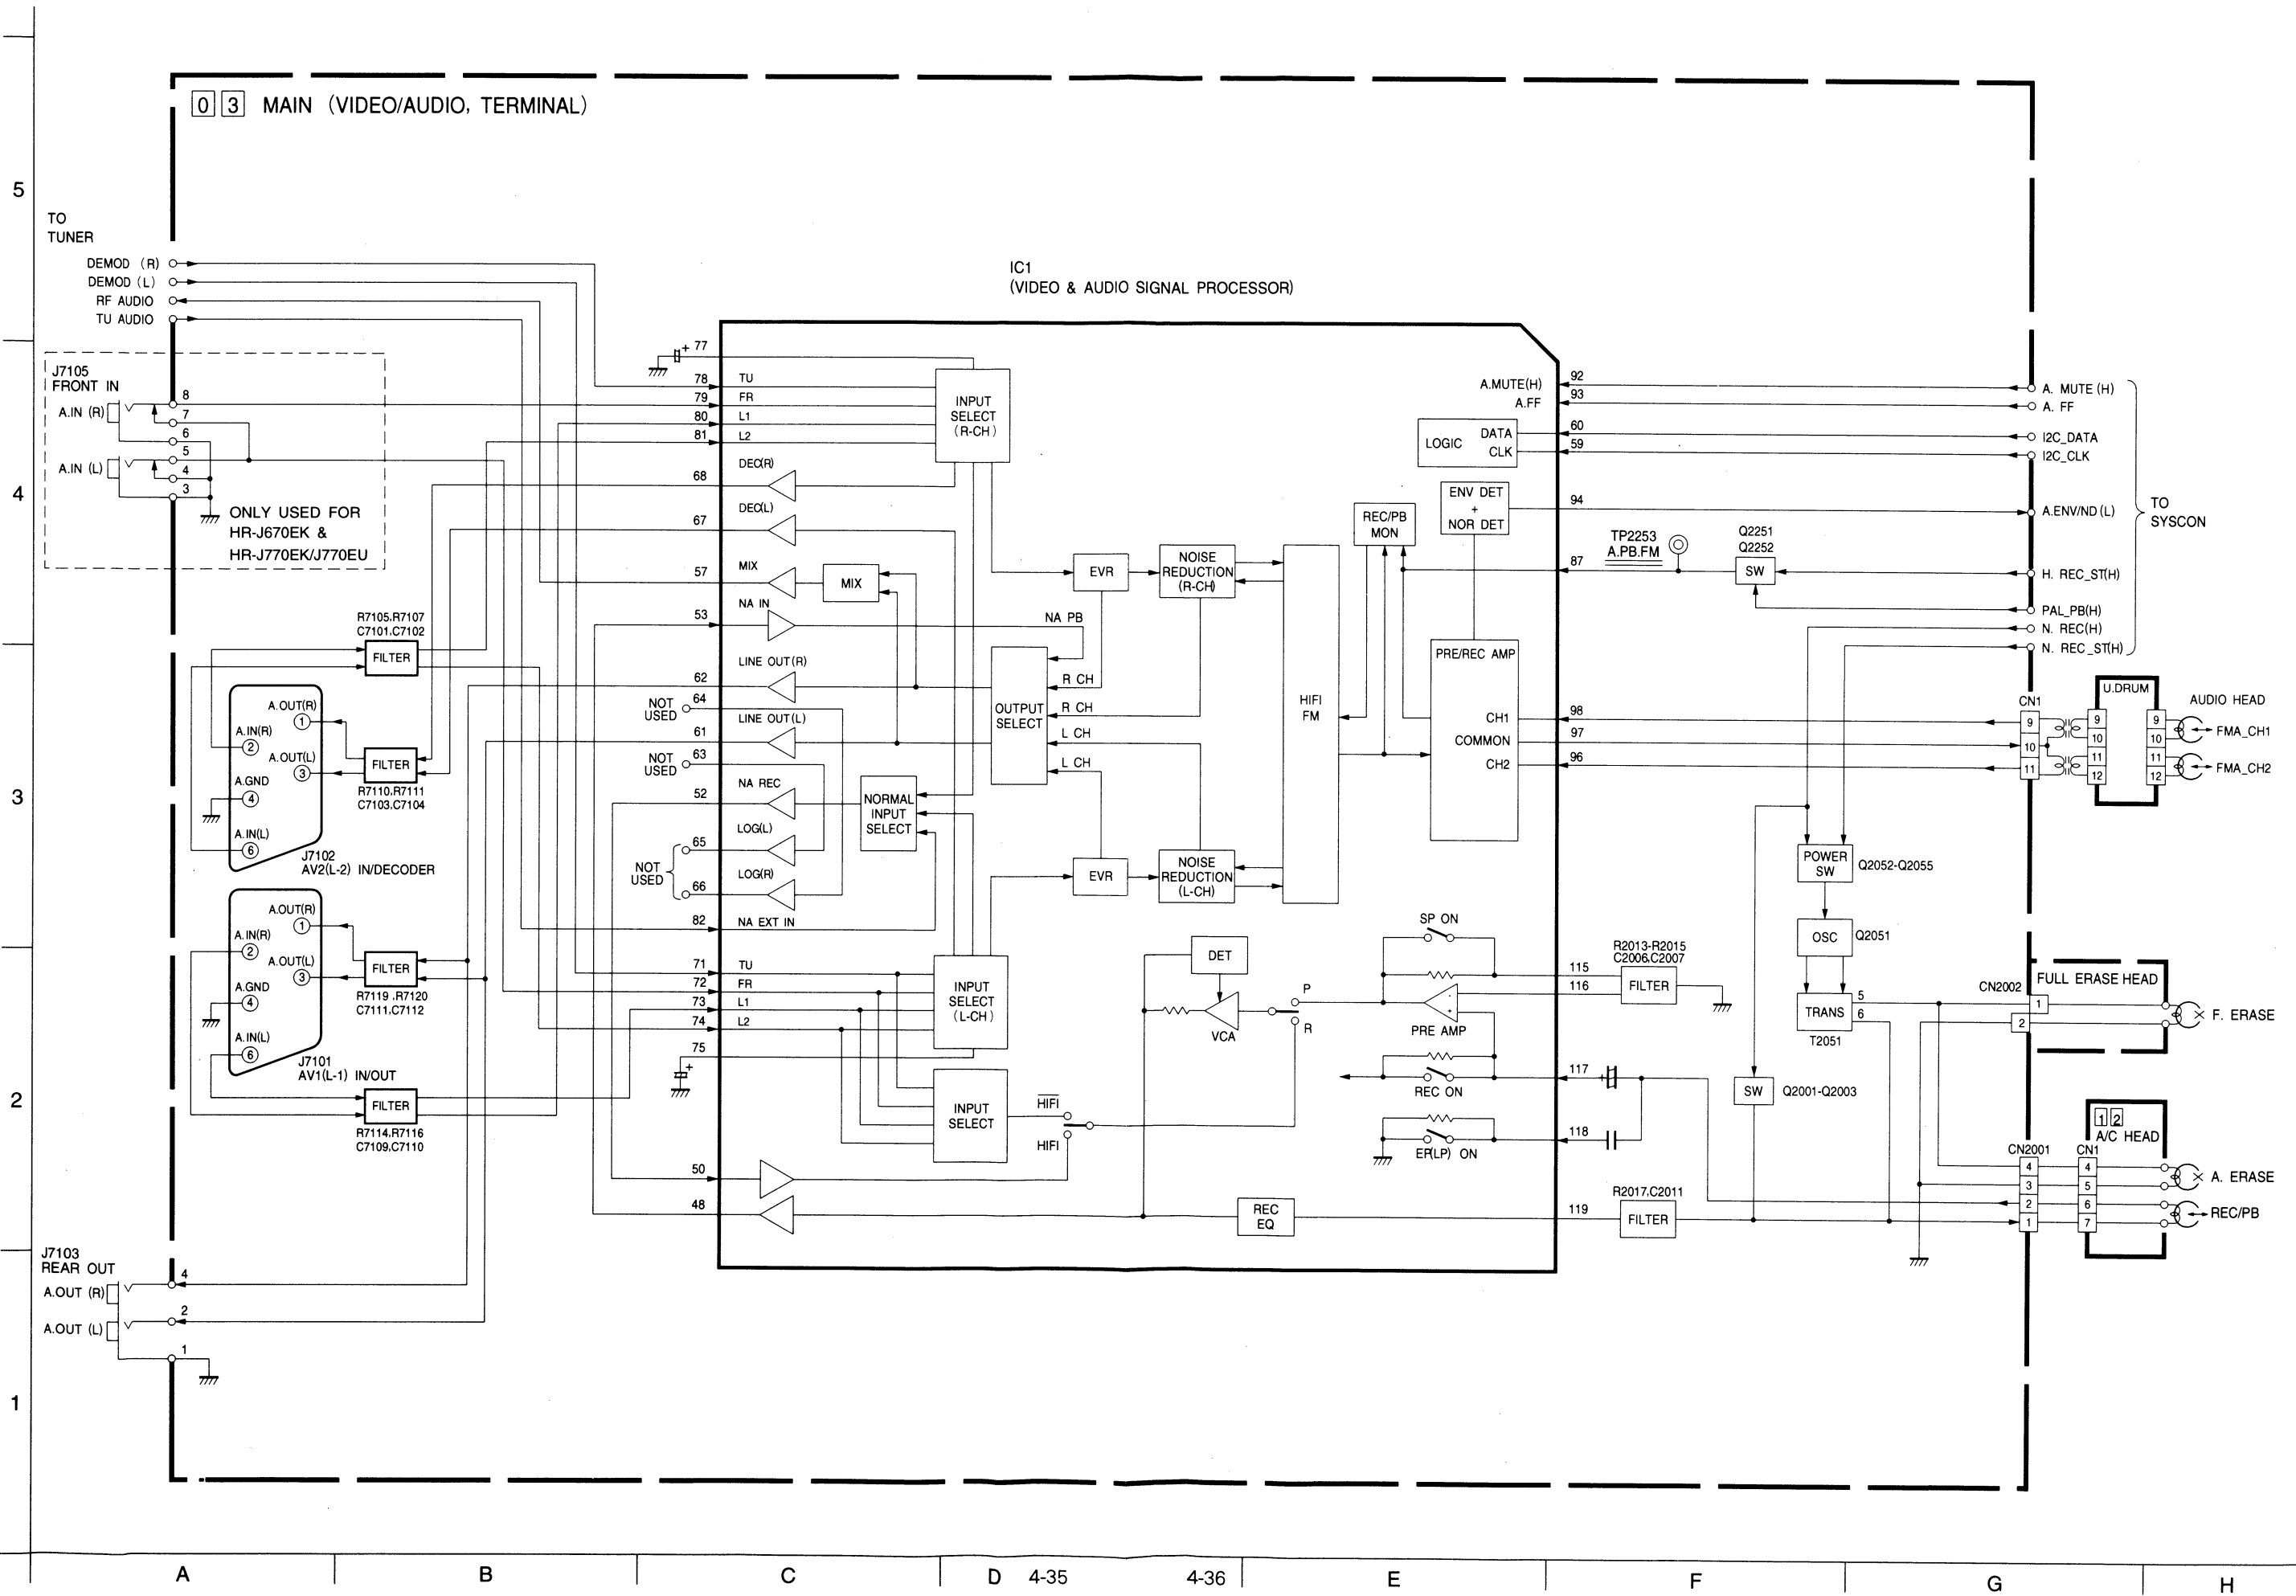


SECTION 5 PARTS LIST

SAFETY PRECAUTION

Parts identified by the $\triangle$ symbol are critical for safety. Replace only with specified part numbers.

5.1 PACKING AND ACCESSORY ASSEMBLY <M1>

The instruction manual to be provided with this product will differ according to the destination.

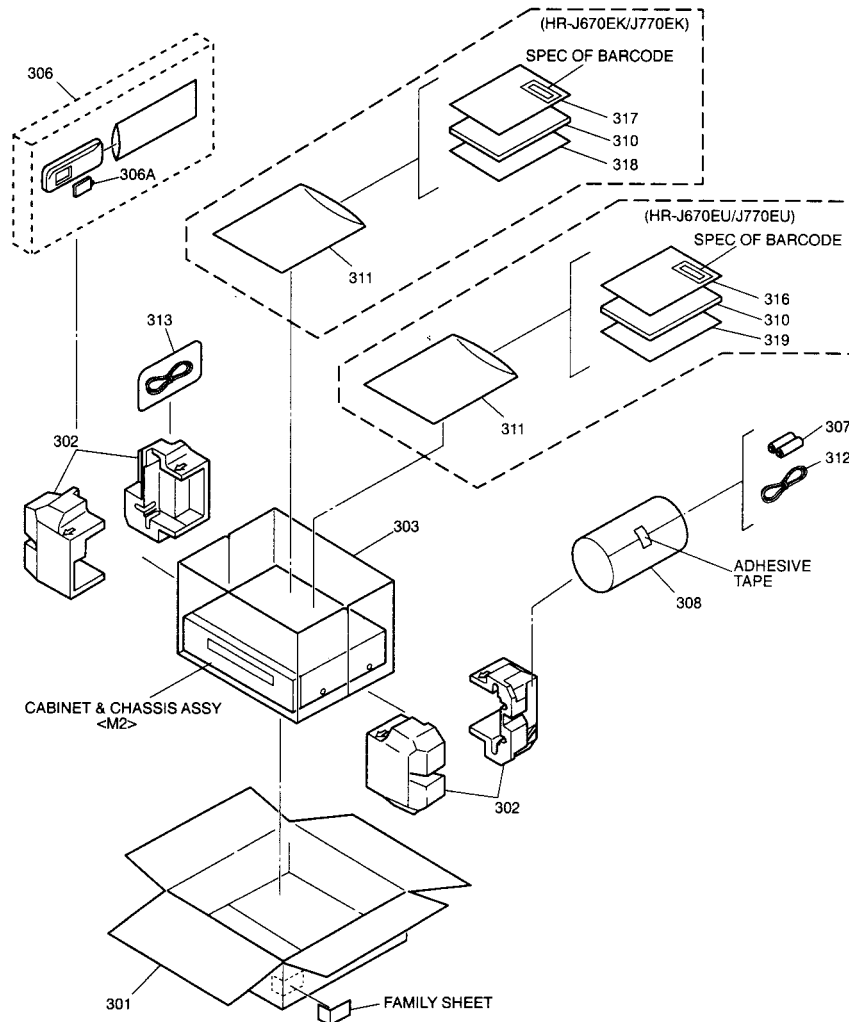

$\triangle$ REF No. PART No. PART NAME, DESCRIPTION

PACKING AND ACCESSORY ASSEMBLY <M1>

	301	LP30665-001A	PACKING CASE
	302	LP30355-001D	CUSHION ASSY
	303	PQM30021-93	POLY BAG
	306	LP20878-002A	REMOTE CONTROLLER
	306A	LP40610-002A	COVER(BATTERY)
	307	-	BATTERY,X2("AA"TYPE)
	308	QPC02202230P	POLY BAG
$\triangle$	310	LPT0314-001A	INST.BOOK(EN),J670EK
$\triangle$		LPT0315-001B	INST.BOOK(EN),J770EK
$\triangle$		LPT0322-001B	INST.BOOK(EN),J670EU
$\triangle$		LPT0322-002B	INST.BOOK(GE),J670EU
$\triangle$		LPT0322-003A	INST.BOOK(FR),J670EU
$\triangle$		LPT0322-004A	INST.BOOK(DU),J670EU
$\triangle$		LPT0322-005A	INST.BOOK(SP),J670EU
$\triangle$		LPT0322-006A	INST.BOOK(IT),J670EU
$\triangle$		LPT0322-007A	INST.BOOK(DA),J670EU
$\triangle$		LPT0322-008A	INST.BOOK(FI),J670EU
$\triangle$		LPT0322-009A	INST.BOOK(SW),J670EU
$\triangle$		LPT0322-010A	INST.BOOK(NO),J670EU
$\triangle$		LPT0322-011A	INST.BOOK(PT),J670EU
$\triangle$		LPT0322-012A	INST.BOOK(GR),J670EU
$\triangle$		LPT0322-013A	INST.BOOK(CZ),J670EU


$\triangle$ REF No. PART No. PART NAME, DESCRIPTION

$\triangle$		LPT0322-014A	INST.BOOK(PO),J670EU
$\triangle$		LPT0322-015A	INST.BOOK(HU),J670EU
$\triangle$		LPT0323-001A	INST.BOOK(EN),J770EU
$\triangle$		LPT0323-002A	INST.BOOK(GE),J770EU
$\triangle$		LPT0323-003A	INST.BOOK(FR),J770EU
$\triangle$		LPT0323-004A	INST.BOOK(DU),J770EU
$\triangle$		LPT0323-005A	INST.BOOK(SP),J770EU
$\triangle$		LPT0323-006A	INST.BOOK(IT),J770EU
$\triangle$		LPT0323-007A	INST.BOOK(DA),J770EU
$\triangle$		LPT0323-008A	INST.BOOK(FI),J770EU
$\triangle$		LPT0323-009A	INST.BOOK(SW),J770EU
$\triangle$		LPT0323-010A	INST.BOOK(NO),J770EU
$\triangle$		LPT0323-011A	INST.BOOK(PT),J770EU
$\triangle$		LPT0323-012A	INST.BOOK(GR),J770EU
$\triangle$		LPT0323-013A	INST.BOOK(CZ),J770EU
$\triangle$		LPT0323-014A	INST.BOOK(PO),J770EU
$\triangle$		LPT0323-015A	INST.BOOK(HU),J770EU
	311	QPC02503530P	POLY BAG
	312	PEAC0300-02	RF CABLE
	313	QAL0095-005	SATELLITE CONTROLLER,J670EK/J770EK/J770EU
	316	BT-54013-1	WARRANTY CARD,J670EU/J770EU
	317	BT-54008-2	GUARANTY CARD,J670EK/J770EK
	318	LP20790-001A	QUESTIONNAIRE CARD,J670EK/J770EK
	319	LP40618-001A	SHEET(SPAIN),J670EU/J770EU

5.2 CABINET AND CHASSIS ASSEMBLY <M2>

BEWARE OF BOGUS PARTS

Parts that do not meet specifications may cause trouble in regard to safety and performance. We recommend that genuine JVC parts be used.

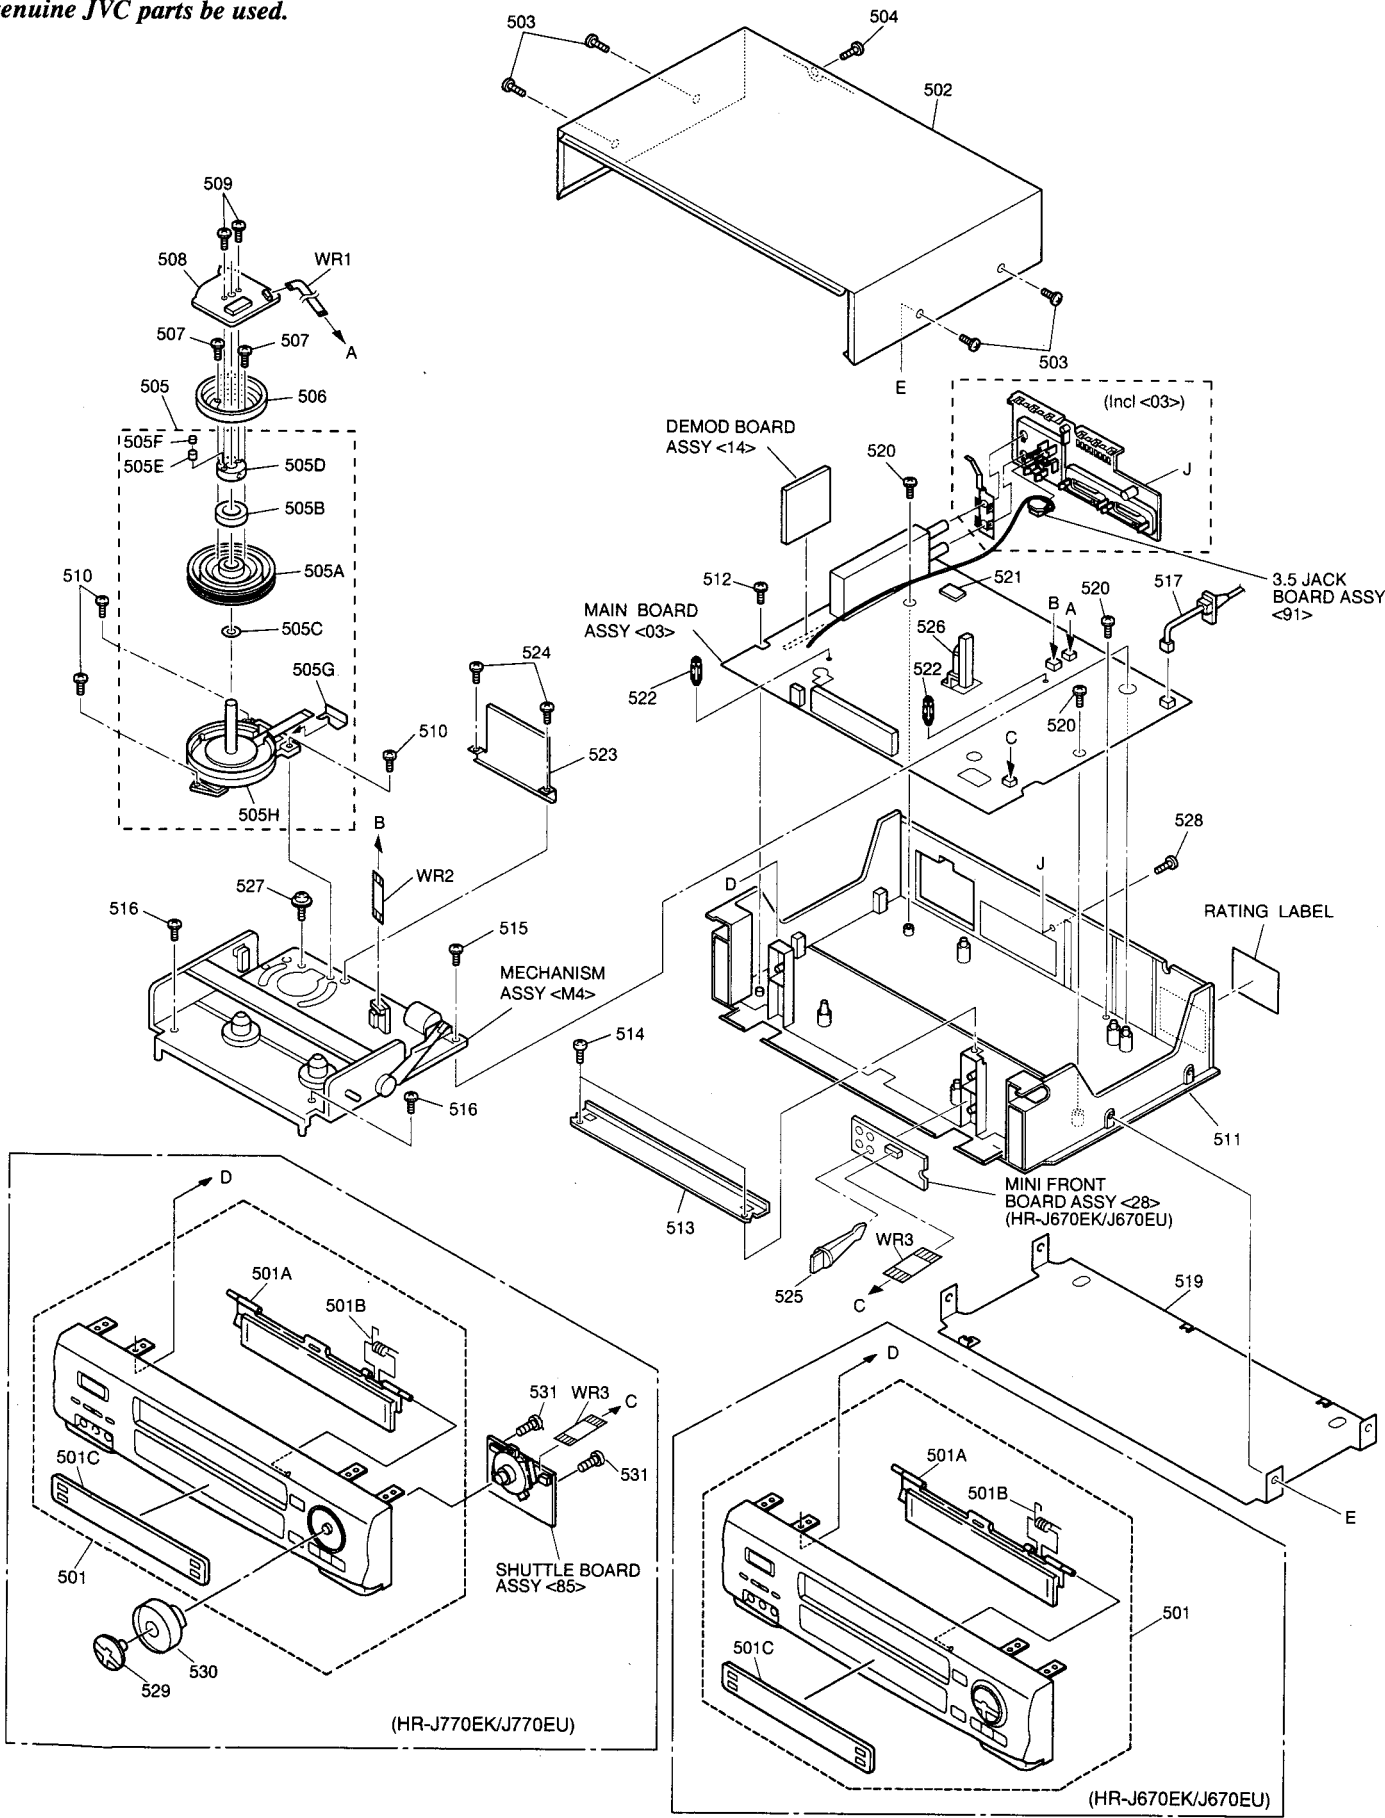


△ REF No. PART No. PART NAME, DESCRIPTION

△ REF No. PART No. PART NAME, DESCRIPTION

CABINET AND CHASSIS ASSEMBLY <M2>

△ 501	LP10289-002B	FRONT PANEL ASSY,J770EK
△	LP10289-003D	FRONT PANEL ASSY,J670EU
△	LP10289-009B	FRONT PANEL ASSY,J670EK
△	LP10289-010B	FRONT PANEL ASSY,J770EU
△	LP10013-017C	TOP COVER
501A	LP20868-002A	CASSETTE DOOR
501B	PQ46448	TORSION SPRING
501C	LP20869-002A	DISPLAY WINDOW,J770EK
	LP20869-003A	DISPLAY WINDOW,J670EU
	LP20869-009A	DISPLAY WINDOW,J670EK
	LP20869-010A	DISPLAY WINDOW,J770EU
△ 502	LP10013-017C	TOP COVER
503	QYTDSF3010M	SCREW,X4 TOP COVER(SIDE)
504	QYTDSF3010M	SCREW,TOP COVER(REAR)
505	LP20617-002A	DRUM SUB ASSY
505A	LP20616-002A	UPPER DRUM ASSY
505B	PDM4439	CAP
505C	PDM4444-19-2	WASHER
505D	LP40572-001A	COLLAR ASSY
505E	LP40323-001A	CONTACT
505F	LP30004-014A	COMPRESSION SPRING
505G	LP40174-001B	FPC PLATE
505H	LP20615-002A	LOWER DRUM ASSY
506	PDZ0179-1-4	ROTOR ASSY
507	QYSPSP3006Z	SCREW,X2
△ 508	QAR0119-001	STATOR ASSY
509	QYSPSPH2606Z	SCREW,X2
510	QYTDST2610Z	SCREW,X3 DRUM
△ 511	LP10108-001D	BOTTOM CHASSIS
512	QYTDSF3010Z	SCREW,MAIN
513	LP30312-001B	BRACKET(CHASSIS
514	QYTDSF3010Z	SCREW,X2
515	QYTDSF4012Z	SCREW,MECHA
516	QYTDSF3010Z	SCREW,X2 MECHA
△ 517	QMP4A10-170J5	POWER CORD,J670EU/J770EU
△	QMP51K0-170-K	POWER CORD,J670EK/J770EK
△ 519	LP10014-002B	BOTTOM COVER
520	DPSF3010Z	SCREW,X3 MAIN
521	LP30002-042A	SPACER,MAIN BOARD
522	LP40226-001A	PC SUPPORT,X2
523	LP30356-002C	DRUM SHIELD
524	QYTDST2606Z	SCREW,X2 DRUM SHIELD
525	LP40628-001A	PC SUPPORT,J670EK/J670EU
526	LP40253-001B	STOPPER
527	PQ40413	SPECIAL SCREW,MECHA
528	QYTDSF3010M	SCREW,TERMINAL
529	LP30651-002A	KNOB(JOG),J770EK/J770EU
530	LP30652-002A	KNOB(SHUTTLE),J770EK/J770EU
531	QYTDSF2608Z	SCREW,X2 JOG,J770EK/J770EU
WR1	QUQ212-0518CG	FFC WIRE,DRUM CN3001
WR2	WJT0005-002A	E-CARD WIRE,A/C HEAD CN2001
WR3	QUQ112-0914CG	FFC WIRE,FRONT CN7003

5.3 MECHANISM ASSEMBLY <M4>

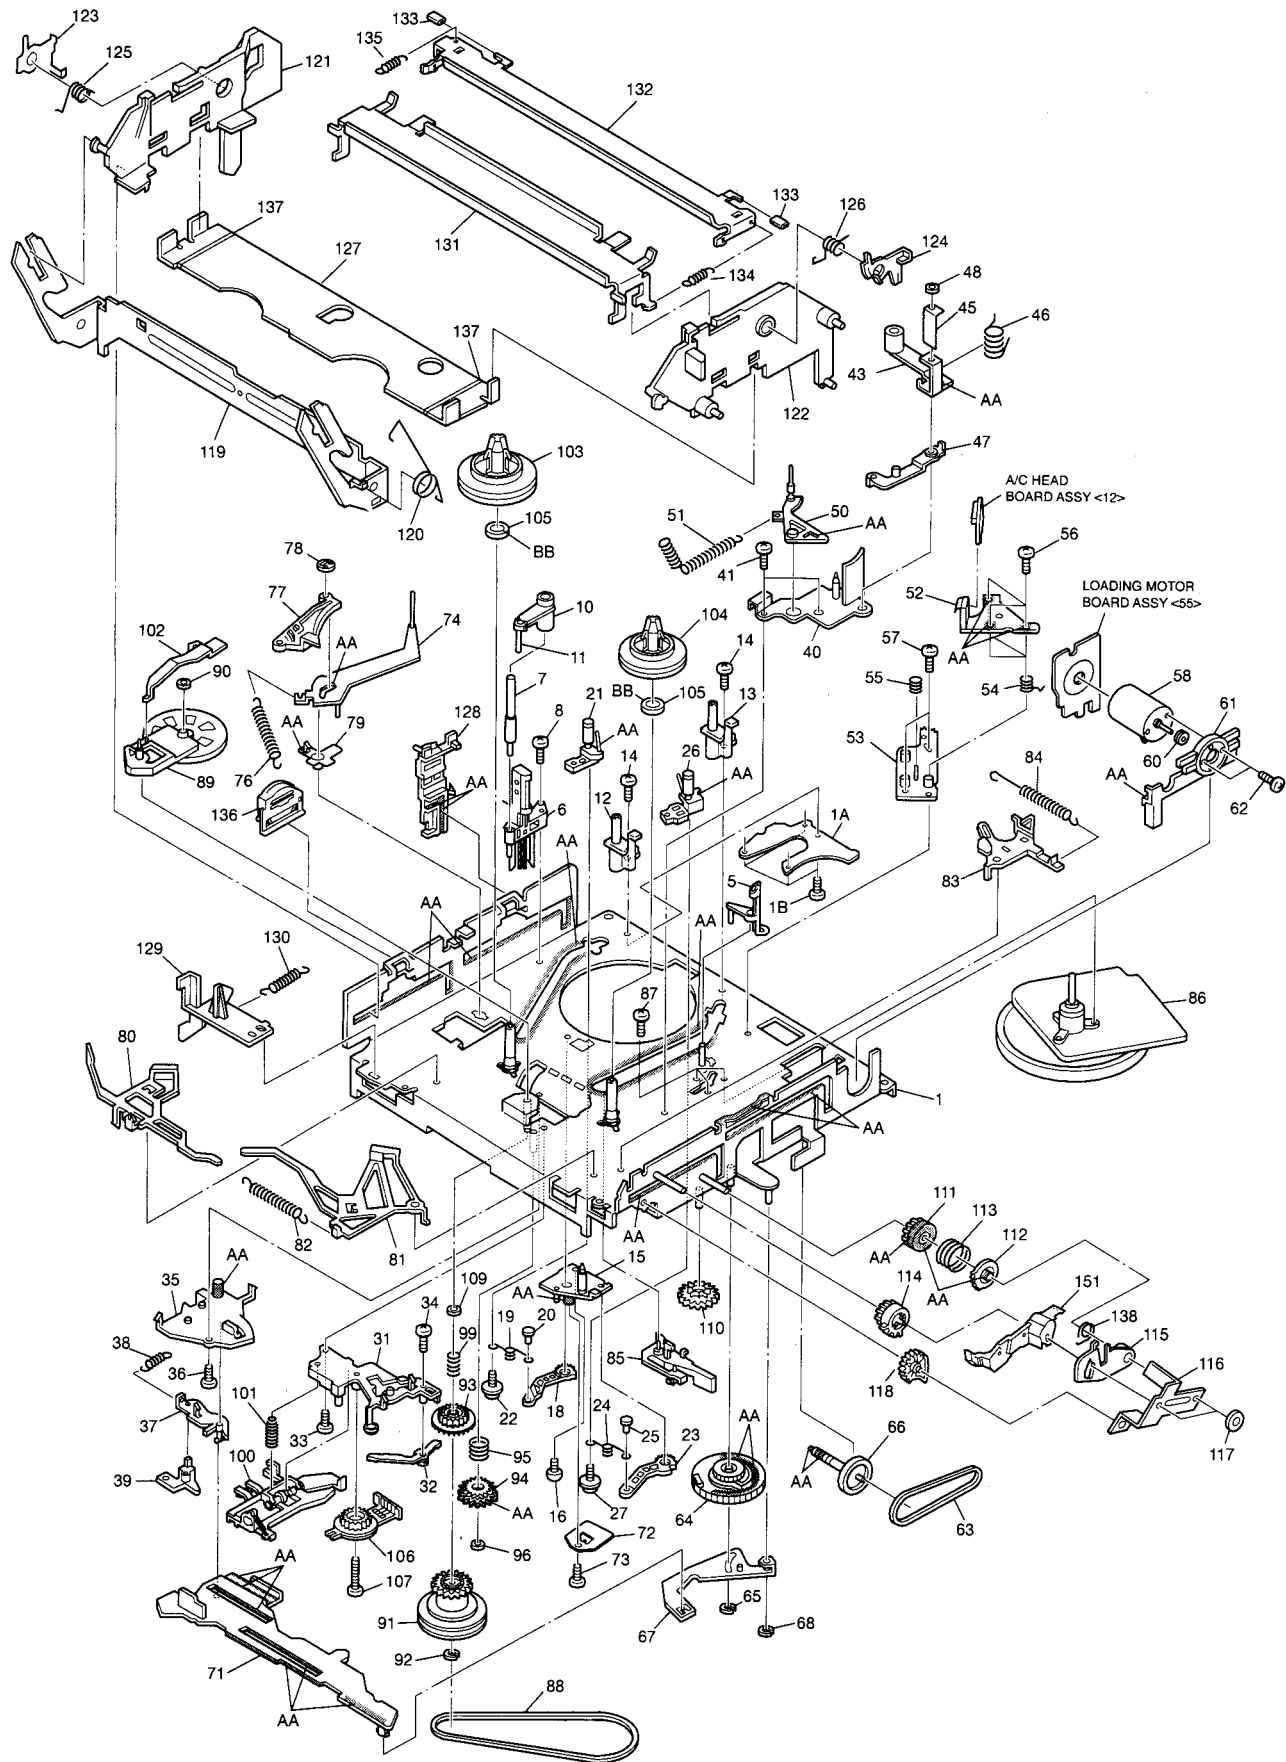

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-P	AA
Oil	COSMO-HV56	BB

NOTE: The section marked in AA and BB indicate lubrication and greasing areas.

△ REF No. PART No. PART NAME, DESCRIPTION

MECHANISM ASSEMBLY <M4>

1	LP20228-008H	MAIN DECK ASSY
1A	LP40275-003A	PLATE(SUPPLY)
1B	QYTDST2606Z	SCREW,X4 PLATE(SUPPLY)
5	LP30492-002B	GUIDE POLE GUARD
6	NAH0001-001	FULL ERASE HEAD
7	LP40098-001B	GUIDE POLE(SUPPLY)
8	QYTDST2608Z	SCREW,FE HEAD
10	LP30459-002A	TENSION STUD BASE
11	LP40367-002A	TENSION STUD
12	LP30409-002C	UV CATCHER 2(SUPPLY)
13	LP30409-002C	UV CATCHER 2(TAKE UP)
14	QYTPST2606Z	SCREW,X2 UV CATCHER
15	LP30223-003C	LOADING ARM GEAR SHAFT
16	QYTDST2606Z	SCREW
18	LP30224-001A	LOADING ARM GEAR(SPLY)
19	LP40099-001A	TORSION ARM
20	LP40100-001A	PIN
21	LP40101-002C	POLE BASE ASSY(SUPPLY)
22	QYSPSTG2606Z	SCREW
23	LP40103-002B	LOADING ARM GEAR(TAKE UP)
24	LP40099-001A	TORSION ARM
25	LP40100-001A	PIN
26	LP40104-003A	POLE BASE ASSY(TAKE UP)
27	QYSPSTG2606Z	SCREW
31	LP20233-004B	ROTARY ENCODER GUIDE
32	LP30499-001C	BRAKE LEVER
33	QYTPST2606Z	SCREW
34	QYTPST2608Z	SCREW
35	LP30226-004C	CONTROL PLATE GUIDE
36	QYTPST2605Z	SCREW
37	LP30249-003B	TAKE UP LEVER
38	LP30003-006A	TENSION SPRING
39	LP40119-002A	T.UP HEAD
40	LP20234-004B	LID GUIDE
41	QYTDST2606Z	SCREW,X2
43	LP40105-001B	PINCH ROLLER ARM ASSY
45	LP40478-001A	PINCH ROLLER SHEET2
46	LP40148-002A	TORSION SPRING
47	LP40149-001C	PRESS LEVER ASSY
48	LP30016-002A	SLIT WASHER
50	LP40106-002E	GUIDE ARM ASSY
51	LP40134-001C	TENSION SPRING
52	QAH0010-004	AC HEAD
53	LP30228-001A	HEAD BASE
54	LP30004-013A	COMPRESSION SPRING,X3
55	LP40236-001A	COMPRESSION SPRING
56	LP40213-002B	SPECIAL SCREW,X3
57	QYTDST2608Z	SCREW,X2
58	QAR0023-001	LOADING MOTOR
60	PQ43546-1-2	MOTOR PULLEY
61	LP30230-003A	MOTOR GUIDE
62	QYTPSP3003Z	SCREW,X2
63	LP30005-003A	BELT,LOADING MOTOR
64	LP20791-002B	CTL.CAM
65	PQM30017-24	SLIT WASHER
66	LP40120-001A	WORM GEAR
67	LP40107-002A	LINK LEVER ASSY
68	PQM30017-24	SLIT WASHER
71	LP10201-003C	CONTROL PLATE
72	LP40379-001B	CONTROL BRACKET(1)

△ REF No. PART No. PART NAME, DESCRIPTION

73	QYTDST2608M	SCREW
74	LP40108-002A	TENSION ARM ASSY
76	LP30003-010A	TENSION SPRING
77	LP40109-003D	TENSION BRAKE ASSY
78	PQ46302-1-3	ADJUST PIN
79	LP30232-002A	T.ARM BEARING
80	LP40532-008A	MAIN BRAKE ASSY (SUPPLY)
81	LP40111-011A	MAIN BRAKE ASSY (TAKE-UP)
82	LP30003-026A	TENSION SPRING
83	LP40112-001F	SUB BRAKE ASSY(TAKE UP)
84	LP40357-002A	TENSION SPRING
85	LP40461-001A	CAPSTAN BRAKE ASSY
86	QAR0087-004	CAPSTAN MOTOR
87	QYTDST2606M	SCREW,X3
88	LP30005-007A	BELT,CAPSTAN MOTOR
89	LP40114-008A	IDLER ARM ASSY
90	LP30016-001A	SLIT WASHER
91	LP40593-001A	CLUTCH UNIT 3
92	PQM30017-47	SLIT WASHER
93	LP40446-002B	CLUTCH GEAR 1
94	LP40442-001A	DIRECT GEAR
95	LP40483-002A	COMPRESSION SPRING
96	LP30016-001A	SLIT WASHER
99	LP40554-001A	COMPRESSION SPRING
100	LP40484-001H	CHANGE LEVER ASSY
101	LP40512-002B	COMPRESSION SPRING
102	LP30236-002B	IDLER LEVER
103	LP40420-001A	REEL DISK (SUPPLY)
104	LP40421-001A	REEL DISK (TAKE-UP)
105	LP30017-015A	SPACER,X2
106	QSW0554-003	ROTARY ENCODER
107	QYTPST2620Z	SCREW,ROTARY ENCODER
109	LP30017-019A	SPACER,C.GEAR 1
110	LP30237-002B	CASSETTE GEAR
111	LP30239-002G	LIMIT GEAR(1)
112	LP30240-002G	LIMIT GEAR(2)
113	LP40136-001E	TORSION SPRING
114	LP30242-002A	RELAY GEAR
115	LP30339-002E	OPENER GUIDE
116	LP40214-001B	C.H.BRACKET
117	PQM30017-47	SLIT WASHER,X2
118	LP30243-001D	DRIVE GEAR
119	LP20240-001D	DRIVE ARM
120	LP40137-001A	TORSION SPRING
121	LP10081-002L	SIDE HOLDER(L)
122	LP10082-002M	SIDE HOLDER(R)
123	LP30255-006A	LOCK LEVER(L)
124	LP30256-001H	LOCK LEVER(R)
125	LP40168-001A	TORSION SPRING(L)
126	LP40218-001B	TORSION SPRING(R)
127	LP30257-001F	CASSETTE HOLDER
128	LP30244-002G	GUIDE RAIL
129	LP30245-002E	REC SAFETY LEVER
130	LP30003-004A	TENSION SPRING
131	LP20578-001C	TOP GUIDE
132	LP30500-001C	HOLD PLATE
133	LP40450-003A	PAD,X2 HOLD PLATE
134	LP30003-025B	TENSION SPRING
135	LP30003-024A	TENSION SPRING
136	LP40481-003A	ROLLER CAM ASSY
137	LP30019-014A	PAD,X2 CASSETTE HOLDER
138	LP40545-001A	TORSION SPRING,OPENER GUIDE
151	LP20324-003A	DOOR OPENER

5.4 ELECTRICAL PARTS LIST

#	△ REF No.	PART No.	PART NAME, DESCRIPTION

MAIN BOARD ASSEMBLY <03>			
PW1		LPA10086-01E1	MAIN BOARD ASSY,J770EK
		LPA10086-02E1	MAIN BOARD ASSY,J670EU
		LPA10086-03E1	MAIN BOARD ASSY,J670EK
		LPA10086-04E1	MAIN BOARD ASSY,J770EU
IC1		JCP8020-MSB	IC
IC201		LC74775-9750	IC
IC3001		HD6432194A24F	IC,J670EU/J770EU
		HD6432194A78F	IC,J670EK/J770EK
IC3002		S-80727AN-DQ-X	IC
		or S-80827ANUP-W	IC
IC3003		AT24C16-10PC	IC
		or 24LC16B/P	IC
IC3004		BA6956AN	IC
IC5301		LA5613	IC
IC6080		BA15218F-XE	IC
IC7001		M35500BGP	IC
		or M35500AGP	IC
IC7002		GP1U291Q	IR DETECT UNIT
		or PNA4652M00YC	IR DETECT UNIT
IC7101		BH7635S	IC
Q1		2SC4081/S/-X	TRANSISTOR
Q2		2SC4081/S/-X	TRANSISTOR
Q3		2SC4081/S/-X	TRANSISTOR
Q4		2SC4081/S/-X	TRANSISTOR
Q22		2SC4081/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
		or 2SD1819A/QRS/-X	TRANSISTOR
Q38		2SC4081/QRS/-X	TRANSISTOR
Q41		DTC144WU	TRANSISTOR,J670EU/J770EU
		or PDTC144WU	TRANSISTOR,J670EU/J770EU
		or RN1309	TRANSISTOR,J670EU/J770EU
		or UN521E	TRANSISTOR,J670EU/J770EU
Q201		2SA1576A/QR/-X	TRANSISTOR
		or 2SB1218A/QR/-X	TRANSISTOR
		or 2PA1576R/-X	TRANSISTOR
Q2001		2SC4081/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
		or 2SD1819A/QRS/-X	TRANSISTOR
Q2002		2SC4081/QRS/-X	TRANSISTOR
		or 2SD1819A/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
Q2003		DTA144WU	TRANSISTOR
		or PDTA144WU	TRANSISTOR
		or RN2309	TRANSISTOR
		or UN511E	TRANSISTOR
Q2051		2SC4081/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
		or 2SD1819A/QRS/-X	TRANSISTOR
Q2052		2SA1576A/QR/-X	TRANSISTOR
		or 2SB1218A/QR/-X	TRANSISTOR
		or 2PA1576R/-X	TRANSISTOR
Q2053		DTC144WU	TRANSISTOR
		or PDTC144WU	TRANSISTOR
		or RN1309	TRANSISTOR
		or UN521E	TRANSISTOR
Q2054		2SA1576A/QR/-X	TRANSISTOR
		or 2SB1218A/QR/-X	TRANSISTOR

#	△ REF No.	PART No.	PART NAME, DESCRIPTION
		or 2PA1576R/-X	TRANSISTOR
Q2055		DTC144WU	TRANSISTOR
		or PDTC144WU	TRANSISTOR
		or RN1309	TRANSISTOR
		or UN521E	TRANSISTOR
Q2251		DTA144WU	TRANSISTOR
		or PDTA144WU	TRANSISTOR
		or RN2309	TRANSISTOR
		or UN511E	TRANSISTOR
Q2252		DTC114EU	TRANSISTOR
		or PDTC114EU	TRANSISTOR
		or RN1302	TRANSISTOR
		or UN5211	TRANSISTOR
Q3001		2SD1819A/QRS/-X	TRANSISTOR
		or 2SC4081/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
Q3002		PTZ-NV16	PHOTO TRANSISTOR
		or PTZ-NV16A	PHOTO TRANSISTOR
Q3003		PTZ-NV16	PHOTO TRANSISTOR
		or PTZ-NV16A	PHOTO TRANSISTOR
Q3004		2SD1819A/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
		or 2SC4081/QRS/-X	TRANSISTOR
Q3005		2SD1819A/QRS/-X	TRANSISTOR
		or 2SC4081/QRS/-X	TRANSISTOR
		or 2PC4081/R/-X	TRANSISTOR
Q3007		UN521E	TRANSISTOR
		or RN1309	TRANSISTOR
		or DTC144WU	TRANSISTOR
		or PDTC144WU	TRANSISTOR
Q4001		UN5211	TRANSISTOR
		or RN1302	TRANSISTOR
		or DTC114EU	TRANSISTOR
		or PDTC114EU	TRANSISTOR
Q5101		2SK2632-CB14	POWER MOS FET
		or 2SK2632	POWER MOS FET
		or 2SK2129	POWER MOS FET
		or 2SK2129-LT	POWER MOS FET
Q5102		2SD2144S/UV/-T	TRANSISTOR
Q5303		2SD2144S/UV/-T	TRANSISTOR
Q5304		2SD1450/ST/-T	TRANSISTOR
		or 2SD1302/ST/-T	TRANSISTOR
Q5305		DTA114EU	TRANSISTOR
		or PDTA114EU	TRANSISTOR
		or RN2302	TRANSISTOR
		or UN5111	TRANSISTOR
Q5306		2SB1239	TRANSISTOR
Q5310		DTC114EU	TRANSISTOR
		or PDTC114EU	TRANSISTOR
		or RN1302	TRANSISTOR
		or UN5211	TRANSISTOR
Q5311		2SA1576A/RS/-X	TRANSISTOR
Q5312		2SD2144S/UV/-T	TRANSISTOR
Q5318		DTA114EU	TRANSISTOR
		or PDTA114EU	TRANSISTOR
		or RN2302	TRANSISTOR
		or UN5111	TRANSISTOR
Q6030		2SB1218A/RS/-X	TRANSISTOR
Q6031		DTC114EU	TRANSISTOR
		or PDTC114EU	TRANSISTOR
		or RN1302	TRANSISTOR

#	△	REF No.	PART No.	PART NAME, DESCRIPTION		#	△	REF No.	PART No.	PART NAME, DESCRIPTION	
			or UN5211	TRANSISTOR					or PG104RS	FR DIODE	
Q6032			DTC114EU	TRANSISTOR					or 1SR153-400-T2	FR DIODE	
			or PDC114EU	TRANSISTOR					or 10ELS2	FR DIODE	
			or UN5211	TRANSISTOR		D5212			RK14LF-B2	BARRIER DIODE	
			or RN1302	TRANSISTOR					or SB240-F26	SB DIODE	
Q7106			2SB1218A/QRS/-X	TRANSISTOR					or 21DQ04	BARRIER DIODE	
			or 2SA1576A/QRS/-X	TRANSISTOR		D5301			MTZJ15A	ZENER DIODE	
			or 2PA1576/R/-X	TRANSISTOR					or RD15ES/B1/-T2	ZENER DIODE	
Q7201			2SC1317/RS/-T	TRANSISTOR		D5302			MTZJ6.8A	ZENER DIODE	
D6			MTZJ5.6C	ZENER DIODE					or RD6.8ES/B1/-T2	ZENER DIODE	
			or RD5.6ES/B3/-T2	ZENER DIODE		D5303			MTZJ27C	ZENER DIODE	
D201			QRE141J-101Y	RESISTOR	100Ω,1/4W				or RD27ES/B3/-T2	ZENER DIODE	
D202			QRE141J-101Y	RESISTOR	100Ω,1/4W	D5304			1SS133	DIODE	
D203			QRE141J-101Y	RESISTOR	100Ω,1/4W				or 1SS270A	DIODE	
D2101			MTZJ8.2C	ZENER DIODE		D5306			MTZJ11C	ZENER DIODE	
D2201			11ES2	DIODE					or RD11ES/B3/-T2	ZENER DIODE	
D3001			LNB2301L01VI	LE DIODE		D5307			1SS133	DIODE	
D3002			1SS133	DIODE					or 1SS270A	DIODE	
D3003			RD39ES/B3/-T2	ZENER DIODE		D5308			1SS133	DIODE	
			or MTZJ39C	ZENER DIODE					or 1SS270A	DIODE	
D3004			11ES2	DIODE		D5309			1SS133	DIODE	
D3005			11ES2	DIODE					or 1SS270A	DIODE	
D3008			1SS133	DIODE		D5310			MTZJ11C	ZENER DIODE	
D4001			1SS133	DIODE					or RD11ES/B3/-T2	ZENER DIODE	
D4002			1SS133	DIODE		D5320			NRSA02J-0R0X	MG RESISTOR	0Ω,1/10W
D5001			S1WB(A)60F4102	BRIDGE DIODE		D6002			HZ30-2L-T2	ZENER DIODE	
			or S1WB(A)60F4072X	BRIDGE DIODE					or HZ30-2LTD	Z DIODE (M)	
			or S1WB(A)60F4062X	BRIDGE DIODE		D7002			RD9.1ES/B2/-T2	ZENER DIODE	
D5101			AU01	FR DIODE					or UZ9.1BSB	ZENER DIODE	
			or ERA18-04-T2	FR DIODE					or MTZJ9.1B	ZENER DIODE	
			or 1SR153-400-T2	FR DIODE		D7004			1SS133	DIODE	
			or 10ELS4	FR DIODE		D7009			SLR-325VC-T	LE DIODE	
			or PG104RS	FR DIODE		D7101			1SS133	DIODE	
D5102			AU01	FR DIODE		D7102			1SS133	DIODE	
			or PG104RS	FR DIODE		D7105			MTZJ12C	ZENER DIODE	
			or 1SR153-400-T2	FR DIODE					or RD12ES/B3/-T2	ZENER DIODE	
			or 10ELS4	FR DIODE		D7106			MTZJ12C	ZENER DIODE	
			or ERA18-04-T2	FR DIODE					or RD12ES/B3/-T2	ZENER DIODE	
D5103			1SS133	DIODE		R1			NRSA02J-682X	MG RESISTOR	6.8kΩ,1/10W
			or 1SS270A	DIODE		R2			NRSA02J-152X	MG RESISTOR	1.5kΩ,1/10W
D5105			1SS133	DIODE		R3			NRSA02J-822X	MG RESISTOR	8.2kΩ,1/10W
			or 1SS270A	DIODE		R5			NRSA02J-221X	MG RESISTOR	220Ω,1/10W
D5201			AU01Z	FR DIODE		R6			NRSA02J-273X	MG RESISTOR	27kΩ,1/10W
			or 10ELS2	FR DIODE		R7			NRSA02J-681X	MG RESISTOR	680Ω,1/10W
D5203			AU01Z	FR DIODE		R9			NRSA02J-101X	MG RESISTOR	100Ω,1/10W
			or ERA18-02-T2	FR DIODE		R12			NRSA02J-101X	MG RESISTOR	100Ω,1/10W
			or PG104RS	FR DIODE		R21			NRSA02J-0R0X	MG RESISTOR	0Ω,1/10W
			or 1SR153-400-T2	FR DIODE		R22			NRSA02J-0R0X	MG RESISTOR	0Ω,1/10W
			or 10ELS2	FR DIODE		R46			NRSA02J-331X	MG RESISTOR	330Ω,1/10W
D5204			AU01Z	FR DIODE		R50			NRSA02J-102X	MG RESISTOR	1kΩ,1/10W
			or ERA18-02-T2	FR DIODE		R77			NRSA02J-103X	MG RESISTOR	10kΩ,1/10W
			or 1SR153-400-T2	FR DIODE		R90			NRSA02J-391X	MG RESISTOR	390Ω,1/10W
			or 10ELS2	FR DIODE		R92			NRSA02J-152X	MG RESISTOR	1.5kΩ,1/10W
			or PG104RS	FR DIODE		R93			NRSA02J-682X	MG RESISTOR	6.8kΩ,1/10W
D5210			AU01Z	FR DIODE		R104			NRSA02J-222X	MG RESISTOR	2.2kΩ,1/10W
			or ERA18-02-T2	FR DIODE		R202			NRSA02J-103X	MG RESISTOR	10kΩ,1/10W
			or PG104RS	FR DIODE		R209			NRSA02J-512X	MG RESISTOR	5.1kΩ,1/10W
			or 1SR153-400-T2	FR DIODE		R210			NRSA02J-182X	MG RESISTOR	1.8kΩ,1/10W
			or 10ELS2	FR DIODE		R211			NRSA02J-562X	MG RESISTOR	5.6kΩ,1/10W
D5211			AU01Z	FR DIODE		R213			NRSA02J-0R0X	MG RESISTOR	0Ω,1/10W
			or ERA18-02-T2	FR DIODE		R216			NRSA02J-103X	MG RESISTOR	10kΩ,1/10W

#	△ REF No.	PART No.	PART NAME, DESCRIPTION	#	△ REF No.	PART No.	PART NAME, DESCRIPTION
R224		NRSA02J-681X	MG RESISTOR 680Ω,1/10W	R3032		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R225		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W	R3034		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2001		NRSA02J-681X	MG RESISTOR 680Ω,1/10W	R3035		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2002		NRSA02J-272X	MG RESISTOR 2.7kΩ,1/10W	R3036		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2003		NRSA02J-101X	MG RESISTOR 100Ω,1/10W	R3037		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2004		NRSA02J-332X	MG RESISTOR 3.3kΩ,1/10W	R3038		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2005		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W	R3039		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2006		NRSA02J-393X	MG RESISTOR 39kΩ,1/10W	R3041		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R2007		NRSA02J-393X	MG RESISTOR 39kΩ,1/10W	R3044		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R2008		QRE141J-123Y	RESISTOR 12kΩ,1/4W	R3046		NRSA02J-0R0X	MG RESISTOR,J770EK/J770EU0Ω,1/10W
R2009		NRSA02J-123X	MG RESISTOR 12kΩ,1/10W	R3047		NRSA02J-0R0X	MG RESISTOR,J770EK/J770EU0Ω,1/10W
R2010		NRSA02J-123X	MG RESISTOR 12kΩ,1/10W	R3049		NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R2012		NRSA02J-153X	MG RESISTOR 15kΩ,1/10W	R3050		NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R2013		NRSA02J-682X	MG RESISTOR 6.8kΩ,1/10W	R3051		NRSA02J-471X	MG RESISTOR 470Ω,1/10W
R2014		NRSA02J-224X	MG RESISTOR 220kΩ,1/10W	R3052		NRSA02J-471X	MG RESISTOR 470Ω,1/10W
R2015		NRSA02J-181X	MG RESISTOR 180Ω,1/10W	R3053		NRSA02J-471X	MG RESISTOR 470Ω,1/10W
R2016		NRSA02J-393X	MG RESISTOR 39kΩ,1/10W	R3054		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2017		NRSA02J-183X	MG RESISTOR 18kΩ,1/10W	R3055		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2018		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3056		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R2019		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3057		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2053		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3058		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2054		NRSA02J-123X	MG RESISTOR 12kΩ,1/10W	R3060		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2055		NRSA02J-3R3X	MG RESISTOR 3.3Ω,1/10W	R3061		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2056		NRSA02J-820X	MG RESISTOR 82Ω,1/10W	R3062		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R2057		NRSA02J-473X	MG RESISTOR 47kΩ,1/10W	R3066		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2058		NRSA02J-183X	MG RESISTOR 18kΩ,1/10W	R3069		NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R2059		NRSA02J-473X	MG RESISTOR 47kΩ,1/10W	R3071		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R2060		NRSA02J-183X	MG RESISTOR 18kΩ,1/10W	R3072		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2201		QRE141J-151Y	RESISTOR 150Ω,1/4W	R3073		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2206		NRSA02J-101X	MG RESISTOR 100Ω,1/10W	R3074		QRE141J-102Y	RESISTOR,J670EU/J770EU 1kΩ,1/4W
R2207		NRSA02J-332X	MG RESISTOR 3.3kΩ,1/10W	R3075		NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R2208		NRSA02J-101X	MG RESISTOR 100Ω,1/10W	R3076		NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R2209		NRSA02J-101X	MG RESISTOR 100Ω,1/10W	R3078		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2210		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R3079		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2211		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R3085		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2213		NRSA02J-393X	MG RESISTOR 39kΩ,1/10W	R3086		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R2215		NRSA02J-153X	MG RESISTOR 15kΩ,1/10W	R3087		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2217		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W	R3104		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R2218		NRSA02J-393X	MG RESISTOR 39kΩ,1/10W	R3201		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R2219		NRSA02J-393X	MG RESISTOR 39kΩ,1/10W	R3202		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R2220		NRSA02J-393X	MG RESISTOR 39kΩ,1/10W	R3203		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R2222		NRSA02J-123X	MG RESISTOR 12kΩ,1/10W	R3204		NRSA02J-222X	MG RESISTOR 2.2kΩ,1/10W
R2223		NRSA02J-123X	MG RESISTOR 12kΩ,1/10W	R3205		NRSA02J-181X	MG RESISTOR 180Ω,1/10W
R2224		NRSA02J-123X	MG RESISTOR 12kΩ,1/10W	R3206		NRSA02J-183X	MG RESISTOR 18kΩ,1/10W
R2225		QRE141J-153Y	RESISTOR 15kΩ,1/4W	R3207		NRSA02J-183X	MG RESISTOR 18kΩ,1/10W
R2226		NRSA02J-123X	MG RESISTOR 12kΩ,1/10W	R3208		QRE141J-181Y	RESISTOR 180Ω,1/4W
R2227		QRE141J-123Y	RESISTOR 12kΩ,1/4W	R3209		QRE141J-273Y	RESISTOR 27kΩ,1/4W
R2228		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W	R3210		NRSA02J-181X	MG RESISTOR 180Ω,1/10W
R2229		NRSA02J-563X	MG RESISTOR 56kΩ,1/10W	R3211		NRSA02J-273X	MG RESISTOR 27kΩ,1/10W
R2251		NRSA02J-102X	MG RESISTOR 1kΩ,1/10W	R3212		QRE141J-474Y	RESISTOR 470kΩ,1/4W
R3013		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3213		NRSA02J-334X	MG RESISTOR 330kΩ,1/10W
R3014		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3214		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R3015		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3215		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R3017		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3216		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R3019		NRSA02J-682X	MG RESISTOR 6.8kΩ,1/10W	R3217		NRSA02J-562X	MG RESISTOR 5.6kΩ,1/10W
R3020		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3218		QRE141J-472Y	RESISTOR 4.7kΩ,1/4W
R3021		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3219		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R3022		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3220		NRSA02J-104X	MG RESISTOR 100kΩ,1/10W
R3029		QRE141J-472Y	RESISTOR 4.7kΩ,1/4W	R3222		NRSA02J-103X	MG RESISTOR 10kΩ,1/10W
R3030		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3223		NRSA02J-152X	MG RESISTOR 1.5kΩ,1/10W
R3031		NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W	R3224		NRSA02J-152X	MG RESISTOR 1.5kΩ,1/10W

# ▲ REF No.	PART No.	PART NAME, DESCRIPTION		# ▲ REF No.	PART No.	PART NAME, DESCRIPTION	
R3225	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W	R6051	NRSA02J-101X	MG RESISTOR	100Ω, 1/10W
R3229	NRSA02J-105X	MG RESISTOR	1MΩ, 1/10W	R6052	NRSA02J-101X	MG RESISTOR	100Ω, 1/10W
R3230	NRSA02J-472X	MG RESISTOR	4.7kΩ, 1/10W	R7001	NRSA02J-471X	MG RESISTOR	470Ω, 1/10W
R3231	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	R7002	NRSA02J-471X	MG RESISTOR	470Ω, 1/10W
R3232	NRSA02J-472X	MG RESISTOR	4.7kΩ, 1/10W	R7003	NRSA02J-471X	MG RESISTOR	470Ω, 1/10W
R3234	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W	R7004	QRE141J-471Y	RESISTOR	470Ω, 1/4W
R3235	NRSA02J-332X	MG RESISTOR	3.3kΩ, 1/10W	R7005	QRE141J-103Y	RESISTOR	10kΩ, 1/4W
R3236	NRSA02J-332X	MG RESISTOR	3.3kΩ, 1/10W	R7006	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W
R3244	NRSA02J-333X	MG RESISTOR, J770EK/J770EU	33kΩ, 1/10W	R7007	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W
R3245	NRSA02J-333X	MG RESISTOR, J770EK/J770EU	33kΩ, 1/10W	R7008	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W
R4001	QRE141J-472Y	RESISTOR	4.7kΩ, 1/4W	R7013	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W
R4003	NRSA02J-561X	MG RESISTOR	560Ω, 1/10W	R7017	QRE141J-103Y	RESISTOR	10kΩ, 1/4W
R4004	NRSA02J-561X	MG RESISTOR	560Ω, 1/10W	R7020	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W
R4005	NRSA02J-562X	MG RESISTOR	5.6kΩ, 1/10W	R7021	NRSA02J-122X	MG RESISTOR	1.2kΩ, 1/10W
R4007	QRE141J-102Y	RESISTOR	1kΩ, 1/4W	R7022	NRSA02J-182X	MG RESISTOR	1.8kΩ, 1/10W
R4008	NRSA02J-0R0X	MG RESISTOR	0Ω, 1/10W	R7023	NRSA02J-222X	MG RESISTOR	2.2kΩ, 1/10W
R4009	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	R7024	NRSA02J-272X	MG RESISTOR	2.7kΩ, 1/10W
R4010	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	R7025	NRSA02J-472X	MG RESISTOR	4.7kΩ, 1/10W
R4011	NRSA02J-472X	MG RESISTOR	4.7kΩ, 1/10W	R7030	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W
R4012	NRSA02J-222X	MG RESISTOR	2.2kΩ, 1/10W	R7031	NRSA02J-122X	MG RESISTOR	1.2kΩ, 1/10W
R4013	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	R7032	NRSA02J-182X	MG RESISTOR	1.8kΩ, 1/10W
R4015	NRSA02J-223X	MG RESISTOR	22kΩ, 1/10W	R7033	NRSA02J-222X	MG RESISTOR	2.2kΩ, 1/10W
R4016	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W	R7034	NRSA02J-0R0X	MG RESISTOR, J670EU/J670EK	0Ω, 1/10W
R4017	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W		NRSA02J-272X	MG RESISTOR, J770EK/J770EU	2.7kΩ, 1/10W
R4018	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	R7035	NRSA02J-472X	MG RESISTOR, J770EK/J770EU	4.7kΩ, 1/10W
R4019	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W	R7036	NRSA02J-682X	MG RESISTOR, J770EK/J770EU	6.8kΩ, 1/10W
R4020	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W	R7037	NRSA02J-563X	MG RESISTOR	56kΩ, 1/10W
R4021	NRSA02J-103X	MG RESISTOR	10kΩ, 1/10W	R7040	NRSA02J-331X	MG RESISTOR	330Ω, 1/10W
R5101	QRE141J-334Y	RESISTOR	330kΩ, 1/4W	R7103	NRSA02J-750X	MG RESISTOR	75Ω, 1/10W
R5102	QRE141J-334Y	RESISTOR	330kΩ, 1/4W	R7105	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W
R5103	QRE141J-683Y	RESISTOR	68kΩ, 1/4W	R7107	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W
R5104	QRG02GJ-683	OMF RESISTOR	68kΩ, 2W	R7108	QRE141J-750Y	RESISTOR	75Ω, 1/4W
R5106	QRT01DJ-R39X	MF RESISTOR	0.39Ω, 1W	R7110	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W
R5107	QRE121J-331Y	RESISTOR	330Ω, 1/2W	R7111	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W
R5108	NRSA02J-182X	MG RESISTOR	1.8kΩ, 1/10W	R7112	NRSA02J-331X	MG RESISTOR	330Ω, 1/10W
R5109	QRE141J-681Y	RESISTOR	680Ω, 1/4W	R7113	NRSA02J-750X	MG RESISTOR	75Ω, 1/10W
R5110	NRSA02J-224X	MG RESISTOR	220kΩ, 1/10W	R7114	NRSA02J-101X	MG RESISTOR	100Ω, 1/10W
R5111	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W	R7116	NRSA02J-101X	MG RESISTOR	100Ω, 1/10W
R5112	NRSA02J-181X	MG RESISTOR	180Ω, 1/10W	R7117	QRE141J-750Y	RESISTOR	75Ω, 1/4W
R5302	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	R7119	NRSA02J-101X	MG RESISTOR	100Ω, 1/10W
R5303	NRSA02J-122X	MG RESISTOR	1.2kΩ, 1/10W	R7120	NRSA02J-101X	MG RESISTOR	100Ω, 1/10W
▲ R5304	QRZ9005-221X	FUSI RESISTOR	220Ω, 1/4W	R7122	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W
R5305	NRSA02J-471X	MG RESISTOR	470Ω, 1/10W	R7124	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W
R5306	NRSA02J-333X	MG RESISTOR	33kΩ, 1/10W	R7131	NRSA02J-331X	MG RESISTOR	330Ω, 1/10W
R5307	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	R7133	QRE141J-471Y	RESISTOR	470Ω, 1/4W
R5310	NRSA02J-472X	MG RESISTOR	4.7kΩ, 1/10W	R7134	NRSA02J-471X	MG RESISTOR	470Ω, 1/10W
R5311	NRSA02J-222X	MG RESISTOR	2.2kΩ, 1/10W	R7135	QRE141J-221Y	RESISTOR	220Ω, 1/4W
R5313	QRE141J-222Y	RESISTOR	2.2kΩ, 1/4W	R7160	NRSA02J-331X	MG RESISTOR, J670EK/J770EU	330Ω, 1/10W
R5314	QRE141J-102Y	RESISTOR	1kΩ, 1/4W	R7161	NRSA02J-101X	MG RESISTOR, J670EK/J770EU	100Ω, 1/10W
R5317	NRSA02J-273X	MG RESISTOR	27kΩ, 1/10W	R7162	NRSA02J-331X	MG RESISTOR, J670EK/J770EU	330Ω, 1/10W
R5318	NRSA02J-273X	MG RESISTOR	27kΩ, 1/10W	R7163	NRSA02J-750X	MG RESISTOR, J670EU/J770EU	75Ω, 1/10W
R5319	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W	R7167	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W
R5321	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W	R7171	QRE141J-0R0	RESISTOR	0Ω, 1/4W
R5322	NRSA02J-473X	MG RESISTOR	47kΩ, 1/10W	R7202	NRSA02J-221X	MG RESISTOR	220Ω, 1/10W
R5323	NRSA02J-473X	MG RESISTOR	47kΩ, 1/10W	R7203	NRSA02J-472X	MG RESISTOR	4.7kΩ, 1/10W
R5327	NRSA02J-303X	MG RESISTOR	30kΩ, 1/10W	R7204	QRE123J-100X	RESISTOR	10Ω, 1/2W
R6030	NRSA02J-102X	MG RESISTOR	1kΩ, 1/10W	C1	NCB21HK-103X	CAPACITOR	0.01μF, 50V
R6031	NRSA02J-271X	MG RESISTOR	270Ω, 1/10W	C2	NCB21HK-103X	CAPACITOR	0.01μF, 50V
R6032	NRSA02J-332X	MG RESISTOR	3.3kΩ, 1/10W	C3	NCB21HK-103X	CAPACITOR	0.01μF, 50V
R6033	NRSA02J-182X	MG RESISTOR	1.8kΩ, 1/10W	C4	NCB21HK-103X	CAPACITOR	0.01μF, 50V
R6050	QRE141J-101Y	RESISTOR	100Ω, 1/4W	C5	QEKJ0JM-227	E CAPACITOR	220μF, 6.3V

#	△ REF No.	PART No.	PART NAME, DESCRIPTION	#	△ REF No.	PART No.	PART NAME, DESCRIPTION
C6		NCB21EK-104X	CAPACITOR 0.1μF,25V	C226		QERF0JM-107	E CAPACITOR 100μF,6.3V
C8		NCB21HK-473X	CAPACITOR 0.047μF,50V	C2001		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C10		NDC21HJ-151X	CAPACITOR 150pF,50V	C2002		QEKJ1CM-106	E CAPACITOR 10μF,16V
C11		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2003		QEKJ1CM-476	E CAPACITOR 47μF,16V
C12		NDC21HJ-470X	CAPACITOR 47pF,50V	C2005		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C14		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2006		NCB21HK-123X	CAPACITOR 0.012μF,50V
C15		NCB21HK-103X	CAPACITOR 0.01μF,50V	C2007		QEKJ1CM-226	E CAPACITOR 22μF,16V
C16		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2008		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C17		QEKJ1HM-335	E CAPACITOR 3.3μF,50V	C2009		NCB21HK-102X	CAPACITOR 0.001μF,50V
C19		QEKJ1HM-225	E CAPACITOR 2.2μF,50V	C2010		NCB21HK-152X	CAPACITOR 0.0015μF,50V
C20		QEQF1HM-105	NP E CAPACITOR 1μF,50V	C2011		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C21		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2012		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C22		QEKJ0JM-107	E CAPACITOR 100μF,6.3V	C2013		NCB21HK-331X	CAPACITOR 330pF,50V
C23		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2051		NCB21HK-331X	CAPACITOR 330pF,50V
C24		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2052		QFLC1HJ-823Z	F CAPACITOR 0.082μF,50V
C25		NDC21HJ-6R0X	CAPACITOR 6pF,50V	C2053		NCB21HK-472X	CAPACITOR 0.0047μF,50V
C27		NCB21HK-223X	CAPACITOR 0.022μF,50V	C2054		NCB21HK-223X	CAPACITOR 0.022μF,50V
C28		QEKJ1HM-335	E CAPACITOR 3.3μF,50V	C2055		QEKJ1CM-106	E CAPACITOR 10μF,16V
C29		NCB21EK-333X	CAPACITOR 0.033μF,25V	C2201		NCB21CK-104X	CAPACITOR 0.1μF,16V
C30		QEKJ1HM-474	E CAPACITOR 0.47μF,50V	C2202		NCB21EK-333X	CAPACITOR 0.033μF,25V
C31		QEKJ0JM-476	E CAPACITOR 47μF,6.3V	C2203		QEKJ1CM-106	E CAPACITOR 10μF,16V
C32		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2204		NCB21HK-102X	CAPACITOR 0.001μF,50V
C33		QEKJ1HM-225	E CAPACITOR 2.2μF,50V	C2205		QEKJ1HM-105	E CAPACITOR 1μF,50V
C34		NCB21EK-224X	CAPACITOR 0.22μF,25V	C2206		QEKJ1CM-106	E CAPACITOR 10μF,16V
C35		QDYB1CM-103Y	CAPACITOR 0.01μF,16V	C2207		QEKJ1CM-476	E CAPACITOR 47μF,16V
C36		QERF1EM-475	E CAPACITOR 4.7μF,25V	C2208		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C37		QEKJ1HM-105	E CAPACITOR 1μF,50V	C2213		QEKJ1CM-106	E CAPACITOR 10μF,16V
C38		QEKJ0JM-476	E CAPACITOR 47μF,6.3V	C2214		QEKJ1CM-106	E CAPACITOR 10μF,16V
C39		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2215		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C40		QEKJ1CM-106	E CAPACITOR 10μF,16V	C2216		QEKJ1HM-474	E CAPACITOR 0.47μF,50V
C43		NCB21HK-332X	CAPACITOR 0.0033μF,50V	C2217		QEKJ1CM-106	E CAPACITOR 10μF,16V
C51		QEKJ1HM-105	E CAPACITOR,J670EK/J770EU 1μF,50V	C2218		QEKJ1HM-474	E CAPACITOR 0.47μF,50V
C53		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W	C2219		QEKJ1CM-106	E CAPACITOR 10μF,16V
C62		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2220		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C64		NDC21HJ-220X	CAPACITOR 22pF,50V	C2221		NCB21HK-103X	CAPACITOR 0.01μF,50V
C65		QEKJ1HM-105	E CAPACITOR 1μF,50V	C2222		QEKJ1HM-474	E CAPACITOR 0.47μF,50V
C69		NCB21HK-103X	CAPACITOR 0.01μF,50V	C2223		QEKJ1HM-474	E CAPACITOR 0.47μF,50V
C70		NCB21HK-103X	CAPACITOR 0.01μF,50V	C2224		NCB21HK-103X	CAPACITOR 0.01μF,50V
C81		NCB21HK-103X	CAPACITOR 0.01μF,50V	C2225		QEKJ1EM-475	E CAPACITOR 4.7μF,25V
C92		NDC21HJ-330X	CAPACITOR 33pF,50V	C2226		QEKJ1CM-106	E CAPACITOR 10μF,16V
C94		NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W	C2227		NCB21CK-104X	CAPACITOR 0.1μF,16V
C97		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2228		NCB21CK-104X	CAPACITOR 0.1μF,16V
C99		NCB21EK-104X	CAPACITOR 0.1μF,25V	C2229		NCB21HK-331X	CAPACITOR 330pF,50V
C106		NCB21HK-821X	CAPACITOR 820pF,50V	C2230		NCB21HK-331X	CAPACITOR 330pF,50V
C108		NDC21HJ-680X	CAPACITOR 68pF,50V	C2251		QEKJ1CM-476	E CAPACITOR 47μF,16V
C109		NCB21CK-224X	CAPACITOR 0.22μF,16V	C2252		QCB1HK-103	CAPACITOR 0.01μF,50V
C110		NDC21HJ-820X	CAPACITOR 82pF,50V	C2253		NCB21CK-104X	CAPACITOR 0.1μF,16V
C114		NDC21HJ-181X	CAPACITOR,J670EU/J770EU 180pF,50V	C2254		NCB21CK-104X	CAPACITOR 0.1μF,16V
C204		NDC21HJ-100X	CAPACITOR 10pF,50V	C2255		NDC21HJ-181X	CAPACITOR 180pF,50V
C206		NDC21HJ-330X	CAPACITOR 33pF,50V	C3001		NCB21EK-104X	CAPACITOR 0.1μF,25V
C207		NDC21HJ-330X	CAPACITOR 33pF,50V	C3002		NCB21HK-103X	CAPACITOR 0.01μF,50V
C209		NCB21CK-474X	CAPACITOR 0.47μF,16V	C3003		QEKJ1HM-106	E CAPACITOR 10μF,50V
C212		NCB21EK-104X	CAPACITOR 0.1μF,25V	C3004		NCB21CK-473X	CAPACITOR 0.047μF,16V
C213		QEKJ1EM-475	E CAPACITOR 4.7μF,25V	C3011		QETL0JM-338	E CAPACITOR 3300μF,6.3V
C214		NCB21CK-224X	CAPACITOR 0.22μF,16V	C3012		QEKJ0JM-476	E CAPACITOR 47μF,6.3V
C215		NCB21CK-224X	CAPACITOR 0.22μF,16V	C3013		NCB21HK-103X	CAPACITOR 0.01μF,50V
C216		QERF0JM-107	E CAPACITOR 100μF,6.3V	C3014		QERF0JM-476	E CAPACITOR 47μF,6.3V
C217		NDC21HJ-560X	CAPACITOR 56pF,50V	C3016		NCB21CK-473X	CAPACITOR 0.047μF,16V
C218		NCB21AK-105X	CAPACITOR 1μF,10V	C3022		NCB21CK-473X	CAPACITOR 0.047μF,16V
C222		QERF1HM-105	E CAPACITOR 1μF,50V	C3024		NDC21HJ-120X	CAPACITOR 12pF,50V
C225		QERF0JM-107	E CAPACITOR 100μF,6.3V	C3025		QAT7001-300Z	T.CAPACITOR,J670EU/J770EU,TIMER CLOCK

#	△	REF No.	PART No.	PART NAME, DESCRIPTION		#	△	REF No.	PART No.	PART NAME, DESCRIPTION		
			C3026	NCB21HK-103X	CAPACITOR	0.01μF,50V			C7001	QDGB1HK-102Y	CAPACITOR	0.001μF,50V
			C3027	QEKJ1CM-106	E CAPACITOR	10μF,16V			C7007	QEKJ0JM-476	E CAPACITOR	47μF,6.3V
			C3030	QEKJ0JM-476	E CAPACITOR	47μF,6.3V			C7008	NCB21EK-223X	CAPACITOR	0.022μF,25V
			C3031	NCB21CK-473X	CAPACITOR	0.047μF,16V			C7009	NDC21HJ-220X	CAPACITOR	22pF,50V
			C3032	NCB21CK-473X	CAPACITOR	0.047μF,16V			C7010	NCB21EK-104X	CAPACITOR	0.1μF,25V
			C3033	NCB21CK-473X	CAPACITOR	0.047μF,16V			C7011	QEKJ0JM-476	E CAPACITOR	47μF,6.3V
			C3036	NDC21HJ-180X	CAPACITOR	18pF,50V			C7013	NCB21HK-103X	CAPACITOR	0.01μF,50V
			C3037	NDC21HJ-120X	CAPACITOR	12pF,50V			C7014	NCB21HK-103X	CAPACITOR	0.01μF,50V
			C3040	NCB21CK-473X	CAPACITOR	0.047μF,16V			C7101	NCB21HK-681X	CAPACITOR	680pF,50V
			C3041	NDC21HJ-100X	CAPACITOR,J670EK/J770EK	10pF,50V			C7102	NCB21HK-681X	CAPACITOR	680pF,50V
			C3045	NDC21HJ-101X	CAPACITOR	100pF,50V			C7103	NCB21HK-681X	CAPACITOR	680pF,50V
			C4001	QERF0JM-476	E CAPACITOR	47μF,6.3V			C7104	NCB21HK-681X	CAPACITOR	680pF,50V
			C4002	QDYB1CM-103Y	CAPACITOR	0.01μF,16V			C7109	NCB21HK-681X	CAPACITOR	680pF,50V
			C4003	NCB21HK-102X	CAPACITOR	0.001μF,50V			C7110	NCB21HK-681X	CAPACITOR	680pF,50V
			C4004	QERF1CM-226	E CAPACITOR	22μF,16V			C7111	NCB21HK-681X	CAPACITOR	680pF,50V
			C4005	NCB21HK-222X	CAPACITOR	0.0022μF,50V			C7112	NCB21HK-681X	CAPACITOR	680pF,50V
			C4006	QEKJ0JM-476	E CAPACITOR	47μF,6.3V			C7119	NCB21HK-681X	CAPACITOR	680pF,50V
			C4008	QEZF1HM-105	NP E CAPACITOR	1μF,50V			C7120	NCB21HK-681X	CAPACITOR	680pF,50V
			C4009	NCB21HK-563X	CAPACITOR	0.056μF,50V			C7130	NDC21HJ-330X	CAPACITOR	33pF,50V
			C4010	NCB21EK-223X	CAPACITOR	0.022μF,25V			C7131	NCB21HK-223X	CAPACITOR	0.022μF,50V
			C4011	NCB21CK-104X	CAPACITOR	0.1μF,16V			C7132	QETJ1CM-107	E CAPACITOR	100μF,16V
			C4012	QEKJ1HM-224	E CAPACITOR	0.22μF,50V			C7133	NCB21HK-103X	CAPACITOR	0.01μF,50V
			C4013	NCB21HK-563X	CAPACITOR	0.056μF,50V			C7134	NCB21HK-223X	CAPACITOR	0.022μF,50V
			C4014	NDC21HJ-101X	CAPACITOR	100pF,50V			C7135	NCB21HK-223X	CAPACITOR	0.022μF,50V
			C4015	NCB21HJ-102X	CAPACITOR	0.001μF,50V			C7136	NCB21HK-223X	CAPACITOR	0.022μF,50V
			C4016	NDC21HJ-101X	CAPACITOR	100pF,50V			C7138	NDC21HJ-330X	CAPACITOR	33pF,50V
△			C5001	QFZ9073-683	F CAPACITOR	0.068μF,250V			C7164	NCB21HK-681X	CAPACITOR,J670EK/J770EU	680pF,50V
△			C5002	QFZ9051-333	F CAPACITOR	0.033μF,250V			C7166	NCB21HK-681X	CAPACITOR,J670EK/J770EU	680pF,50V
△			C5005	QCZ9071-222	CAPACITOR	0.0022μF,250V			C7202	QETJ0JM-477	E CAPACITOR	470μF,6.3V
			C5006	QEZ0375-686	E CAPACITOR	68μF,400V			L1	QQL29BJ-100Z	COIL	10μH
			C5101	QCZ0212-472	CAPACITOR	0.0047μF,1kV			L2	QQL29BJ-101Z	COIL	100μH
			C5102	QCZ0302-330Z	CAPACITOR	33pF,1kV			L3	QQL29BJ-100Z	COIL	10μH
			C5104	QETC1HM-105	E CAPACITOR	1μF,50V			L4	QQL29BJ-100Z	COIL	10μH
			C5105	QFLC1HJ-183Z	F CAPACITOR	0.018μF,50V			L5	QQL29BJ-100Z	COIL	10μH
			C5106	QCB1HJ-271	CAPACITOR	270pF,50V			L12	QQR0967-001	COIL	12μH
			C5107	QFV91HJ-104	F CAPACITOR	0.1μF,50V			L13	QQL071J-330Y	COIL	33μH
			C5201	QEMU0JM-227	E CAPACITOR	220μF,6.3V			L22	QQL231J-1R0Y	COIL	1μH
			C5202	QEMT1CM-827	E CAPACITOR	820μF,16V			L24	QQL071J-270Y	COIL	27μH
			C5203	QEMT1AM-128	E CAPACITOR	1200μF,10V			L27	QQL071J-330Y	COIL	33μH
			C5204	QETN2AM-475	E CAPACITOR	4.7μF,100V			L28	QQL071J-680Y	COIL	68μH
			C5205	QETN1HM-106	E CAPACITOR	10μF,50V			L201	QQL29BK-1R0Z	COIL	1μH
			C5207	QETN1CM-227	E CAPACITOR	220μF,16V			L202	QQL071J-330Y	COIL	33μH
			C5208	QETN1AM-227	E CAPACITOR	220μF,10V			L203	QQL29BJ-220Z	COIL	22μH
			C5301	QEMU0JM-227	E CAPACITOR	220μF,6.3V			L206	QQL071J-220Y	COIL	22μH
			C5303	QETN1CM-107	E CAPACITOR	100μF,16V			L2251	QQL29BJ-100Z	COIL	10μH
			C5304	QFLC1HJ-683Z	F CAPACITOR	0.068μF,50V			L2252	QQL29BJ-151Z	COIL	150μH
			C5305	NCB21HK-103X	CAPACITOR	0.01μF,50V			L5201	PELN1184	COIL	33μH
			C5306	QETN1AM-107	E CAPACITOR	100μF,10V			L5202	PELN1184	COIL	33μH
			C5307	QETN1EM-476	E CAPACITOR	47μF,25V			L6003	QQL29BJ-470Z	COIL	47μH
			C5308	QETN1CM-107	E CAPACITOR	100μF,16V			L7102	NQR0200-003X	FERRITE BEAD	
			C5309	QETN1CM-107	E CAPACITOR	100μF,16V			L7105	QQL231J-1R0Y	COIL	1μH
			C5310	QFLC1HJ-223Z	F CAPACITOR	0.022μF,50V			L7106	QQL231J-1R0Y	COIL	1μH
			C6007	QEK1CM-107	E CAPACITOR	100μF,16V			L7201	QQL01BJ-101Z	COIL	100μH
			C6012	QETJ1CM-107	E CAPACITOR	100μF,16V			X1	QAX0576-001Z	CRYSTAL RESONATOR	
			C6013	NCB21HK-103X	CAPACITOR	0.01μF,50V			X3001	QAX0445-001	CRYSTAL RESONATOR,J670EU/J770EU	
			C6020	NDC21HJ-101X	CAPACITOR	100pF,50V				QAX0444-001	CRYSTAL RESONATOR,J670EK/J770EK	
			C6021	NDC21HJ-101X	CAPACITOR	100pF,50V			X3002	QAX0527-001	CRYSTAL RESONATOR	
			C6022	NDC21HJ-101X	CAPACITOR	100pF,50V			S3001	QSW0602-004	PUSH SWITCH,REC SAFETY	
			C6032	NCB21EK-473X	CAPACITOR	0.047μF,25V			S7001	QSW0456-002Z	TACT SWITCH,STAN BY	
			C6037	QEKJ1HM-106	E CAPACITOR	10μF,50V			S7002	QSW0456-002Z	TACT SWITCH,TIMER	
			C6055	NDC21HJ-220X	CAPACITOR	22pF,50V			S7004	QSW0456-002Z	TACT SWITCH,CH-	

#	△	REF No.	PART No.	PART NAME, DESCRIPTION
			S7006	QSW0456-002Z TACT SWITCH,CH+
			S7008	QSW0456-002Z TACT SWITCH,PLAY,J770EK/J770EU
				QSW0456-002Z TACT SWITCH,SP/LP,J670EK/J670EU
			S7010	QSW0456-002Z TACT SWITCH,DISPLAY
			S7011	QSW0456-002Z TACT SWITCH,REC
			S7013	QSW0456-002Z TACT SWITCH,STOP/EJECT
			S7015	QSW0456-002Z TACT SWITCH,PAUSE
			S7016	QSW0456-002Z TACT SWITCH,REC LINK
			K2251	NRSA02J-0R0X MG RESISTOR 0Ω,1/10W
			K2252	NRSA02J-0R0X MG RESISTOR 0Ω,1/10W
			K2253	NRSA02J-0R0X MG RESISTOR 0Ω,1/10W
			K5101	QQR0678-001Z FERRITE BEAD
			PC3001	GP3S123 IC(PHOTO SENSOR
			PC3002	GP3S123 IC(PHOTO SENSOR
△			PC5101	PC123F2 PH COUPLER
			T2051	PELN0832 OSC TRANSFORMER
△			T5001	QQS0033-001 SW TRANSFORMER
			TU6001	QAU0150-001 TUNER
			DI7001	QLF0031-001 FL TUBE
			HD1	PQ35479-1-4 HOLDER(FDP)
△			HS1	LP40090-001A HEAT SINK,Q5101
△			TB1	LP20317-005A TERMINAL BOARD(PAL)
			ET1	PQ21623-2-5 EARTH PLATE(RF)
			OT1	QYTDST3006Z SCREW,Q5101
			OT2	PU59915-107 #500SPACER0.007,WR1
			SD1	LP30644-001A SHIELD CASE(PRE)
			WR1	QUB321-06A4A4 SIN TWIST WIRE
			FC5001	QNG0006-001Z FUSE CLIP
			FC5002	QNG0006-001Z FUSE CLIP
			J7101	PEMC1104 RGB21PIN SOCKET,AV1
			J7102	PEMC1104 RGB21PIN SOCKET,AV2
			J7103	QNN0292-003 PIN JACK,REAR OUT
			J7105	QNN0287-002 PIN JACK,FRONT IN,J670EK/J770EU/J770EK
△			LF5001	PELN1204-01-01 LINE FILTER
△			LF5002	QQR0978-001 LINE FILTER
			CN1	QGF1028C1-11 FPC CONNECTOR,(1-11)U.DRUM
			CN2001	QGF1207C1-07 FPC CONNECTOR,(1-7)A/C HEAD
			CN2002	QGB2532J1-02 CONNECTOR,(1-2)FE HEAD
			CN3001	QGF1207C1-05 FPC CONNECTOR,(1-5)DRUM MDA
			CN3002	QGB2532J1-02 CONNECTOR,(1-2)LOADING MOTOR
			CN3003	QGB2015M2-08 CONNECTOR,(1-8)CAPSTAN MOTOR
			CN3004	QGB2534J2-04 CONNECTOR,(1-4)ROTARY ENCODER
△			CN5001	QGA7901C3-02 CONNECTOR,(1-2)AC IN
			CN7003	QGF1207C1-09 FPC CONNECTOR,(1-9)FRONT
△			CP4001	ICP-N25 CIRCUIT PROTECTOR
△			CP5301	ICP-N38 CIRCUIT PROTECTOR
△			CP5302	ICP-N25 CIRCUIT PROTECTOR
△			F5001	QMF51E2-2R0J1 FUSE T2.0A,AC250V

AUDIO CONTROL HEAD BOARD ASSEMBLY <12>

PW1	LPA10010-01A1	A/C HEAD BOARD ASSY
CN1	QGF1208F1-07	FPC CONNECTOR

#	△	REF No.	PART No.	PART NAME, DESCRIPTION

DEMOD BOARD ASSEMBLY <14>

PW1	LPA10060-03B	DEMOD BOARD ASSY
IC6701	TDA9874AH/V2	IC
Q6701	2SC3936/BC-X	TRANSISTOR
R6701	NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R6703	NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
R6705	NRSA02J-100X	MG RESISTOR 10Ω,1/10W
R6706	NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R6708	NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
R6711	NRSA02J-822X	MG RESISTOR 8.2kΩ,1/10W
R6715	NRSA02J-100X	MG RESISTOR 10Ω,1/10W
R6716	NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R6717	NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R6719	NRSA02J-3R3X	MG RESISTOR 3.3Ω,1/10W
R6721	NRSA02J-392X	MG RESISTOR 3.9kΩ,1/10W
R6722	NRSA02J-472X	MG RESISTOR 4.7kΩ,1/10W
R6723	NRSA02J-470X	MG RESISTOR 47Ω,1/10W
R6724	NRSA02J-221X	MG RESISTOR 220Ω,1/10W
R6725	NRSA02J-101X	MG RESISTOR 100Ω,1/10W
R6726	NRSA02J-102X	MG RESISTOR 1kΩ,1/10W
C6701	QEKJ1HM-225	E CAPACITOR 2.2μF,50V
C6702	NCB21HK-682X	CAPACITOR 0.0068μF,50V
C6703	QEKJ1HM-225	E CAPACITOR 2.2μF,50V
C6704	NCB21HK-682X	CAPACITOR 0.0068μF,50V
C6705	NCF21CZ-474X	CAPACITOR 0.47μF,16V
C6706	NCF21CZ-474X	CAPACITOR 0.47μF,16V
C6713	NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
C6716	NCF21CZ-474X	CAPACITOR 0.47μF,16V
C6718	NCB21EK-224X	CAPACITOR 0.22μF,25V
C6719	NCB21HK-103X	CAPACITOR 0.01μF,50V
C6720	QEKJ1HM-105	E CAPACITOR 1μF,50V
C6722	NCF21CZ-474X	CAPACITOR 0.47μF,16V
C6723	NDC21HJ-101X	CAPACITOR 100pF,50V
C6724	NDC21HJ-101X	CAPACITOR 100pF,50V
C6728	NCB21HK-103X	CAPACITOR 0.01μF,50V
C6729	QEKJ1HM-225	E CAPACITOR 2.2μF,50V
C6730	QEKJ1CM-476	E CAPACITOR 47μF,16V
C6731	NRSA02J-0R0X	MG RESISTOR 0Ω,1/10W
C6732	NCB21HK-103X	CAPACITOR 0.01μF,50V
C6733	NCB21HK-222X	CAPACITOR 0.0022μF,50V
C6734	NCB21HK-103X	CAPACITOR 0.01μF,50V
L6702	QQL231J-1R0Y	COIL 1μH
L6703	QQL231J-3R3Y	COIL 3.3μH
X6701	QAX0560-001	CRYSTAL RESONATOR
K6701	NQR0200-003X	FERRITE BEAD
K6703	NQR0200-003X	FERRITE BEAD
K6704	NQR0200-003X	FERRITE BEAD
K6705	NQR0200-003X	FERRITE BEAD
K6706	NQR0200-003X	FERRITE BEAD
K6707	NQR0200-003X	FERRITE BEAD
CN6701	QGG2502K1-10	HEADER PIN

△ REF No. PART No. PART NAME, DESCRIPTION

△ REF No. PART No. PART NAME, DESCRIPTION

MINI OPE.BOARD ASSEMBLY(J670EK/J670EU)<28>

PW2	LPA10086-02D2	MINI OPE BOARD ASSY	
R7043	QRE141J-272Y	RESISTOR	2.7kΩ,1/4W
R7044	QRE141J-472Y	RESISTOR	4.7kΩ,1/4W
R7045	QRE141J-682Y	RESISTOR	6.8kΩ,1/4W
S7021	QSW0456-002Z	TACT SWITCH,REW	
S7022	QSW0456-002Z	TACT SWITCH,FF	
S7023	QSW0456-002Z	TACT SWITCH,PLAY	
CN7005	QGF1208C1-09	FPC CONNECTOR,(1-9)MAIN	

LOADING MOTOR BOARD ASSEMBLY <55>

PW2	LPA10010-01A2	LOADING MOTOR BOARD ASSY	
CN1	QGB2533K1-02	CONNECTOR	

SHUTTLE BOARD ASSMBLY (J770EK/J770EU)<85>

PW1	LPA20006-01A	SHUTTLE BOARD ASSY	
UN7001	QSW0845-001	JOG SHUTTLE SW	
CN7008	QGF1209F1-09	FPC CONNECTOR(1-9)MAIN	

R.PAUSE BOARD ASSEMBLY <91>

PW3	LPA10086-01D3	R.PAUSE BOARD ASSY	
R7166	NRSA02J-101X	MG RESISTOR	100Ω,1/10W
WR1	QUM022-18A4A4	PARA RIBON WIRE	
J7107	PU60612	MINI JACK	